



PRODUCT-DETAILS

2000/7 US-507

Flush Mounted Inserts Intermediate switch 10 A



General Information	
Extended Product Type	2000/7 US-507
Product ID	2CKA001012A2130
EAN	4011395075487
Catalog Description	Flush Mounted Inserts Intermediate switch 10 A
Long Description	Can be illuminated by using a Illumination set as an accessory. The Illumination set is powered by the connected load. Suitability and maximum current for Illumination sets by the connected load must be ensured.

Installation	
Instructions and Manuals	No document needed
Mounting Type	Flush Mounted
Type of Fastening	Mounting with Claw Mounting with Screw

Environmental	
Degree of Protection	IP20

Technical	
Data Sheet, Technical Information	No document needed
Function	Function lighting: Orientation
Number of Rocker Switches	1
Wiring Configuration	Intermediate switch
Actuator Type	Rocker/button
Connection Type	Plug Clamp
Illumination	Optional

Electrical	
Rated Voltage (U _r)	250 V
Rated Current (I _n)	10 A
Power Watt	LEDi / CFLi 100 W

Design	
Design Range	Basic55
Surface Finishing	Untreated Matt
Material	Thermoplastic Duroplast
RAL Number	RAL 5010 - Gentian Blue

Dimensions	
Product Net Width	71 mm
Product Net Height	71 mm
Product Net Depth / Length	40 mm
Product Net Weight	60 g
Built-In Depth (t ₂)	25 mm

Material Compliance	
RoHS Information	2CKA200000E0128
RoHS Status	Following EU Directive 2011/65/EU and Amendment 2015/863 July 22, 2019
REACH Declaration	2CKA309999E9999
REACH Information	False - does not contain substances > 0.1 mass percentage
REACH Date	20230825
Conflict Minerals Reporting Template (CMRT)	9AKK108468A3363

Certificates and Declarations	
Declaration of Conformity - CE	2CKA100000E0037

Classifications	
ETIM 9	EC001590 - Installation switch

eClass

V11.0 : 27144053

WEEE Category

5. Small Equipment (No External Dimension More Than 50 cm)

WEEE B2C / B2B

Business To Consumer

Accessories

Identifier	Description	Type	Quantity	Unit Of Measure
2CKA001751A3090	Rocker for Switch/push button, Single rocker platinum - alpha	1786-20-500	1	piece
2CKA001751A3086	Rocker for Switch/push button, Single rocker bronze - alpha	1786-21-500	1	piece
2CKA001751A3081	Rocker for Switch/push button, Single rocker ivory - alpha	1786-22G-500	1	piece
2CKA001751A3078	Rocker for Switch/push button, Single rocker studio white - alpha	1786-24G-500	1	piece
2CKA001751A3080	Rocker for Switch/push button, Single rocker palladium - alpha	1786-260-500	1	piece
2CKA001751A3085	Rocker for Switch/push button, Single rocker titanium - alpha	1786-266-500	1	piece
2CKA001753A9976	Mechanical Controls for Switch/push button, Single rocker ivory - impuls	1786-72-500	1	piece
2CKA001753A9977	Mechanical Controls for Switch/push button, Single rocker alpine white - impuls	1786-74-500	1	piece
2CKA001753A0007	Mechanical Controls for Switch/push button, Single rocker alpine white - impuls	1786-74-507	1	piece
2CKA001753A0182	Cover plate Symbol "light" for Switch/push button, Single rocker studio white matt - impuls	1786-774	1	piece
2CKA001753A0183	Mechanical Controls for Switch/push button, Single rocker studio white matt - impuls	1786-774-507	1	piece
2CKA001753A0153	Cover plate Symbol "light" for Switch/push button, Single rocker black matt - impuls	1786-775	1	piece
2CKA001753A0067	Cover plate for Switch/push button, Single rocker aluminium silver - impuls	1786-783	1	piece
2CKA001753A0008	Mechanical Controls for Switch/push button, Single rocker champagne metallic - impuls	1786-79-507	1	piece
2CKA001751A3093	Mechanical Controls for Switch/push button, Single rocker grey metallic - Platform 63	1786-803-500	1	piece
2CKA001751A3079	Mechanical Controls for Switch/push button, Single rocker anthracite - Platform 63	1786-81-500	1	piece
2CKA001751A3083	Accessories for Switch/push button, Single rocker ivory white - Platform 63	1786-82-500	1	piece
2CKA001751A3075	Accessories for Switch/push button, Single rocker aluminium silver - Platform 63	1786-83-500	1	piece
2CKA001751A3074	Accessories for Switch/push button, Single rocker studio white - Platform 63	1786-84-500	1	piece
2CKA001751A3077	Mechanical Controls for Switch/push button, Single rocker stainless steel - Pure Stainless Steel	1786-866-500	1	piece
2CKA001751A3089	Accessories for Switch/push button, Single rocker studio white matt - Platform 63	1786-884-500	1	piece
2CKA001751A3094	Accessories for Switch/push button, Single rocker black matt - Platform 63	1786-885-500	1	piece
2CKA001434A0448	Rocker with neutral symbol, screwable for Switch/push button, Single rocker white - Busch-Duro 2000 SI	2546-212	1	piece
2CKA001434A0554	Rocker with neutral symbol, screwable Neutral symbol for Switch/push button, Single rocker alpine white - Reflex SI	2546-214	1	piece
2CKA001731A2001	Accessories for Switch/push button, Single rocker white - Busch-Duro 2000 SI	2506-212-500	1	piece
2CKA001731A1889	Mechanical Controls for Switch/push button, Single rocker white - Busch-Duro 2000 SI	2506-212-507	1	piece
2CKA001731A1992	Accessories for Switch/push button, Single rocker alpine white - Reflex SI	2506-214-500	1	piece
2CKA001731A1891	Mechanical Controls for Switch/push button, Single rocker alpine white - Reflex SI	2506-214-507	1	piece

2CKA001731A1007	Mechanical Controls for Switch/push button, Single rocker black - Reflex SI	2506-215	1	piece
2CKA001731A4012	Rocker for Switch/push button, Single rocker red - Reflex SI	2506-217-101	1	piece
2CKA001731A4007	Rocker with labelling field for Switch/push button, Single rocker green - Platform 63	1764 NLI-13- 82	1	piece
2CKA001731A1858	Rocker with labelling field for Switch/push button, Single rocker ivory - alpha	1764 NLI-22G	1	piece
2CKA001731A1569	Rocker with labelling field for Switch/push button, Single rocker studio white - alpha	1764 NLI-24G	1	piece
2CKA001731A1975	Rocker with labelling field for Switch/push button, Single rocker grey metallic - Platform 63	1764 NLI-803	1	piece
2CKA001731A1552	Rocker with labelling field for Switch/push button, Single rocker anthracite - Platform 63	1764 NLI-81	1	piece
2CKA001731A1876	Rocker with labelling field for Switch/push button, Single rocker ivory white - Platform 63	1764 NLI-82	1	piece
2CKA001731A1948	Rocker with labelling field for Switch/push button, Single rocker aluminium silver - Platform 63	1764 NLI-83	1	piece
2CKA001731A1877	Rocker with labelling field for Switch/push button, Single rocker studio white - Platform 63	1764 NLI-84	1	piece
2CKA001731A1953	Rocker with labelling field for Switch/push button, Single rocker stainless steel - Pure Stainless Steel	1764 NLI-866	1	piece
2CKA001731A1985	Rocker with labelling field for Switch/push button, Single rocker studio white matt - Platform 63	1764 NLI-884	1	piece
2CKA001731A1982	Rocker with labelling field for Switch/push button, Single rocker black matt - Platform 63	1764 NLI-885	1	piece
2CKA001731A0355	Mechanical Controls with Red Calotte for Switch/push button, Single rocker white - Busch- Duro 2000 SI	2509-212-500	1	piece
2CKA001731A0900	Rocker with Red Calotte for Switch/push button, Single rocker alpine white - Reflex SI	2509-214	1	piece
2CKA001731A1995	Mechanical Controls with Red Calotte for Switch/push button, Single rocker alpine white - Reflex SI	2509-214-500	1	piece
2CKA001751A1625	Rocker with Small Red Calotte for Switch/push button, Single rocker platinum - alpha	1789-20	1	piece
2CKA001751A1716	Rocker with Small Red Calotte for Switch/push button, Single rocker bronze - alpha	1789-21	1	piece
2CKA001751A2490	Rocker with Small Red Calotte for Switch/push button, Single rocker ivory - alpha	1789-22G	1	piece
2CKA001751A2102	Rocker with Small Red Calotte for Switch/push button, Single rocker studio white - alpha	1789-24G	1	piece
2CKA001751A2825	Rocker with Small Red Calotte for Switch/push button, Single rocker palladium - alpha	1789-260	1	piece
2CKA001751A2836	Rocker with Small Red Calotte for Switch/push button, Single rocker titanium - alpha	1789-266	1	piece
2CKA001753A6547	Cover plate Symbol "key" with Small Red Calotte for Switch/push button, Single rocker alpine white - impuls	1789-74-101	1	piece
2CKA001753A0189	Cover plate Symbol "key" with Small Red Calotte for Switch/push button, Single rocker studio white matt - impuls	1789-774-101	1	piece
2CKA001753A0158	Cover plate Symbol "light" with Small Red Calotte for Switch/push button, Single rocker black matt - impuls	1789-775-101	1	piece
2CKA001753A0077	Cover plate with Small Red Calotte for Switch/push button, Single rocker aluminium silver - impuls	1789-783-101	1	piece
2CKA001753A6570	Cover plate with Small Red Calotte for Switch/push button, Single rocker champagne metallic - impuls	1789-79-101	1	piece
2CKA001751A3013	Rocker with Small Red Calotte for Switch/push button, Single rocker grey metallic - Platform 63	1789-803	1	piece
2CKA001751A2928	Rocker with Small Red Calotte for Switch/push button, Single rocker anthracite - Platform 63	1789-81	1	piece
2CKA001751A2813	Rocker with Small Red Calotte for Switch/push button, Single rocker ivory white - Platform 63	1789-82	1	piece

2CKA001751A2945	Rocker with Small Red Calotte for Switch/push button, Single rocker aluminium silver - Platform 63	1789-83	1	piece
2CKA001751A3091	Mechanical Controls with Small Red Calotte for Switch/push button, Single rocker studio white - Platform 63	1789-84-500	1	piece
2CKA001751A2957	Rocker with Small Red Calotte for Switch/push button, Single rocker stainless steel - Pure Stainless Steel	1789-866	1	piece
2CKA001751A3033	Rocker with Small Red Calotte for Switch/push button, Single rocker studio white matt - Platform 63	1789-884	1	piece
2CKA001751A3047	Rocker with Small Red Calotte for Switch/push button, Single rocker black matt - Platform 63	1789-885	1	piece
2CKA001731A0272	Rocker with legend Symbol "light" for Switch/push button, Single rocker white - Busch-Duro 2000 SI	2520 LI-212	1	piece
2CKA001731A1996	Mechanical Controls Symbol "light" for Switch/push button, Single rocker alpine white - Reflex SI	2520 LI-214-500	1	piece
2CKA001751A3185	Rocker for Switch/push button, Single rocker grey metallic - Platform 63	2520 LI-803	1	piece
2CKA001751A3186	Rocker with legend Symbol "light" for Switch/push button, Single rocker anthracite - Platform 63	2520 LI-81	1	piece
2CKA001751A3187	Rocker with legend Symbol "light" for Switch/push button, Single rocker ivory white - Platform 63	2520 LI-82	1	piece
2CKA001751A3188	Rocker with legend Symbol "light" for Switch/push button, Single rocker aluminium silver - Platform 63	2520 LI-83	1	piece
2CKA001751A3191	Rocker with legend Symbol "light" for Switch/push button, Single rocker stainless steel - Pure Stainless Steel	2520 LI-866	1	piece
2CKA001751A3192	Rocker with legend Symbol "light" for Switch/push button, Single rocker studio white matt - Platform 63	2520 LI-884	1	piece
2CKA001751A3193	Rocker with legend Symbol "light" for Switch/push button, Single rocker black matt - Platform 63	2520 LI-885	1	piece
2CKA001731A2000	Mechanical Controls for Switch/push button, Single rocker white - Busch-Duro 2000 SI	2520-212-500	1	piece
2CKA001731A1994	Mechanical Controls for Switch/push button, Single rocker alpine white - Reflex SI	2520-214-500	1	piece
2CKA001731A0561	Rocker with labelling field for Switch/push button, Single rocker white - Busch-Duro 2000 SI	2506 N-212	1	piece
2CKA001731A0520	Rocker with labelling field for Switch/push button, Single rocker alpine white - Reflex SI	2506 N-214	1	piece
2CKA001731A1445	Rocker with labelling field for Switch/push button, Single rocker white - Busch-Duro 2000 SI	2510 NLI-212	1	piece
2CKA001731A1452	Rocker with labelling field for Switch/push button, Single rocker alpine white - Reflex SI	2510 NLI-214	1	piece
2CKA001731A0330	Mechanical Controls Characters 0 and 1 for Switch/push button, Single rocker white - Busch-Duro 2000 SI	2502-212-500	1	piece
2CKA001731A0884	Rocker with legend Characters 0 and 1 for Switch/push button, Single rocker alpine white - Reflex SI	2502-214	1	piece
2CKA001434A0455	Rocker with legend Characters 0 and 1 with Red Calotte for Switch/push button, Single rocker white - Busch-Duro 2000 SI	2544-212	1	piece
2CKA001434A0570	Rocker with legend Characters 0 and 1; neutral symbol for Switch/push button, Single rocker alpine white - Reflex SI	2544-214	1	piece
2CKA001751A3146	Rocker with Small Transparent Calotte for Switch/push button, Single rocker grey metallic - Platform 63	1789 N-803	1	piece
2CKA001751A3147	Rocker with Small Transparent Calotte for Switch/push button, Single rocker anthracite - Platform 63	1789 N-81	1	piece
2CKA001751A3148	Rocker with Small Transparent Calotte for Switch/push button, Single rocker ivory white - Platform 63	1789 N-82	1	piece

2CKA001751A3149	Rocker with Small Transparent Calotte for Switch/push button, Single rocker aluminium silver - Platform 63	1789 N-83	1	piece
2CKA001751A3151	Mechanical Controls with Small Transparent Calotte for Switch/push button, Single rocker studio white - Platform 63	1789 N-84-500	1	piece
2CKA001751A3152	Rocker with Small Transparent Calotte for Switch/push button, Single rocker stainless steel - Pure Stainless Steel	1789 N-866	1	piece
2CKA001751A3153	Rocker with Small Transparent Calotte for Switch/push button, Single rocker studio white matt - Platform 63	1789 N-884	1	piece
2CKA001751A3154	Rocker with Small Transparent Calotte for Switch/push button, Single rocker black matt - Platform 63	1789 N-885	1	piece
2CKA001751A1633	Rocker with legend Symbol "light" with Small Transparent Calotte for Switch/push button, Single rocker platinum - alpha	1789 LI-20	1	piece
2CKA001751A1724	Rocker with legend Symbol "light" with Small Transparent Calotte for Switch/push button, Single rocker bronze - alpha	1789 LI-21	1	piece
2CKA001751A2516	Rocker with legend Symbol "light" with Small Transparent Calotte for Switch/push button, Single rocker ivory - alpha	1789 LI-22G	1	piece
2CKA001751A2201	Rocker with legend Symbol "light" with Small Transparent Calotte for Switch/push button, Single rocker studio white - alpha	1789 LI-24G	1	piece
2CKA001751A2828	Rocker with legend Symbol "light" with Small Transparent Calotte for Switch/push button, Single rocker palladium - alpha	1789 LI-260	1	piece
2CKA001751A2839	Rocker with legend Symbol "light" with Small Transparent Calotte for Switch/push button, Single rocker titanium - alpha	1789 LI-266	1	piece
2CKA001753A4815	Cover plate with legend Symbol "light" with Small Transparent Calotte for Switch/push button, Single rocker alpine white - impuls	1789 LI-74	1	piece
2CKA001753A0187	Cover plate with legend Symbol "light" with Small Transparent Calotte for Switch/push button, Single rocker studio white matt - impuls	1789 LI-774	1	piece
2CKA001753A0156	Cover plate with legend Symbol "light" with Small Transparent Calotte for Switch/push button, Single rocker black matt - impuls	1789 LI-775	1	piece
2CKA001753A0073	Cover plate with legend Symbol "light" with Small Transparent Calotte for Switch/push button, Single rocker aluminium silver - impuls	1789 LI-783	1	piece
2CKA001753A5291	Cover plate with legend Symbol "light" with Small Transparent Calotte for Switch/push button, Single rocker champagne metallic - impuls	1789 LI-79	1	piece
2CKA001751A3014	Rocker with legend Symbol "light" with Small Transparent Calotte for Switch/push button, Single rocker grey metallic - Platform 63	1789 LI-803	1	piece
2CKA001751A2931	Rocker with legend Symbol "light" with Small Transparent Calotte for Switch/push button, Single rocker anthracite - Platform 63	1789 LI-81	1	piece
2CKA001751A2745	Rocker with legend Symbol "light" with Small Transparent Calotte for Switch/push button, Single rocker ivory white - Platform 63	1789 LI-82	1	piece
2CKA001751A2951	Rocker with legend Symbol "light" with Small Transparent Calotte for Switch/push button, Single rocker aluminium silver - Platform 63	1789 LI-83	1	piece
2CKA001751A3084	Mechanical Controls Symbol "light" with Small Transparent Calotte for Switch/push button, Single rocker studio white - Platform 63	1789 LI-84-500	1	piece
2CKA001751A2958	Rocker with legend Symbol "light" with Small Transparent Calotte for Switch/push button, Single rocker stainless steel - Pure Stainless Steel	1789 LI-866	1	piece
2CKA001751A3031	Rocker with legend Symbol "light" with Small Transparent Calotte for Switch/push button, Single rocker studio white matt - Platform 63	1789 LI-884	1	piece

2CKA001751A3045	Rocker with legend Symbol "light" with Small Transparent Calotte for Switch/push button, Single rocker black matt - Platform 63	1789 LI-885	1	piece
2CKA001731A4011	Rocker with labelling field for Switch/push button, Single rocker red - Platform 63	1764 NLI-12-82-101	1	piece
2CKA001751A1674	Rocker Characters 0 and 1 with Small Red Calotte for Switch/push button, Single rocker platinum - alpha	1788-20	1	piece
2CKA001751A1765	Rocker with legend Characters 0 and 1 with Small Red Calotte for Switch/push button, Single rocker bronze - alpha	1788-21	1	piece
2CKA001751A2557	Rocker Characters 0 and 1 with Small Red Calotte for Switch/push button, Single rocker ivory - alpha	1788-22G	1	piece
2CKA001751A2326	Rocker Characters 0 and 1 with Small Red Calotte for Switch/push button, Single rocker studio white - alpha	1788-24G	1	piece
2CKA001751A2823	Rocker Characters 0 and 1 with Small Red Calotte for Switch/push button, Single rocker palladium - alpha	1788-260	1	piece
2CKA001751A2834	Rocker Characters 0 and 1 with Small Red Calotte for Switch/push button, Single rocker titanium - alpha	1788-266	1	piece
2CKA001751A3017	Rocker Characters 0 and 1 with Small Red Calotte for Switch/push button, Single rocker grey metallic - Platform 63	1788-803	1	piece
2CKA001751A2927	Rocker Characters 0 and 1 with Small Red Calotte for Switch/push button, Single rocker anthracite - Platform 63	1788-81	1	piece
2CKA001751A2742	Rocker Characters 0 and 1 with Small Red Calotte for Switch/push button, Single rocker ivory white - Platform 63	1788-82	1	piece
2CKA001751A2954	Rocker with legend Characters 0 and 1 with Small Red Calotte for Switch/push button, Single rocker aluminium silver - Platform 63	1788-83	1	piece
2CKA001751A2750	Rocker Characters 0 and 1 with Small Red Calotte for Switch/push button, Single rocker studio white - Platform 63	1788-84	1	piece
2CKA001751A2961	Rocker Characters 0 and 1 with Small Red Calotte for Switch/push button, Single rocker stainless steel - Pure Stainless Steel	1788-866	1	piece
2CKA001751A3028	Rocker Characters 0 and 1 with Small Red Calotte for Switch/push button, Single rocker studio white matt - Platform 63	1788-884	1	piece
2CKA001751A3042	Rocker Characters 0 and 1 with Small Red Calotte for Switch/push button, Single rocker black matt - Platform 63	1788-885	1	piece
2CKA001751A1690	Rocker with legend Heizung with Small Red Calotte for Switch/push button, Single rocker platinum - alpha	1789 H-20	1	piece
2CKA001751A1781	Rocker with legend Heizung with Small Red Calotte for Switch/push button, Single rocker bronze - alpha	1789 H-21	1	piece
2CKA001751A2573	Rocker with legend Heizung with Small Red Calotte for Switch/push button, Single rocker ivory - alpha	1789 H-22G	1	piece
2CKA001751A2375	Rocker with legend Heizung with Small Red Calotte for Switch/push button, Single rocker studio white - alpha	1789 H-24G	1	piece
2CKA001751A2826	Rocker with legend Heizung with Small Red Calotte for Switch/push button, Single rocker palladium - alpha	1789 H-260	1	piece
2CKA001751A2837	Rocker with legend Heizung with Small Red Calotte for Switch/push button, Single rocker titanium - alpha	1789 H-266	1	piece
2CKA001753A0068	Cover plate with labelling field with Small Red Calotte for Switch/push button, Single rocker ivory - impuls	1789 H-72-101	1	piece
2CKA001753A6588	Cover plate with labelling field with Small Red Calotte for Switch/push button, Single rocker alpine white - impuls	1789 H-74-101	1	piece

2CKA001753A0184	Cover plate with labelling field with Small Red Calotte for Switch/push button, Single rocker studio white matt - impuls	1789 H-774-101	1	piece
2CKA001753A0154	Cover plate with labelling field with Small Red Calotte for Switch/push button, Single rocker black matt - impuls	1789 H-775-101	1	piece
2CKA001753A0069	Cover plate with labelling field with Small Red Calotte for Switch/push button, Single rocker aluminium silver - impuls	1789 H-783-101	1	piece
2CKA001753A6612	Cover plate with labelling field with Small Red Calotte for Switch/push button, Single rocker champagne metallic - impuls	1789 H-79-101	1	piece
2CKA001751A3019	Rocker with legend Heizung with Small Red Calotte for Switch/push button, Single rocker grey metallic - Platform 63	1789 H-803	1	piece
2CKA001751A2929	Rocker with legend Heizung with Small Red Calotte for Switch/push button, Single rocker anthracite - Platform 63	1789 H-81	1	piece
2CKA001751A2743	Rocker with legend Heizung with Small Red Calotte for Switch/push button, Single rocker ivory white - Platform 63	1789 H-82	1	piece
2CKA001751A2955	Rocker with legend Heizung with Small Red Calotte for Switch/push button, Single rocker aluminium silver - Platform 63	1789 H-83	1	piece
2CKA001751A2751	Rocker with legend Heizung with Small Red Calotte for Switch/push button, Single rocker studio white - Platform 63	1789 H-84	1	piece
2CKA001751A2963	Rocker with legend Heizung with Small Red Calotte for Switch/push button, Single rocker stainless steel - Pure Stainless Steel	1789 H-866	1	piece
2CKA001751A3029	Rocker with legend Heizung with Small Red Calotte for Switch/push button, Single rocker studio white matt - Platform 63	1789 H-884	1	piece
2CKA001751A3043	Rocker with legend Heizung with Small Red Calotte for Switch/push button, Single rocker black matt - Platform 63	1789 H-885	1	piece
2CKA001784A0545	Illumination set Switch/push button Orange Neon lamp 230 V red	8350	1	piece
2CKA001784A0560	Illumination set Switch/push button Orange Neon lamp 230 V yellow	8352	1	piece
2CKA001784A0578	Illumination set Switch/push button Orange Neon lamp 230 V white	8353	1	piece
2CKA001784A0552	Illumination set Switch/push button Orange Neon lamp 230 V red	8360	1	piece
2CKA001784A0586	Illumination set Switch/push button Orange Neon lamp 230 V yellow	8362	1	piece
2CKA001784A0594	Illumination set Switch/push button Orange Neon lamp 230 V white	8363	1	piece
2CKA001784A0024	Illumination set Switch/push button White Incandescent lamp 3 ... 8 V - ocean	8333-1	1	piece
2CKA001784A0032	Illumination set Switch/push button White Incandescent lamp 24 V	8337-1	1	piece
2CKA001784A0164	Illumination set Switch/push button White Incandescent lamp 8 V	8344-1	1	piece
2CKA001784A0289	Illumination set Switch/push button White Incandescent lamp 12 V	8345-1	1	piece
2CKA001754A4373	Cover frame 1gang platinum - alpha exclusive	1721 KA-20	1	piece
2CKA001754A4382	Cover frame 1gang bronze - alpha exclusive	1721 KA-21	1	piece
2CKA001754A2965	Cover frame 1gang studio white - alpha exclusive	1721 KA-24G	1	piece
2CKA001754A4509	Cover frame 1gang titanium - alpha exclusive	1721 KA-266-500	1	piece
2CKA001754A4516	Cover frame 1gang white - Busch-Duro 2000 SI	1721 NS-212-500	1	piece
2CKA001754A4496	Cover frame 1gang alpine white - Reflex SI	1721 NS-214-500	1	piece
2CKA001754A4093	Cover frame with labelling field, horizontal 1gang white - Busch-Duro 2000 SI Linear	1721 NSKA-212	1	piece
2CKA001754A4497	Cover frame 1gang alpine white - Reflex SI Linear	1721 NSKA-214-500	1	piece

2CKA001754A4065	Cover frame with labelling field, horizontal 1gang studio white - alpha exclusive	1721 NSKA- 24G	1	piece
2CKA001754A4713	Cover frame 1gang red - future linear	1721-12-182K- 101	1	piece
2CKA001754A4240	Cover frame 1gang anthracite - future linear	1721-181K	1	piece
2CKA001754A4168	Cover frame 1gang ivory white - future	1721-182	1	piece
2CKA001754A4506	Cover frame 1gang ivory white - future linear	1721-182K-500	1	piece
2CKA001754A4529	Cover frame 1gang aluminium silver - future linear	1721-183K-500	1	piece
2CKA001754A4173	Cover frame 1gang studio white - future	1721-184	1	piece
2CKA001754A4527	Cover frame 1gang studio white - future linear	1721-184 NSK- 500	1	piece
2CKA001754A4504	Cover frame 1gang studio white - future	1721-184-500	1	piece
2CKA001754A4498	Cover frame 1gang studio white	1721-184K-500	1	piece
2CKA001754A4521	Cover frame 1gang platinum - alpha nea	1721-20-500	1	piece
2CKA001754A4522	Cover frame 1gang bronze - alpha nea	1721-21-500	1	piece
2CKA001754A4775	Cover frame 1gang glass purple - Busch-axcent pur	1721-223	1	piece
2CKA001754A4760	Cover frame 1gang glass sun - Busch-axcent pur	1721-225	1	piece
2CKA001754A4770	Cover frame 1gang glass avocado - Busch-axcent pur	1721-226	1	piece
2CKA001754A4765	Cover frame 1gang glass coral - Busch-axcent pur	1721-227	1	piece
2CKA001754A4755	Cover frame 1gang glass ocean - Busch-axcent pur	1721-228	1	piece
2CKA001754A4780	Cover frame 1gang glass oyster - Busch-axcent pur	1721-229	1	piece
2CKA001754A4512	Cover frame 1gang ivory - alpha nea	1721-22G-500	1	piece
2CKA001754A4790	Cover frame 1gang paper brown - Busch-axcent pur	1721-243	1	piece
2CKA001754A4800	Cover frame 1gang glass black - Busch-axcent pur	1721-245	1	piece
2CKA001754A4785	Cover frame 1gang paper blue - Busch-axcent pur	1721-248	1	piece
2CKA001754A4503	Cover frame 1gang studio white - alpha nea	1721-24G-500	1	piece
2CKA001754A4391	Cover frame 1gang titanium - alpha nea	1721-266	1	piece
2CKA001754A4688	Cover frame 1gang platinum - Busch-axcent pur	1721-270-500	1	piece
2CKA001754A4708	Cover frame 1gang black matt - Busch-axcent pur	1721-275-500	1	piece
2CKA001754A4698	Cover frame 1gang titanium - Busch-axcent pur	1721-276-500	1	piece
2CKA001754A4437	Cover frame 1gang white glass - Busch-axcent pur	1721-280	1	piece
2CKA001754A4409	Cover frame 1gang black - Busch-axcent	1721-281	1	piece
2CKA001754A4331	Cover frame 1gang studio white - Busch-axcent	1721-284	1	piece
2CKA001754A4334	Cover frame 1gang yellow - Busch-axcent	1721-285	1	piece
2CKA001754A4337	Cover frame 1gang green - Busch-axcent	1721-286	1	piece
2CKA001754A4340	Cover frame 1gang red - Busch-axcent	1721-287	1	piece
2CKA001754A4343	Cover frame 1gang blue - Busch-axcent	1721-288	1	piece
2CKA001754A4805	Cover frame 1gang slate grey - Busch-axcent pur	1721-290	1	piece
2CKA001754A4471	Cover frame 1gang entrée grey - Busch-axcent	1721-291-500	1	piece
2CKA001754A4795	Cover frame 1gang concrete grey - Busch-axcent pur	1721-298	1	piece
2CKA001754A4535	Cover frame 1-gang(s) chrome matt - solo	1721-80-500	1	piece
2CKA001754A4538	Cover frame 1-gang(s) chrome gloss - solo	1721-80G-500	1	piece
2CKA001754A4442	Cover frame 1-gang(s) white glass - carat	1721-811	1	piece
2CKA001754A4820	Cover frame 1-gang(s) porcelain anthracite - carat	1721-815	1	piece
2CKA001754A4258	Cover frame 1-gang(s) bronze - carat	1721-821	1	piece
2CKA001754A4356	Cover frame 1-gang(s) gold - carat	1721-823-101	1	piece
2CKA001754A4322	Cover frame 1-gang(s) glass black - carat	1721-825	1	piece
2CKA001754A4360	Cover frame 1-gang(s) chrome - carat	1721-826-101	1	piece
2CKA001754A4605	Cover frame 1-gang(s) anthracite - Busch- Dynasty	1721-831-500	1	piece
2CKA001754A4600	Cover frame 1-gang(s) ivory white - Busch- Dynasty	1721-832-500	1	piece
2CKA001754A4575	Cover frame 1-gang(s) polished brass decor anthracite - Busch-Dynasty	1721-833-500	1	piece

2CKA001754A4565	Cover frame 1-gang(s) polished brass anthracite - Busch-Dynasty	1721-835-500	1	piece
2CKA001754A4570	Cover frame 1-gang(s) polished brass decor ivory white - Busch-Dynasty	1721-836-500	1	piece
2CKA001754A4560	Cover frame 1-gang(s) polished brass ivory white - Busch-Dynasty	1721-838-500	1	piece
2CKA001754A4595	Cover frame 1-gang(s) antique brass decor anthracite - Busch-Dynasty	1721-843-500	1	piece
2CKA001754A4536	Cover frame 1-gang(s) studio white - solo	1721-84-500	1	piece
2CKA001754A4585	Cover frame 1-gang(s) antique brass anthracite - Busch-Dynasty	1721-845-500	1	piece
2CKA001754A4590	Cover frame 1-gang(s) antique brass decor ivory white - Busch-Dynasty	1721-846-500	1	piece
2CKA001754A4580	Cover frame 1-gang(s) antique brass ivory white - Busch-Dynasty	1721-848-500	1	piece
2CKA001754A4254	Cover frame 1-gang(s) stainless steel - carat	1721-860	1	piece
2CKA001754A4500	Cover frame 1-gang(s) stainless steel - Pure Stainless Steel	1721-866K-500	1	piece
2CKA001754A4531	Cover frame 1gang studio white matt - future linear	1721-884K-500	1	piece
2CKA001754A4532	Cover frame 1gang black matt - future linear	1721-885K-500	1	piece
2CKA001754A4374	Cover frame 2gang platinum - alpha exclusive	1722 KA-20	1	piece
2CKA001754A4383	Cover frame 2gang bronze - alpha exclusive	1722 KA-21	1	piece
2CKA001754A43849	Cover frame 2gang ivory - alpha exclusive	1722 KA-22G	1	piece
2CKA001754A2999	Cover frame 2gang studio white - alpha exclusive	1722 KA-24G	1	piece
2CKA001754A4523	Cover frame 2gang titanium - alpha exclusive	1722 KA-266-500	1	piece
2CKA001754A2239	Cover frame with labelling field, vertical 2gang white - Busch-Duro 2000 SI	1722 NS-212	1	piece
2CKA001754A2163	Cover frame with labelling field, vertical 2gang alpine white - Reflex SI	1722 NS-214	1	piece
2CKA001754A4094	Cover frame with labelling field, vertical 2gang white - Busch-Duro 2000 SI Linear	1722 NSKA-212	1	piece
2CKA001754A4059	Cover frame with labelling field, vertical 2gang alpine white - Reflex SI Linear	1722 NSKA-214	1	piece
2CKA001754A4066	Cover frame with labelling field, horizontal 2gang studio white - alpha exclusive	1722 NSKA-24G	1	piece
2CKA001754A4714	Cover frame 2gang red - future linear	1722-12-182K-101	1	piece
2CKA001754A4241	Cover frame 2gang anthracite - future linear	1722-181K	1	piece
2CKA001754A4169	Cover frame 2gang ivory white - future	1722-182	1	piece
2CKA001754A4231	Cover frame 2gang ivory white - future linear	1722-182K	1	piece
2CKA001754A4530	Cover frame 2gang aluminium silver - future linear	1722-183K-500	1	piece
2CKA001754A4174	Cover frame 2gang studio white - future	1722-184	1	piece
2CKA001754A4508	Cover frame 2gang studio white - future	1722-184-500	1	piece
2CKA001754A4499	Cover frame 2gang studio white - future linear	1722-184K-500	1	piece
2CKA001754A4524	Cover frame 2gang platinum - alpha nea	1722-20-500	1	piece
2CKA001754A1710	Cover frame 2gang bronze - alpha nea	1722-21	1	piece
2CKA001754A4776	Cover frame 2gang glass purple - Busch-axcent pur	1722-223	1	piece
2CKA001754A4761	Cover frame 2gang glass sun - Busch-axcent pur	1722-225	1	piece
2CKA001754A4771	Cover frame 2gang glass avocado - Busch-axcent pur	1722-226	1	piece
2CKA001754A4766	Cover frame 2gang glass coral - Busch-axcent pur	1722-227	1	piece
2CKA001754A4756	Cover frame 2gang glass ocean - Busch-axcent pur	1722-228	1	piece
2CKA001754A4781	Cover frame 2gang glass oyster - Busch-axcent pur	1722-229	1	piece
2CKA001754A3799	Cover frame 2gang ivory - alpha nea	1722-22G	1	piece
2CKA001754A4791	Cover frame 2gang paper brown - Busch-axcent pur	1722-243	1	piece
2CKA001754A4801	Cover frame 2gang glass black - Busch-axcent pur	1722-245	1	piece
2CKA001754A4786	Cover frame 2gang paper blue - Busch-axcent pur	1722-248	1	piece

2CKA001754A4511	Cover frame 2gang studio white - alpha nea	1722-24G-500	1	piece
2CKA001754A4392	Cover frame 2gang titanium - alpha nea	1722-266	1	piece
2CKA001754A4689	Cover frame 2gang platinum - Busch-axcent pur	1722-270-500	1	piece
2CKA001754A4709	Cover frame 2gang black matt - Busch-axcent pur	1722-275-500	1	piece
2CKA001754A4699	Cover frame 2gang titanium - Busch-axcent pur	1722-276-500	1	piece
2CKA001754A4438	Cover frame 2gang white glass - Busch-axcent pur	1722-280	1	piece
2CKA001754A4410	Cover frame 2gang black - Busch-axcent	1722-281	1	piece
2CKA001754A4332	Cover frame 2gang studio white - Busch-axcent	1722-284	1	piece
2CKA001754A4335	Cover frame 2gang yellow - Busch-axcent	1722-285	1	piece
2CKA001754A4338	Cover frame 2gang green - Busch-axcent	1722-286	1	piece
2CKA001754A4341	Cover frame 2gang red - Busch-axcent	1722-287	1	piece
2CKA001754A4344	Cover frame 2gang blue - Busch-axcent	1722-288	1	piece
2CKA001754A4806	Cover frame 2gang slate grey - Busch-axcent pur	1722-290	1	piece
2CKA001754A4472	Cover frame 2gang entrée grey - Busch-axcent	1722-291-500	1	piece
2CKA001754A4796	Cover frame 2gang concrete grey - Busch-axcent pur	1722-298	1	piece
2CKA001754A4482	Cover frame 2gang maison-beige - Busch-axcent	1722-299-500	1	piece
2CKA001754A4537	Cover frame 2-gang(s) chrome matt - solo	1722-80-500	1	piece
2CKA001754A4327	Cover frame 2-gang(s) chrome gloss - solo	1722-80G	1	piece
2CKA001754A4443	Cover frame 2-gang(s) white glass - carat	1722-811	1	piece
2CKA001754A4821	Cover frame 2-gang(s) porcelain anthracite - carat	1722-815	1	piece
2CKA001754A4259	Cover frame 2-gang(s) bronze - carat	1722-821	1	piece
2CKA001754A4357	Cover frame 2-gang(s) gold - carat	1722-823-101	1	piece
2CKA001754A4323	Cover frame 2-gang(s) glass black - carat	1722-825	1	piece
2CKA001754A4361	Cover frame 2-gang(s) chrome - carat	1722-826-101	1	piece
2CKA001754A4606	Cover frame 2-gang(s) anthracite - Busch-Dynasty	1722-831-500	1	piece
2CKA001754A4601	Cover frame 2-gang(s) ivory white - Busch-Dynasty	1722-832-500	1	piece
2CKA001754A4576	Cover frame 2-gang(s) polished brass decor anthracite - Busch-Dynasty	1722-833-500	1	piece
2CKA001754A4566	Cover frame 2-gang(s) polished brass anthracite - Busch-Dynasty	1722-835-500	1	piece
2CKA001754A4571	Cover frame 2-gang(s) polished brass decor ivory white - Busch-Dynasty	1722-836-500	1	piece
2CKA001754A4561	Cover frame 2-gang(s) polished brass ivory white - Busch-Dynasty	1722-838-500	1	piece
2CKA001754A4596	Cover frame 2-gang(s) antique brass decor anthracite - Busch-Dynasty	1722-843-500	1	piece
2CKA001754A4539	Cover frame 2-gang(s) studio white - solo	1722-84-500	1	piece
2CKA001754A4586	Cover frame 2-gang(s) antique brass anthracite - Busch-Dynasty	1722-845-500	1	piece
2CKA001754A4591	Cover frame 2-gang(s) antique brass decor ivory white - Busch-Dynasty	1722-846-500	1	piece
2CKA001754A4581	Cover frame 2-gang(s) antique brass ivory white - Busch-Dynasty	1722-848-500	1	piece
2CKA001754A4255	Cover frame 2-gang(s) stainless steel - carat	1722-860	1	piece
2CKA001754A4501	Cover frame 2-gang(s) stainless steel - Pure Stainless Steel	1722-866K-500	1	piece
2CKA001754A4415	Cover frame 2gang studio white matt - future linear	1722-884K	1	piece
2CKA001754A4534	Cover frame 2gang black matt - future linear	1722-885K-500	1	piece
2CKA001754A4376	Cover frame 3gang platinum - alpha exclusive	1723 KA-20	1	piece
2CKA001754A4385	Cover frame 3gang bronze - alpha exclusive	1723 KA-21	1	piece
2CKA001754A3856	Cover frame 3gang ivory - alpha exclusive	1723 KA-22G	1	piece
2CKA001754A3021	Cover frame 3gang studio white - alpha exclusive	1723 KA-24G	1	piece
2CKA001754A4118	Cover frame 3gang palladium - alpha exclusive	1723 KA-260	1	piece
2CKA001754A4127	Cover frame 3gang titanium - alpha exclusive	1723 KA-266	1	piece
2CKA001754A3708	Cover frame with labelling field, vertical 3gang white - Busch-Duro 2000 SI	1723 NS-212	1	piece
2CKA001754A3724	Cover frame with labelling field, vertical 3gang alpine white - Reflex SI	1723 NS-214	1	piece

2CKA001754A4096	Cover frame with labelling field, vertical 3gang white - Busch-Duro 2000 SI Linear	1723 NSKA- 212	1	piece
2CKA001754A4061	Cover frame with labelling field, vertical 3gang alpine white - Reflex SI Linear	1723 NSKA- 214	1	piece
2CKA001754A4068	Cover frame with labelling field, horizontal 3gang studio white - alpha exclusive	1723 NSKA- 24G	1	piece
2CKA001754A4242	Cover frame 3gang anthracite - future linear	1723-181K	1	piece

Categories

Low Voltage Products and Systems → Wiring Accessories - Light Switch Ranges → Flush Mounted Inserts → Mechanical Inserts



Product image
not available