



PRODUCT-DETAILS

1721-838-500

Cover frame 1-gang(s) polished brass ivory white - Busch-Dynasty



General Information	
Extended Product Type	1721-838-500
Product ID	2CKA001754A4560
EAN	4011395194782
Catalog Description	Cover frame 1-gang(s) polished brass ivory white - Busch-Dynasty
Long Description	For vertical or horizontal installation.

Installation	
Instructions and Manuals	No document needed
Mounting Type	Flush Mounted
Type of Fastening	Clamp
Mounting Orientation	Horizontal Vertical

Environmental	
Degree of Protection	IP20

Technical	
Data Sheet, Technical Information	No document needed
Number of Gangs	1

Design	
Design Range	Busch-Dynasty Platform 63
Surface Finishing	Electroplated Glossy
Material	Metal
Material Details	Genuine Metal Surface
Label Space Provided	No
Color	polished brass ivory white

Dimensions	
Product Net Width	106 mm
Product Net Height	106 mm
Product Net Depth / Length	12 mm
Product Net Weight	205 g

Material Compliance	
RoHS Information	2CKA200000E2881
RoHS Status	Following EU Directive 2011/65/EU and Amendment 2015/863 July 22, 2019
REACH Declaration	2CKA309999E9999
REACH Information	False - does not contain substances > 0.1 mass percentage
REACH Date	20230825
Conflict Minerals Reporting Template (CMRT)	9AKK108468A3363

Certificates and Declarations	
Declaration of Conformity - CE	No declaration needed

Classifications	
ETIM 9	EC000007 - Cover frame for domestic switching devices
eClass	V11.0 : 27144001
WEEE Category	Product Not in WEEE Scope

Accessories			
Identifier	Description	Type Quantity	Unit Of Measure

2CKA001582A0346	Cover plate with labelling field Busch-Infoline® 1 gang studio white - Platform 63	1571 CN-84	1	piece
2CKA001582A0348	Cover plate with labelling field Busch-Infoline® 1 gang Clear studio white - Platform 63	1572 CN-84	1	piece
2CKA001582A0350	Cover plate with labelling field Busch-Infoline® studio white - Platform 63	1573 CN-84	1	piece
2CKA001582A0353	Cover plate with labelling field Busch-Infoline® studio white - Platform 63	1575 CN-84	1	piece
2CKA001582A0355	Cover plate with labelling field Busch-Infoline® studio white - Platform 63	1576 CN-84	1	piece
2CKA001731A1921	Cover Busch-Infolicht® anthracite - Platform 63	1716-81	1	piece
2CKA001731A1922	Cover Busch-Infolicht® ivory white - Platform 63	1716-82	1	piece
2CKA001731A1950	Cover Busch-Infolicht® aluminium silver - Platform 63	1716-83	1	piece
2CKA001731A1923	Cover Busch-Infolicht® studio white - Platform 63	1716-84	1	piece
2CKA001731A1978	Cover Busch-Infolicht® studio white matt - Platform 63	1716-884	1	piece
2CKA001731A1980	Cover Busch-Infolicht® black matt - Platform 63	1716-885	1	piece
2CKA001731A1914	Rocker open for red pull button calotte for Pull- cord switch, Pull cord anthracite - Platform 63	1720-81	1	piece
2CKA001731A1915	Rocker open for red pull button calotte for Pull- cord switch, Pull cord ivory white - Platform 63	1720-82	1	piece
2CKA001731A1949	Rocker open for red pull button calotte for Pull- cord switch, Pull cord aluminium silver - Platform 63	1720-83	1	piece
2CKA001731A1916	Rocker open for red pull button calotte for Pull- cord switch, Pull cord studio white - Platform 63	1720-84	1	piece
2CKA001731A1979	Rocker open for red pull button calotte for Pull- cord switch, Pull cord studio white matt - Platform 63	1720-884	1	piece
2CKA001731A1981	Rocker open for red pull button calotte for Pull- cord switch, Pull cord black matt - Platform 63	1720-885	1	piece
2CKA001710A4120	Cover plate with legend Level switch Turn button anthracite - Platform 63	1740 DR/03-81	1	piece
2CKA001710A3807	Cover plate with legend Level switch Turn button ivory white - Platform 63	1740 DR/03-82	1	piece
2CKA001710A3811	Cover plate with legend Level switch Turn button aluminium silver - Platform 63	1740 DR/03-83	1	piece
2CKA001710A3808	Cover plate with legend Level switch Turn button studio white - Platform 63	1740 DR/03- 84	1	piece
2CKA001710A3870	Cover plate with legend Level switch Turn button studio white matt - Platform 63	1740 DR/03- 884	1	piece
2CKA001710A3892	Cover plate with legend Level switch Turn button black matt - Platform 63	1740 DR/03- 885	1	piece
2CKA001710A4122	Mechanical Controls Symbol "2-1-3" for Level switch, Turn button anthracite - Platform 63	1740 DRL-81- 503	1	piece
2CKA001710A3511	Mechanical Controls Symbol "2-1-3" for Level switch, Turn button ivory white - Platform 63	1740 DRL-82- 503	1	piece
2CKA001710A4123	Mechanical Controls Symbol "2-1-3" for Level switch, Turn button aluminium silver - Platform 63	1740 DRL-83- 503	1	piece
2CKA001710A3512	Cover plate Symbol "2-1-3" for Level switch, Turn button studio white - Platform 63	1740 DRL-84- 503	1	piece
2CKA001710A3871	Mechanical Controls Symbol "2-1-3" for Level switch, Turn button studio white matt - Platform 63	1740 DRL-884- 503	1	piece
2CKA001710A3893	Mechanical Controls Symbol "2-1-3" for Level switch, Turn button black matt - Platform 63	1740 DRL-885- 503	1	piece

2CKA001710A3623	Cover plate with legend Symbol "arrows" for Venetian blind, Turn button anthracite - Platform 63	1740-81	1	piece
2CKA001710A3154	Cover plate with legend Symbol "arrows" for Venetian blind, Turn button ivory white - Platform 63	1740-82	1	piece
2CKA001710A3661	Cover plate with legend Symbol "arrows" for Venetian blind, Turn button aluminium silver - Platform 63	1740-83	1	piece
2CKA001710A3172	Cover plate with legend Symbol "arrows" for Venetian blind, Turn button studio white - Platform 63	1740-84	1	piece
2CKA001710A3872	Cover plate with legend Symbol "arrows" for Venetian blind, Turn button studio white matt - Platform 63	1740-884	1	piece
2CKA001710A3894	Cover plate with legend Symbol "arrows" for Venetian blind, Turn button black matt - Platform 63	1740-885	1	piece
2CKA001710A3612	Cover plate Blind cap with Mounting plate anthracite - Platform 63	1742-81	1	piece
2CKA001710A3143	Cover plate Blind cap with Mounting plate ivory white - Platform 63	1742-82	1	piece
2CKA001710A3664	Cover plate Blind cap with Mounting plate aluminium silver - Platform 63	1742-83	1	piece
2CKA001710A3161	Cover plate Blind cap with Mounting plate studio white - Platform 63	1742-84	1	piece
2CKA001710A3991	Cable Outlet / Blank Plate / Adapter Ring Blind cap with Mounting plate studio white - Platform 63	1742-84-500	1	piece
2CKA001710A3873	Cover plate Blind cap with Mounting plate studio white matt - Platform 63	1742-884	1	piece
2CKA001710A3895	Cover plate Blind cap with Mounting plate black matt - Platform 63	1742-885	1	piece
2CKA001724A4365	Cover plate SAT 4 gang anthracite - Platform 63	1743/10-04-81	1	piece
2CKA001724A4366	Cover plate SAT 4 gang ivory white - Platform 63	1743/10-04-82	1	piece
2CKA001724A4367	Cover plate SAT 4 gang aluminium silver - Platform 63	1743/10-04-83	1	piece
2CKA001724A4368	Cover plate SAT 4 gang studio white - Platform 63	1743/10-04-84	1	piece
2CKA001724A4370	Cover plate TV / Radio / 2x SAT 4 gang studio white matt - Platform 63	1743/10-04-884	1	piece
2CKA001724A4371	Cover plate SAT 4 gang black matt - Platform 63	1743/10-04-885	1	piece
2CKA001724A4374	Cover plate SAT 4 gang anthracite - Platform 63	1743-04-81	1	piece
2CKA001724A4375	Cover plate TV / Radio / 2x SAT 4 gang ivory white - Platform 63	1743-04-82	1	piece
2CKA001724A4376	Cover plate SAT 4 gang aluminium silver - Platform 63	1743-04-83	1	piece
2CKA001724A4377	Cover plate TV / Radio / 2x SAT 4 gang studio white - Platform 63	1743-04-84	1	piece
2CKA001724A4379	Cover plate TV / Radio / 2x SAT 4 gang studio white matt - Platform 63	1743-04-884	1	piece
2CKA001724A4380	Cover plate SAT 4 gang black matt - Platform 63	1743-04-885	1	piece
2CKA001724A4252	Cover plate SAT 3 gang anthracite - Platform 63	1743-81	1	piece
2CKA001724A2758	Cover plate SAT 3 gang ivory white - Platform 63	1743-82	1	piece
2CKA001724A4262	Cover plate SAT 3 gang aluminium silver - Platform 63	1743-83	1	piece

2CKA001724A4332	Data / Telecommunication / Antenna SAT 3 gang studio white - Platform 63	1743-84-500	1	piece
2CKA001724A4293	Cover plate SAT 3 gang studio white matt - Platform 63	1743-884	1	piece
2CKA001724A4298	Cover plate SAT 3 gang black matt - Platform 63	1743-885	1	piece
2CKA001710A3624	Cover plate telephone connector boxes (VDo) anthracite - Platform 63	1745-81	1	piece
2CKA001710A3155	Cover plate telephone connector boxes (VDo) ivory white - Platform 63	1745-82	1	piece
2CKA001710A3675	Cover plate telephone connector boxes (VDo) aluminium silver - Platform 63	1745-83	1	piece
2CKA001710A3173	Cover plate Busch-Infoline® telephone connector boxes (VDo) Central cover plate studio white - Platform 63	1745-84	1	piece
2CKA001710A3874	Cover plate telephone connector boxes (VDo) studio white matt - Platform 63	1745-884	1	piece
2CKA001710A3896	Cover plate telephone connector boxes (VDo) black matt - Platform 63	1745-885	1	piece
2CKA001710A3628	Cover plate Telecommunication inserts 50 x 50 mm anthracite - Platform 63	1746/10-81	1	piece
2CKA001710A3521	Cover plate Telecommunication inserts 50 x 50 mm ivory white - Platform 63	1746/10-82	1	piece
2CKA001710A3677	Cover plate Telecommunication inserts 50 x 50 mm aluminium silver - Platform 63	1746/10-83	1	piece
2CKA001710A3993	Data / Telecommunication / Antenna Telecommunication inserts 0 gang studio white - Platform 63	1746/10-84-500	1	piece
2CKA001710A3875	Cover plate Telecommunication inserts 50 x 50 mm studio white matt - Platform 63	1746/10-884	1	piece
2CKA001710A3897	Cover plate Telecommunication inserts 50 x 50 mm black matt - Platform 63	1746/10-885	1	piece
2CKA001710A3618	Cover plate with Hinged Lid Telecommunication inserts 50 x 50 mm anthracite - Platform 63	1746-81	1	piece
2CKA001710A3149	Cover plate with Hinged Lid Telecommunication inserts 50 x 50 mm ivory white - Platform 63	1746-82	1	piece
2CKA001710A3678	Cover plate with Hinged Lid Telecommunication inserts 50 x 50 mm aluminium silver - Platform 63	1746-83	1	piece
2CKA001710A3167	Cover plate with Hinged Lid Telecommunication inserts 50 x 50 mm studio white - Platform 63	1746-84	1	piece
2CKA001710A3876	Cover plate with Hinged Lid Telecommunication inserts 50 x 50 mm studio white matt - Platform 63	1746-884	1	piece
2CKA001710A3898	Cover plate with Hinged Lid Telecommunication inserts 50 x 50 mm black matt - Platform 63	1746-885	1	piece
2CKA001710A4093	Intermediate Ring for cover plates Busch-Balance® SI anthracite - Platform 63	1747 BSI-81	1	piece
2CKA001710A4094	Intermediate Ring for cover plates Busch-Balance® SI ivory white - Platform 63	1747 BSI-82	1	piece
2CKA001710A4095	Intermediate Ring for cover plates Busch-Balance® SI aluminium silver - Platform 63	1747 BSI-83	1	piece
2CKA001710A4096	Intermediate Ring for cover plates Busch-Balance® SI studio white - Platform 63	1747 BSI-84	1	piece
2CKA001710A4098	Intermediate Ring for cover plates Busch-Balance® SI studio white matt - Platform 63	1747 BSI-884	1	piece
2CKA001710A4099	Intermediate Ring for cover plates Busch-Balance® SI black matt - Platform 63	1747 BSI-885	1	piece

2CKA001710A3862	Intermediate Ring Cover plates Busch-Duro 2000® SI and Reflex SI ivory white - Platform 63	1747 SI-82	1	piece
2CKA001710A3863	Intermediate Ring Cover plates Busch-Duro 2000® SI and Reflex SI studio white - Platform 63	1747 SI-84	1	piece
2CKA001710A3860	Intermediate Ring ivory white - Platform 63	1747-82	1	piece
2CKA001710A3861	Intermediate Ring studio white - Platform 63	1747-84	1	piece
2CKA001710A3614	Cover plate Cable outlet with Mounting plate anthracite - Platform 63	1749-81	1	piece
2CKA001710A3145	Cover plate Cable outlet with Mounting plate ivory white - Platform 63	1749-82	1	piece
2CKA001710A3665	Cover plate Cable outlet with Mounting plate aluminium silver - Platform 63	1749-83	1	piece
2CKA001710A3163	Cover plate Cable outlet studio white - Platform 63	1749-84	1	piece
2CKA001710A3878	Cover plate Cable outlet with Mounting plate studio white matt - Platform 63	1749-884	1	piece
2CKA001710A3900	Cover plate Cable outlet with Mounting plate black matt - Platform 63	1749-885	1	piece
2CKA001710A3626	Cover plate with legend Symbol "arrows" or "0 - 1" for Venetian blind, Key anthracite - Platform 63	1755 SL/PZ-81-101	1	piece
2CKA001710A3157	Cover plate with legend Symbol "arrows" or "0 - 1" for Venetian blind, Key ivory white - Platform 63	1755 SL/PZ-82-101	1	piece
2CKA001710A3662	Cover plate with legend Symbol "arrows" or "0 - 1" for Venetian blind, Key aluminium silver - Platform 63	1755 SL/PZ-83-101	1	piece
2CKA001710A3175	Cover plate with legend Symbol "arrows" or "0 - 1" for Venetian blind, Key studio white - Platform 63	1755 SL/PZ-84-101	1	piece
2CKA001710A3925	Cover plate with legend Symbol "arrows" or "0 - 1" for Venetian blind, Key studio white matt - Platform 63	1755 SL/PZ-884-101	1	piece
2CKA001710A3902	Cover plate with legend Symbol "arrows" or "0 - 1" for Venetian blind, Key black matt - Platform 63	1755 SL/PZ-885-101	1	piece
2CKA001724A4253	Cover plate with labelling field For data connection housing anthracite - Platform 63	1758-81	1	piece
2CKA001724A2759	Cover plate with labelling field For data connection housing ivory white - Platform 63	1758-82	1	piece
2CKA001724A4263	Cover plate with labelling field For data connection housing aluminium silver - Platform 63	1758-83	1	piece
2CKA001724A2761	Cover plate with labelling field For data connection housing studio white - Platform 63	1758-84	1	piece
2CKA001724A4307	Cover plate with labelling field For data connection housing studio white matt - Platform 63	1758-884	1	piece
2CKA001724A4299	Cover plate with labelling field For data connection housing black matt - Platform 63	1758-885	1	piece
2CKA001731A3998	Rocker with labelling field and legend Symbol "bell" for Switch/push button, Single rocker anthracite - Platform 63	1764 NLI/KI-81	1	piece
2CKA001731A3999	Rocker with labelling field and legend Symbol "bell" for Switch/push button, Single rocker ivory white - Platform 63	1764 NLI/KI-82	1	piece
2CKA001731A4000	Rocker with labelling field and legend Symbol "bell" for Switch/push button, Single rocker aluminium silver - Platform 63	1764 NLI/KI-83	1	piece
2CKA001731A4002	Rocker with labelling field and legend Symbol "bell" for Switch/push button, Single rocker studio white - Platform 63	1764 NLI/KI-84-500	1	piece

2CKA001731A4004	Rocker with labelling field and legend Symbol "bell" for Switch/push button, Single rocker studio white matt - Platform 63	1764 NLI/KI-884	1	piece
2CKA001731A4005	Rocker with labelling field and legend Symbol "bell" for Switch/push button, Single rocker black matt - Platform 63	1764 NLI/KI-885	1	piece
2CKA001731A4011	Rocker with labelling field for Switch/push button, Single rocker red - Platform 63	1764 NLI-12-82-101	1	piece
2CKA001731A4007	Rocker with labelling field for Switch/push button, Single rocker green - Platform 63	1764 NLI-13-82	1	piece
2CKA001731A1552	Rocker with labelling field for Switch/push button, Single rocker anthracite - Platform 63	1764 NLI-81	1	piece
2CKA001731A1876	Rocker with labelling field for Switch/push button, Single rocker ivory white - Platform 63	1764 NLI-82	1	piece
2CKA001731A1948	Rocker with labelling field for Switch/push button, Single rocker aluminium silver - Platform 63	1764 NLI-83	1	piece
2CKA001731A1877	Rocker with labelling field for Switch/push button, Single rocker studio white - Platform 63	1764 NLI-84	1	piece
2CKA001731A1985	Rocker with labelling field for Switch/push button, Single rocker studio white matt - Platform 63	1764 NLI-884	1	piece
2CKA001731A1982	Rocker with labelling field for Switch/push button, Single rocker black matt - Platform 63	1764 NLI-885	1	piece
2CKA001710A3613	Cover plate TAE; UAE / TAE; USB / VGA / HDMI / loudspeaker 1 gang anthracite - Platform 63	1766-81	1	piece
2CKA001710A3144	Cover plate TAE; UAE / TAE; USB / VGA / HDMI / loudspeaker 1 gang ivory white - Platform 63	1766-82	1	piece
2CKA001710A3659	Cover plate TAE; UAE / TAE; USB / VGA / HDMI / loudspeaker 1 gang aluminium silver - Platform 63	1766-83	1	piece
2CKA001710A3992	Data / Telecommunication / Antenna TAE; UAE / TAE; USB / VGA / HDMI / loudspeaker 0 gang studio white - Platform 63	1766-84-500	1	piece
2CKA001710A3926	Cover plate TAE; UAE / TAE; USB / VGA / HDMI / loudspeaker 1 gang studio white matt - Platform 63	1766-884	1	piece
2CKA001710A3903	Cover plate TAE; UAE / TAE; USB / VGA / HDMI / loudspeaker 1 gang black matt - Platform 63	1766-885	1	piece
2CKA001753A0255	Cover plate with legend 1 ... 15 Min for Time switch, Turn button anthracite - Platform 63	1770-81-103	1	piece
2CKA001753A0256	Cover plate with legend 1 ... 15 Min for Time switch, Turn button ivory white - Platform 63	1770-82-103	1	piece
2CKA001753A0257	Cover plate with legend 1 ... 15 Min for Time switch, Turn button aluminium silver - Platform 63	1770-83-103	1	piece
2CKA001753A0258	Cover plate with legend 1 ... 15 Min for Time switch, Turn button studio white - Platform 63	1770-84-103	1	piece
2CKA001753A0260	Cover plate with legend 1 ... 15 Min for Time switch, Turn button studio white matt - Platform 63	1770-884-103	1	piece
2CKA001753A0261	Cover plate with legend 1 ... 15 Min for Time switch, Turn button black matt - Platform 63	1770-885-103	1	piece
2CKA001753A0265	Cover plate with legend 10 ... 120 Min for Time switch, Turn button anthracite - Platform 63	1771-81-103	1	piece
2CKA001753A0266	Cover plate with legend 10 ... 120 Min for Time switch, Turn button ivory white - Platform 63	1771-82-103	1	piece

2CKA001753A0267	Cover plate with legend 10 ... 120 Min for Time switch, Turn button aluminium silver - Platform 63	1771-83-103	1	piece
2CKA001753A0301	Cover plate with legend 10 ... 120 Min for Time switch, Turn button studio white - Platform 63	1771-84-103	1	piece
2CKA001753A0303	Cover plate with legend 10 ... 120 Min for Time switch, Turn button studio white matt - Platform 63	1771-884-103	1	piece
2CKA001753A0304	Cover plate with legend 10 ... 120 Min for Time switch, Turn button black matt - Platform 63	1771-885-103	1	piece
2CKA001751A2977	Multimedia Devices anthracite	1785 ENO-81	1	piece
2CKA001751A2978	Multimedia Devices ivory white	1785 ENO-82	1	piece
2CKA001751A2979	Multimedia Devices aluminium silver	1785 ENO-83	1	piece
2CKA001751A2980	Multimedia Devices studio white	1785 ENO-84	1	piece
2CKA001751A3101	Rocker with legend Symbol "arrows" 2 gang(s), for Venetian blind, Two-part rocker ivory white - Platform 63	1785 JA/02-82	1	piece
2CKA001751A3097	Rocker with legend Symbol "arrows" 2 gang(s), for Venetian blind, Two-part rocker aluminium silver - Platform 63	1785 JA/02-83	1	piece
2CKA001751A3099	Rocker with legend Symbol "arrows" 2 gang(s), for Venetian blind, Two-part rocker studio white - Platform 63	1785 JA/02-84	1	piece
2CKA001751A3103	Rocker with legend Symbol "arrows" 2 gang(s), for Venetian blind, Two-part rocker studio white matt - Platform 63	1785 JA/02-884	1	piece
2CKA001751A3105	Rocker with legend Symbol "arrows" 2 gang(s), for Venetian blind, Two-part rocker black matt - Platform 63	1785 JA/02-885	1	piece
2CKA001751A2934	Rocker with legend Symbol "arrows" 2 gang(s), for Venetian blind, Two-part rocker anthracite - Platform 63	1785 JA-81	1	piece
2CKA001751A2748	Rocker with legend Symbol "arrows" 2 gang(s), for Venetian blind, Two-part rocker ivory white - Platform 63	1785 JA-82	1	piece
2CKA001751A2944	Rocker with legend Symbol "arrows" 2 gang(s), for Venetian blind, Two-part rocker aluminium silver - Platform 63	1785 JA-83	1	piece
2CKA001751A3088	Accessories Symbol "arrows" 2 gang(s), for Venetian blind, Two-part rocker studio white - Platform 63	1785 JA-84-500	1	piece
2CKA001751A3022	Rocker with legend Symbol "arrows" 2 gang(s), for Venetian blind, Two-part rocker studio white matt - Platform 63	1785 JA-884	1	piece
2CKA001751A3036	Rocker with legend Symbol "arrows" 2 gang(s), for Venetian blind, Two-part rocker black matt - Platform 63	1785 JA-885	1	piece
2CKA001751A3122	Mechanical Controls with Small Transparent Calotte for Switch/push button, Two-part rocker anthracite - Platform 63	1785 K-81-500	1	piece
2CKA001751A3124	Mechanical Controls with Small Transparent Calotte for Switch/push button, Two-part rocker ivory white - Platform 63	1785 K-82-500	1	piece
2CKA001751A3126	Mechanical Controls with Small Transparent Calotte for Switch/push button, Two-part rocker aluminium silver - Platform 63	1785 K-83-500	1	piece
2CKA001751A3131	Mechanical Controls with Small Transparent Calotte for Switch/push button, Two-part rocker antique brass - Platform 63	1785 K-840-500	1	piece
2CKA001751A3128	Mechanical Controls with Small Transparent Calotte for Switch/push button, Two-part rocker studio white - Platform 63	1785 K-84-500	1	piece

2CKA001751A3135	Mechanical Controls with Small Transparent Calotte for Switch/push button, Two-part rocker studio white matt - Platform 63	1785 K-884-500	1	piece
2CKA001751A3137	Mechanical Controls with Small Transparent Calotte for Switch/push button, Two-part rocker black matt - Platform 63	1785 K-885-500	1	piece
2CKA001751A3212	Rocker with legend DND, MUR 1gang for Switch/push button Two-part rocker anthracite - Platform 63	1785/11 K-81	1	piece
2CKA001751A3214	Rocker with legend DND, MUR 1gang for Switch/push button Two-part rocker ivory white - Platform 63	1785/11 K-82	1	piece
2CKA001751A3210	Rocker with legend DND, MUR 1gang for Switch/push button Two-part rocker aluminium silver - Platform 63	1785/11 K-83	1	piece
2CKA001751A3209	Rocker with legend DND, MUR 1gang for Switch/push button Two-part rocker studio white - Platform 63	1785/11 K-84	1	piece
2CKA001751A3211	Rocker with legend DND, MUR 1gang for Switch/push button Two-part rocker studio white matt - Platform 63	1785/11 K-884	1	piece
2CKA001751A3213	Rocker with legend DND, MUR 1gang for Switch/push button Two-part rocker black matt - Platform 63	1785/11 K-885	1	piece
2CKA001751A3205	Rocker with legend DND, MUR for Switch/push button, Two-part rocker anthracite - Platform 63	1785/11-81	1	piece
2CKA001751A2991	Rocker with legend DND, MUR for Switch/push button, Two-part rocker ivory white - Platform 63	1785/11-82	1	piece
2CKA001751A2995	Rocker with legend DND, MUR for Switch/push button, Two-part rocker aluminium silver - Platform 63	1785/11-83	1	piece
2CKA001751A2992	Rocker with legend DND, MUR for Switch/push button, Two-part rocker studio white - Platform 63	1785/11-84	1	piece
2CKA001751A3023	Rocker with legend DND, MUR for Switch/push button, Two-part rocker studio white matt - Platform 63	1785/11-884	1	piece
2CKA001751A3037	Rocker with legend DND, MUR for Switch/push button, Two-part rocker black matt - Platform 63	1785/11-885	1	piece
2CKA001751A2930	Rocker for Switch/push button, Two-part rocker anthracite - Platform 63	1785-81	1	piece
2CKA001751A2744	Rocker for Switch/push button, Two-part rocker ivory white - Platform 63	1785-82	1	piece
2CKA001751A2942	Rocker for Switch/push button, Two-part rocker aluminium silver - Platform 63	1785-83	1	piece
2CKA001751A3092	Accessories for Switch/push button, Two-part rocker aluminium silver - Platform 63	1785-83-500	1	piece
2CKA001751A3076	Accessories for Switch/push button, Two-part rocker studio white - Platform 63	1785-84-500	1	piece
2CKA001751A3024	Rocker for Switch/push button, Two-part rocker studio white matt - Platform 63	1785-884	1	piece
2CKA001751A3038	Rocker for Switch/push button, Two-part rocker black matt - Platform 63	1785-885	1	piece
2CKA001751A2965	Multimedia Devices anthracite	1786 ENO-81	1	piece
2CKA001751A2966	Multimedia Devices ivory white	1786 ENO-82	1	piece
2CKA001751A2967	Multimedia Devices aluminium silver	1786 ENO-83	1	piece
2CKA001751A2968	Multimedia Devices studio white	1786 ENO-84	1	piece
2CKA001751A3100	Rocker with legend Symbol "arrows" for Venetian blind, Single rocker ivory white - Platform 63	1786 JA/02-82	1	piece

2CKA001751A3096	Rocker with legend Symbol "arrows" for Switch/push button, aluminium silver - 1786 JA/02-83 Platform 63		1	piece
2CKA001751A3098	Rocker with legend Symbol "arrows" for Venetian blind, Single rocker studio white - 1786 JA/02-84 Platform 63		1	piece
2CKA001751A3102	Rocker with legend Symbol "arrows" for Venetian blind, Single rocker studio white matt - Platform 63	1786 JA/02-884	1	piece
2CKA001751A3104	Rocker with legend Symbol "arrows" black matt - Platform 63	1786 JA/02-885	1	piece
2CKA001751A3207	Rocker with legend DND for Switch/push button, Single rocker anthracite - Platform 63	1786/11-81	1	piece
2CKA001751A2997	Rocker with legend DND for Switch/push button, Single rocker ivory white - Platform 63	1786/11-82	1	piece
2CKA001751A3001	Rocker with legend DND for Switch/push button, Single rocker aluminium silver - Platform 63	1786/11-83	1	piece
2CKA001751A2998	Rocker with legend DND for Switch/push button, Single rocker studio white - Platform 63	1786/11-84	1	piece
2CKA001751A3026	Rocker with legend DND for Switch/push button, Single rocker studio white matt - Platform 63	1786/11-884	1	piece
2CKA001751A3040	Rocker with legend DND for Switch/push button, Single rocker black matt - Platform 63	1786/11-885	1	piece
2CKA001751A3145	Rocker for Switch/push button, Single rocker red - Platform 63	1786-12-82	1	piece
2CKA001751A3079	Mechanical Controls for Switch/push button, Single rocker anthracite - Platform 63	1786-81-500	1	piece
2CKA001751A3083	Accessories for Switch/push button, Single rocker ivory white - Platform 63	1786-82-500	1	piece
2CKA001751A3075	Accessories for Switch/push button, Single rocker aluminium silver - Platform 63	1786-83-500	1	piece
2CKA001751A3074	Accessories for Switch/push button, Single rocker studio white - Platform 63	1786-84-500	1	piece
2CKA001751A3089	Accessories for Switch/push button, Single rocker studio white matt - Platform 63	1786-884-500	1	piece
2CKA001751A3094	Accessories for Switch/push button, Single rocker black matt - Platform 63	1786-885-500	1	piece
2CKA001751A2927	Rocker Characters 0 and 1 with Small Red Calotte for Switch/push button, Single rocker anthracite - Platform 63	1788-81	1	piece
2CKA001751A2742	Rocker Characters 0 and 1 with Small Red Calotte for Switch/push button, Single rocker ivory white - Platform 63	1788-82	1	piece
2CKA001751A2954	Rocker with legend Characters 0 and 1 with Small Red Calotte for Switch/push button, Single rocker aluminium silver - Platform 63	1788-83	1	piece
2CKA001751A2750	Rocker Characters 0 and 1 with Small Red Calotte for Switch/push button, Single rocker studio white - Platform 63	1788-84	1	piece
2CKA001751A3028	Rocker Characters 0 and 1 with Small Red Calotte for Switch/push button, Single rocker studio white matt - Platform 63	1788-884	1	piece
2CKA001751A3042	Rocker Characters 0 and 1 with Small Red Calotte for Switch/push button, Single rocker black matt - Platform 63	1788-885	1	piece
2CKA001751A2929	Rocker with legend Heizung with Small Red Calotte for Switch/push button, Single rocker anthracite - Platform 63	1789 H-81	1	piece

2CKA001751A2743	Rocker with legend Heizung with Small Red Calotte for Switch/push button, Single rocker ivory white - Platform 63	1789 H-82	1	piece
2CKA001751A2955	Rocker with legend Heizung with Small Red Calotte for Switch/push button, Single rocker aluminium silver - Platform 63	1789 H-83	1	piece
2CKA001751A2751	Rocker with legend Heizung with Small Red Calotte for Switch/push button, Single rocker studio white - Platform 63	1789 H-84	1	piece
2CKA001751A3029	Rocker with legend Heizung with Small Red Calotte for Switch/push button, Single rocker studio white matt - Platform 63	1789 H-884	1	piece
2CKA001751A3043	Rocker with legend Heizung with Small Red Calotte for Switch/push button, Single rocker black matt - Platform 63	1789 H-885	1	piece
2CKA001751A2932	Rocker with legend Symbol "bell" with Small Transparent Calotte for Switch/push button, Single rocker anthracite - Platform 63	1789 KI-81	1	piece
2CKA001751A2746	Rocker with legend Symbol "bell" with Small Transparent Calotte for Switch/push button, Single rocker ivory white - Platform 63	1789 KI-82	1	piece
2CKA001751A2952	Rocker with legend Symbol "key" with Small Transparent Calotte for Switch/push button, Single rocker aluminium silver - Platform 63	1789 KI-83	1	piece
2CKA001751A2754	Rocker with legend Symbol "bell" with Small Transparent Calotte for Switch/push button, Single rocker studio white - Platform 63	1789 KI-84	1	piece
2CKA001751A3030	Rocker with legend Symbol "bell" with Small Transparent Calotte for Switch/push button, Single rocker studio white matt - Platform 63	1789 KI-884	1	piece
2CKA001751A3044	Rocker with legend Symbol "bell" with Small Transparent Calotte for Switch/push button, Single rocker black matt - Platform 63	1789 KI-885	1	piece
2CKA001751A2931	Rocker with legend Symbol "light" with Small Transparent Calotte for Switch/push button, Single rocker anthracite - Platform 63	1789 LI-81	1	piece
2CKA001751A2745	Rocker with legend Symbol "light" with Small Transparent Calotte for Switch/push button, Single rocker ivory white - Platform 63	1789 LI-82	1	piece
2CKA001751A2951	Rocker with legend Symbol "light" with Small Transparent Calotte for Switch/push button, Single rocker aluminium silver - Platform 63	1789 LI-83	1	piece
2CKA001751A3084	Mechanical Controls Symbol "light" with Small Transparent Calotte for Switch/push button, Single rocker studio white - Platform 63	1789 LI-84-500	1	piece
2CKA001751A3031	Rocker with legend Symbol "light" with Small Transparent Calotte for Switch/push button, Single rocker studio white matt - Platform 63	1789 LI-884	1	piece
2CKA001751A3045	Rocker with legend Symbol "light" with Small Transparent Calotte for Switch/push button, Single rocker black matt - Platform 63	1789 LI-885	1	piece
2CKA001751A3147	Rocker with Small Transparent Calotte for Switch/push button, Single rocker anthracite - Platform 63	1789 N-81	1	piece
2CKA001751A3148	Rocker with Small Transparent Calotte for Switch/push button, Single rocker ivory white - Platform 63	1789 N-82	1	piece
2CKA001751A3149	Rocker with Small Transparent Calotte for Switch/push button, Single rocker aluminium silver - Platform 63	1789 N-83	1	piece
2CKA001751A3151	Mechanical Controls with Small Transparent Calotte for Switch/push button, Single rocker studio white - Platform 63	1789 N-84-500	1	piece

2CKA001751A3153	Rocker with Small Transparent Calotte for Switch/push button, Single rocker studio white matt - Platform 63	1789 N-884	1	piece
2CKA001751A3154	Rocker with Small Transparent Calotte for Switch/push button, Single rocker black matt - Platform 63	1789 N-885	1	piece
2CKA001751A3157	Rocker with legend Symbol "plug" with Small Transparent Calotte for Switch/push button, Single rocker anthracite - Platform 63	1789 ST-81	1	piece
2CKA001751A3158	Rocker with legend Symbol "plug" with Small Transparent Calotte for Switch/push button, Single rocker ivory white - Platform 63	1789 ST-82	1	piece
2CKA001751A3159	Rocker with legend Symbol "plug" with Small Transparent Calotte for Switch/push button, Single rocker aluminium silver - Platform 63	1789 ST-83	1	piece
2CKA001751A3161	Mechanical Controls Various symbols with Small Transparent Calotte for Switch/push button, Single rocker studio white - Platform 63	1789 ST-84-500	1	piece
2CKA001751A3163	Rocker with legend Symbol "plug" with Small Transparent Calotte for Switch/push button, Single rocker studio white matt - Platform 63	1789 ST-884	1	piece
2CKA001751A3164	Rocker with legend Symbol "plug" with Small Transparent Calotte for Switch/push button, Single rocker black matt - Platform 63	1789 ST-885	1	piece
2CKA001751A2933	Rocker with legend Symbol "key" with Small Transparent Calotte for Switch/push button, Single rocker anthracite - Platform 63	1789 TR-81	1	piece
2CKA001751A2747	Rocker with legend Symbol "key" with Small Transparent Calotte for Switch/push button, Single rocker ivory white - Platform 63	1789 TR-82	1	piece
2CKA001751A2953	Rocker with legend Symbol "key" with Small Transparent Calotte for Switch/push button, Single rocker aluminium silver - Platform 63	1789 TR-83	1	piece
2CKA001751A2755	Rocker with legend Symbol "key" with Small Transparent Calotte for Switch/push button, Single rocker studio white - Platform 63	1789 TR-84	1	piece
2CKA001751A3032	Rocker with legend Symbol "key" with Small Transparent Calotte for Switch/push button, Single rocker studio white matt - Platform 63	1789 TR-884	1	piece
2CKA001751A3046	Rocker with legend Symbol "key" with Small Transparent Calotte for Switch/push button, Single rocker black matt - Platform 63	1789 TR-885	1	piece
2CKA001751A2928	Rocker with Small Red Calotte for Switch/push button, Single rocker anthracite - Platform 63	1789-81	1	piece
2CKA001751A2813	Rocker with Small Red Calotte for Switch/push button, Single rocker ivory white - Platform 63	1789-82	1	piece
2CKA001751A2945	Rocker with Small Red Calotte for Switch/push button, Single rocker aluminium silver - Platform 63	1789-83	1	piece
2CKA001751A3091	Mechanical Controls with Small Red Calotte for Switch/push button, Single rocker studio white - Platform 63	1789-84-500	1	piece
2CKA001751A3033	Rocker with Small Red Calotte for Switch/push button, Single rocker studio white matt - Platform 63	1789-884	1	piece
2CKA001751A3047	Rocker with Small Red Calotte for Switch/push button, Single rocker black matt - Platform 63	1789-885	1	piece
2CKA001710A4111	Cover plate studio white - Platform 63	1790-590-84	1	piece
2CKA001710A4112	Cover plate studio white - Platform 63	1790-591-84	1	piece
2CKA001710A4113	Cover plate studio white - Platform 63	1790-592-84	1	piece
2CKA001710A4114	Cover plate studio white - Platform 63	1790-593-84	1	piece
2CKA001710A4115	Cover plate studio white - Platform 63	1790-594-84	1	piece

2CKA001710A4116	Cover plate studio white - Platform 63	1790-595-84	1	piece
2CKA001710A4130	Cover plate with legend Card, Symbol "arrows" Hotel card anthracite - Platform 63	1792 RFID-81	1	piece
2CKA001710A4132	Cover plate with legend Card, Symbol "arrows" Hotel card ivory white - Platform 63	1792 RFID-82	1	piece
2CKA001710A4128	Cover plate with legend Card, Symbol "arrows" Hotel card aluminium silver - Platform 63	1792 RFID-83	1	piece
2CKA001710A4127	Cover plate with legend Card, Symbol "arrows" Hotel card studio white - Platform 63	1792 RFID-84	1	piece
2CKA001710A4129	Cover plate with legend Card, Symbol "arrows" Hotel card studio white matt - Platform 63	1792 RFID-884	1	piece
2CKA001710A4131	Cover plate with legend Card, Symbol "arrows" Hotel card black matt - Platform 63	1792 RFID-885	1	piece
2CKA001710A3639	Cover plate with legend Card, Symbol "arrows" Hotel card anthracite - Platform 63	1792-81	1	piece
2CKA001710A3640	Cover plate with legend Card, Symbol "arrows" Hotel card ivory white - Platform 63	1792-82	1	piece
2CKA001710A3670	Cover plate with legend Card, Symbol "arrows" Hotel card aluminium silver - Platform 63	1792-83	1	piece
2CKA001710A3928	Cover plate with legend Card, Symbol "arrows" Hotel card studio white matt - Platform 63	1792-884	1	piece
2CKA001710A3905	Cover plate with legend Card, Symbol "arrows" Hotel card black matt - Platform 63	1792-885	1	piece
2CKA001710A4198	Cover plate with legend Characters 1 ... 6 for Thermostat Turn button anthracite - Platform 63	1794 R-81	1	piece
2CKA001710A4199	Cover plate with legend Characters 1 ... 6 for Thermostat Turn button ivory white - Platform 63	1794 R-82	1	piece
2CKA001710A4200	Cover plate with legend Characters 1 ... 6 for Thermostat Turn button aluminium silver - Platform 63	1794 R-83	1	piece
2CKA001710A4202	Cover plate Characters 1 ... 6 for Thermostat Turn button studio white - Platform 63	1794 R-84-500	1	piece
2CKA001710A4204	Cover plate with legend Characters 1 ... 6 for Thermostat Turn button studio white matt - Platform 63	1794 R-884	1	piece
2CKA001710A4205	Cover plate with legend Characters 1 ... 6 for Thermostat Turn button black matt - Platform 63	1794 R-885	1	piece
2CKA001753A0308	Cover plate for Pull-cord switch 2610/6 UC-xx, 2610/6 UJ-xx, Pull cord anthracite - Platform 63	1796-81	1	piece
2CKA001753A0309	Cover plate for Pull-cord switch 2610/6 UC-xx, 2610/6 UJ-xx, Pull cord ivory white - Platform 63	1796-82	1	piece
2CKA001753A0310	Cover plate for Pull-cord switch 2610/6 UC-xx, 2610/6 UJ-xx, Pull cord aluminium silver - Platform 63	1796-83	1	piece
2CKA001753A0311	Cover plate for Pull-cord switch 2610/6 UC-xx, 2610/6 UJ-xx, Pull cord studio white - Platform 63	1796-84	1	piece
2CKA001753A0313	Cover plate for Pull-cord switch 2610/6 UC-xx, 2610/6 UJ-xx, Pull cord studio white matt - Platform 63	1796-884	1	piece
2CKA001753A0314	Cover plate for Pull-cord switch 2610/6 UC-xx, 2610/6 UJ-xx, Pull cord black matt - Platform 63	1796-885	1	piece
2CKA001710A3627	Cover plate with labelling field Modular Jack 2 gang anthracite - Platform 63	1800-81	1	piece
2CKA001710A3158	Cover plate with labelling field Modular Jack 2 gang ivory white - Platform 63	1800-82	1	piece
2CKA001710A3676	Cover plate with labelling field Modular Jack 2 gang aluminium silver - Platform 63	1800-83	1	piece

2CKA001710A3990	Data / Telecommunication / Antenna Modular Jack 2 gang studio white - Platform 63	1800-84-500	1	piece
2CKA001710A3887	Cover plate with labelling field Modular Jack 2 gang studio white matt - Platform 63	1800-884	1	piece
2CKA001710A3910	Cover plate with labelling field Modular Jack 2 gang black matt - Platform 63	1800-885	1	piece
2CKA001710A3615	Cover plate with labelling field UAE/IAE (ISDN) 2 gang anthracite - Platform 63	1803-02-81	1	piece
2CKA001710A3146	Cover plate with labelling field UAE/IAE (ISDN) 2 gang ivory white - Platform 63	1803-02-82	1	piece
2CKA001710A3610	Cover plate with labelling field UAE/IAE (ISDN) 2 gang aluminium silver - Platform 63	1803-02-83	1	piece
2CKA001710A1551	Data / Telecommunication / Antenna UAE/IAE (ISDN) 2 gang studio white - Platform 63	1803-02-84-500	1	piece
2CKA001710A3888	Cover plate with labelling field UAE/IAE (ISDN) 2 gang studio white matt - Platform 63	1803-02-884	1	piece
2CKA001710A3911	Cover plate with labelling field UAE/IAE (ISDN) 2 gang black matt - Platform 63	1803-02-885	1	piece
2CKA001710A3616	Cover plate with labelling field UAE/IAE (ISDN) 1 gang anthracite - Platform 63	1803-81	1	piece
2CKA001710A3147	Cover plate with labelling field UAE/IAE (ISDN) 1 gang ivory white - Platform 63	1803-82	1	piece
2CKA001710A3674	Cover plate with labelling field UAE/IAE (ISDN) 1 gang aluminium silver - Platform 63	1803-83	1	piece
2CKA001710A1550	Data / Telecommunication / Antenna UAE/IAE (ISDN) 1 gang studio white - Platform 63	1803-84-500	1	piece
2CKA001710A3889	Cover plate with labelling field UAE/IAE (ISDN) 1 gang studio white matt - Platform 63	1803-884	1	piece
2CKA001710A3912	Cover plate with labelling field UAE/IAE (ISDN) 1 gang black matt - Platform 63	1803-885	1	piece
2CKA002013A5404	Busch-Object socket outlet SCHUKO® socket insert Safety Shutter anthracite - Platform 63	20 EUAB-81	1	piece
2CKA002013A5405	Busch-Object socket outlet SCHUKO® socket insert Safety Shutter ivory white - Platform 63	20 EUAB-82	1	piece
2CKA002013A5406	Busch-Object socket outlet SCHUKO® socket insert Safety Shutter aluminium silver - Platform 63	20 EUAB-83	1	piece
2CKA002013A5407	Busch-Object socket outlet SCHUKO® socket insert Safety Shutter studio white - Platform 63	20 EUAB-84	1	piece
2CKA002013A5409	Busch-Object socket outlet SCHUKO® socket insert Safety Shutter studio white matt - Platform 63	20 EUAB-884	1	piece
2CKA002013A5410	Busch-Object socket outlet SCHUKO® socket insert Safety Shutter black matt - Platform 63	20 EUAB-885	1	piece
2CKA002011A6260	SCHUKO® Socket insert with legend SV green - Platform 63	20 EUC-13-82-101	1	piece
2CKA002011A3723	SCHUKO® Socket insert with legend ZSV orange - Platform 63	20 EUC-14-82	1	piece
2CKA002011A6215	Socket Outlets anthracite - Platform 63	20 EUC-81-500	1	piece
2CKA002011A6214	Socket Outlets ivory white - Platform 63	20 EUC-82-500	1	piece
2CKA002011A6213	Socket Outlets aluminium silver - Platform 63	20 EUC-83-500	1	piece
2CKA002011A6207	Socket Outlets studio white - Platform 63	20 EUC-84-500	1	piece
2CKA002011A6208	Socket Outlets studio white matt - Platform 63	20 EUC-884-500	1	piece
2CKA002011A6211	Socket Outlets black matt - Platform 63	20 EUC-885-500	1	piece

2CKA002013A5472	SCHUKO® Socket insert with legend SV Safety20 EUCB-13-82 Shutter green - Platform 63 -102	1	piece
2CKA002013A5413	SCHUKO® Socket insert with legend ZSV 20 EUCB-14- Safety Shutter orange - Platform 63 82-10	1	piece
2CKA002013A5415	Busch-Service-Socket SCHUKO® socket insert Safety Shutter anthracite - Platform 63 20 EUCBDR-81	1	piece
2CKA002013A5416	Busch-Service-Socket SCHUKO® socket insert Safety Shutter ivory white - Platform 63 20 EUCBDR-82	1	piece
2CKA002013A5417	Busch-Service-Socket SCHUKO® socket insert Safety Shutter aluminium silver - Platform 63 20 EUCBDR-83	1	piece
2CKA002013A5418	Busch-Service-Socket SCHUKO® socket insert Safety Shutter studio white - Platform 63 20 EUCBDR-84	1	piece
2CKA002013A5420	Busch-Service-Socket SCHUKO® socket insert Safety Shutter studio white matt - Platform 63 20 EUCBDR-884	1	piece
2CKA002013A5421	Busch-Service-Socket SCHUKO® socket insert Safety Shutter black matt - Platform 63 20 EUCBDR-885	1	piece
2CKA002013A5467	SCHUKO® socket insert Safety Shutter withControl light; LED /Green green - Platform 63 20 EUCBL-13- 84-101	1	piece
2CKA002013A5288	SCHUKO® socket insert Safety Shutter withControl light; LED /Green orange - Platform 63 20 EUCBL-14- 84	1	piece
2CKA002013A5457	SCHUKO® socket insert Safety Shutter withControl light; LED /Green anthracite - Platform 63 20 EUCBL-81	1	piece
2CKA002013A5284	SCHUKO® socket insert Safety Shutter withControl light; LED /Green ivory white - Platform 63 20 EUCBL-82	1	piece
2CKA002013A5285	SCHUKO® socket insert Safety Shutter withControl light; LED /Green aluminium silver - Platform 63 20 EUCBL-83	1	piece
2CKA002013A5286	SCHUKO® socket insert Safety Shutter withControl light; LED /Green studio white - Platform 63 20 EUCBL-84	1	piece
2CKA002013A5336	SCHUKO® socket insert Safety Shutter withControl light; LED /Green studio white matt - Platform 63 20 EUCBL-884	1	piece
2CKA002013A5330	SCHUKO® socket insert Safety Shutter withControl light; LED /Green black matt - Platform 63 20 EUCBL-885	1	piece
2CKA002013A5459	Busch-steplight SCHUKO® socket insert Safety Shutter withNight light; LED /White anthracite - Platform 63 20 EUCBLI-81	1	piece
2CKA002013A5292	Busch-steplight SCHUKO® socket insert Safety Shutter withNight light; LED /White ivory white - Platform 63 20 EUCBLI-82	1	piece
2CKA002013A5293	Busch-steplight SCHUKO® socket insert Safety Shutter withNight light; LED /White aluminium silver - Platform 63 20 EUCBLI-83	1	piece
2CKA002013A5294	Busch-steplight SCHUKO® socket insert Safety Shutter withNight light; LED /White studio white - Platform 63 20 EUCBLI-84	1	piece
2CKA002013A5326	Busch-steplight SCHUKO® socket insert Safety Shutter withNight light; LED /White studio white matt - Platform 63 20 EUCBLI-884	1	piece
2CKA002013A5331	Busch-steplight SCHUKO® socket insert Safety Shutter withNight light; LED /White black matt - Platform 63 20 EUCBLI-885	1	piece
2CKA002013A5463	SCHUKO® socket insert EDV Safety Shutter red20 EUCKS/DV- - Platform 63 12-82-101	1	piece
2CKA002013A5266	SCHUKO® Socket insert with legend EDV20 EUCKS/DV- Safety Shutter anthracite - Platform 63 81	1	piece

2CKA002013A5267	SCHUKO® Socket insert with legend EDV20 EUCKS/DV-Safety Shutter ivory white - Platform 63	82	1	piece
2CKA002013A5273	SCHUKO® Socket insert with legend EDV20 EUCKS/DV-Safety Shutter aluminium silver - Platform 63	83	1	piece
2CKA002013A5268	SCHUKO® Socket insert with legend EDV20 EUCKS/DV-Safety Shutter studio white - Platform 63	84	1	piece
2CKA002013A5327	SCHUKO® Socket insert with legend EDV20 EUCKS/DV-Safety Shutter studio white matt - Platform 63	884	1	piece
2CKA002013A5332	SCHUKO® Socket insert with legend EDV20 EUCKS/DV-Safety Shutter black matt - Platform 63	885	1	piece
2CKA002013A5464	SCHUKO® socket insert Safety Shutter red - Platform 63	20 EUCKS-12-82-101	1	piece
2CKA002013A5470	SCHUKO® socket insert Safety Shutter green - Platform 63	20 EUCKS-13-82-101	1	piece
2CKA002013A5324	SCHUKO® socket insert Safety Shutter orange - Platform 63	20 EUCKS-14-82	1	piece
2CKA002013A5265	SCHUKO® socket insert Safety Shutter anthracite - Platform 63	20 EUCKS-81	1	piece
2CKA002013A5376	Socket Outlets Safety Shutter ivory white - Platform 63	20 EUCKS-82-500	1	piece
2CKA002013A5375	Socket Outlets Safety Shutter aluminium silver - Platform 63	20 EUCKS-83-500	1	piece
2CKA002013A5372	Socket insert Safety Shutter studio white - Platform 63	20 EUCKS-84-500	1	piece
2CKA002013A5373	Socket insert Safety Shutter studio white matt - Platform 63	20 EUCKS-884-500	1	piece
2CKA002013A5333	SCHUKO® socket insert Safety Shutter black matt - Platform 63	20 EUCKS-885	1	piece
2CKA002013A5423	SCHUKO® Socket insert with labelling field Safety Shutter red - Platform 63	20 EUCNB-12-82	1	piece
2CKA002013A5424	SCHUKO® Socket insert with labelling field Safety Shutter green - Platform 63	20 EUCNB-13-82	1	piece
2CKA002013A5425	SCHUKO® Socket insert with labelling field Safety Shutter orange - Platform 63	20 EUCNB-14-82	1	piece
2CKA002013A5427	SCHUKO® Socket insert with labelling field Safety Shutter anthracite - Platform 63	20 EUCNB-81	1	piece
2CKA002013A5428	SCHUKO® Socket insert with labelling field Safety Shutter ivory white - Platform 63	20 EUCNB-82	1	piece
2CKA002013A5429	SCHUKO® Socket insert with labelling field Safety Shutter aluminium silver - Platform 63	20 EUCNB-83	1	piece
2CKA002013A5431	Socket Outlets studio white - Platform 63	20 EUCNB-84-500	1	piece
2CKA002013A5433	SCHUKO® Socket insert with labelling field Safety Shutter studio white matt - Platform 63	20 EUCNB-884	1	piece
2CKA002013A5434	SCHUKO® Socket insert with labelling field Safety Shutter black matt - Platform 63	20 EUCNB-885	1	piece
2CKA002013A5437	SCHUKO® socket insert Safety Shutter anthracite - Platform 63	20 EUCRB-81	1	piece
2CKA002013A5438	SCHUKO® socket insert Safety Shutter ivory white - Platform 63	20 EUCRB-82	1	piece
2CKA002013A5439	SCHUKO® socket insert Safety Shutter aluminium silver - Platform 63	20 EUCRB-83	1	piece
2CKA002013A5441	Socket Outlets studio white - Platform 63	20 EUCRB-84-500	1	piece
2CKA002013A5443	SCHUKO® socket insert Safety Shutter studio white matt - Platform 63	20 EUCRB-884	1	piece
2CKA002013A5444	SCHUKO® socket insert Safety Shutter black matt - Platform 63	20 EUCRB-885	1	piece
2CKA002018A1486	SCHUKO® socket insert with Hinged Lid anthracite - Platform 63	20 EUK-81	1	piece

2CKA002018A1465	SCHUKO® socket insert with Hinged Lid ivory white - Platform 63	20 EUK-82	1	piece
2CKA002018A1487	SCHUKO® socket insert with Hinged Lid aluminium silver - Platform 63	20 EUK-83	1	piece
2CKA002018A1509	Socket Outlets with Hinged Lid studio white - Platform 63	20 EUK-84-500	1	piece
2CKA002018A1494	SCHUKO® socket insert with Hinged Lid studio white matt - Platform 63	20 EUK-884	1	piece
2CKA002018A1495	SCHUKO® socket insert with Hinged Lid black matt - Platform 63	20 EUK-885	1	piece
2CKA002018A1517	SCHUKO® socket insert Safety Shutter with Hinged Lid anthracite - Platform 63	20 EUKB-81	1	piece
2CKA002018A1518	SCHUKO® socket insert Safety Shutter with Hinged Lid ivory white - Platform 63	20 EUKB-82	1	piece
2CKA002018A1519	SCHUKO® socket insert Safety Shutter with Hinged Lid aluminium silver - Platform 63	20 EUKB-83	1	piece
2CKA002018A1520	SCHUKO® socket insert Safety Shutter with Hinged Lid studio white - Platform 63	20 EUKB-84	1	piece
2CKA002018A1522	SCHUKO® socket insert Safety Shutter with Hinged Lid studio white matt - Platform 63	20 EUKB-884	1	piece
2CKA002018A1523	SCHUKO® socket insert Safety Shutter with Hinged Lid black matt - Platform 63	20 EUKB-885	1	piece
2CKA002018A1526	SCHUKO® socket insert Safety Shutter with Hinged Lid anthracite - Platform 63	20 EUKBR-81	1	piece
2CKA002018A1527	SCHUKO® socket insert Safety Shutter with Hinged Lid ivory white - Platform 63	20 EUKBR-82	1	piece
2CKA002018A1528	SCHUKO® socket insert Safety Shutter with Hinged Lid aluminium silver - Platform 63	20 EUKBR-83	1	piece
2CKA002018A1529	SCHUKO® socket insert Safety Shutter with Hinged Lid studio white - Platform 63	20 EUKBR-84	1	piece
2CKA002018A1530	SCHUKO® socket insert Safety Shutter with Hinged Lid studio white matt - Platform 63	20 EUKBR-884	1	piece
2CKA002018A1531	SCHUKO® socket insert Safety Shutter with Hinged Lid black matt - Platform 63	20 EUKBR-885	1	piece
2CKA002018A1533	SCHUKO® Socket insert with labelling field Safety Shutter with Hinged Lid red - Platform 63	20 EUKNB-12-82	1	piece
2CKA002018A1534	SCHUKO® Socket insert with labelling field Safety Shutter with Hinged Lid green - Platform 63	20 EUKNB-13-82	1	piece
2CKA002018A1535	SCHUKO® Socket insert with labelling field Safety Shutter with Hinged Lid orange - Platform 63	20 EUKNB-14-82	1	piece
2CKA002018A1537	SCHUKO® Socket insert with labelling field Safety Shutter with Hinged Lid anthracite - Platform 63	20 EUKNB-81	1	piece
2CKA002018A1538	SCHUKO® Socket insert with labelling field Safety Shutter with Hinged Lid ivory white - Platform 63	20 EUKNB-82	1	piece
2CKA002018A1539	SCHUKO® Socket insert with labelling field Safety Shutter with Hinged Lid aluminium silver - Platform 63	20 EUKNB-83	1	piece
2CKA002018A1540	SCHUKO® Socket insert with labelling field Safety Shutter with Hinged Lid studio white - Platform 63	20 EUKNB-84	1	piece
2CKA002018A1541	SCHUKO® Socket insert with labelling field Safety Shutter with Hinged Lid studio white matt - Platform 63	20 EUKNB-884	1	piece
2CKA002018A1542	SCHUKO® Socket insert with labelling field Safety Shutter with Hinged Lid black matt - Platform 63	20 EUKNB-885	1	piece

2CKA002018A1544	SCHUKO® Socket insert with labelling field Safety Shutter withControl light with Hinged Lid red - Platform 63	20 EUKNBL-12 -82	1	piece
2CKA002018A1545	SCHUKO® Socket insert with labelling field Safety Shutter withControl light with Hinged Lid green - Platform 63	20 EUKNBL-13 -82	1	piece
2CKA002018A1546	SCHUKO® Socket insert with labelling field Safety Shutter withControl light with Hinged Lid orange - Platform 63	20 EUKNBL-14 -82	1	piece
2CKA002018A1548	SCHUKO® Socket insert with labelling field Safety Shutter withControl light with Hinged Lid anthracite - Platform 63	20 EUKNBL-81	1	piece
2CKA002018A1549	SCHUKO® Socket insert with labelling field Safety Shutter withControl light with Hinged Lid ivory white - Platform 63	20 EUKNBL-82	1	piece
2CKA002018A1550	SCHUKO® Socket insert with labelling field Safety Shutter withControl light with Hinged Lid aluminium silver - Platform 63	20 EUKNBL-83	1	piece
2CKA002018A1551	SCHUKO® Socket insert with labelling field Safety Shutter with Hinged Lid studio white Platform 63	20 EUKNBL-84	1	piece
2CKA002018A1552	SCHUKO® Socket insert with labelling field Safety Shutter withControl light with Hinged Lid studio white matt - Platform 63	20 EUKNBL-884	1	piece
2CKA002018A1553	SCHUKO® Socket insert with labelling field Safety Shutter withControl light with Hinged Lid black matt - Platform 63	20 EUKNBL-885	1	piece
2CKA002018A1557	SCHUKO® Socket insert with labelling field Safety Shutter with Hinged Lid and Cylinder Lock with different locking anthracite - Platform 63	20 EUKNBSL-81	1	piece
2CKA002018A1558	SCHUKO® Socket insert with labelling field Safety Shutter with Hinged Lid and Cylinder Lock with simultaneous locking anthracite - Platform 63	20 EUKNBSL-81-101	1	piece
2CKA002018A1559	SCHUKO® Socket insert with labelling field Safety Shutter with Hinged Lid and Cylinder Lock with different locking ivory white - Platform 63	20 EUKNBSL-82	1	piece
2CKA002018A1560	SCHUKO® Socket insert with labelling field Safety Shutter with Hinged Lid and Cylinder Lock with simultaneous locking ivory white - Platform 63	20 EUKNBSL-82-101	1	piece
2CKA002018A1561	SCHUKO® Socket insert with labelling field Safety Shutter with Hinged Lid and Cylinder Lock with different locking aluminium silver - Platform 63	20 EUKNBSL-83	1	piece
2CKA002018A1562	SCHUKO® Socket insert with labelling field Safety Shutter with Hinged Lid and Cylinder Lock with simultaneous locking aluminium silver - Platform 63	20 EUKNBSL-83-101	1	piece
2CKA002018A1563	SCHUKO® Socket insert with labelling field Safety Shutter with Hinged Lid and Cylinder Lock with different locking studio white - Platform 63	20 EUKNBSL-84	1	piece
2CKA002018A1564	SCHUKO® Socket insert with labelling field Safety Shutter with Hinged Lid and Cylinder Lock with simultaneous locking studio white - Platform 63	20 EUKNBSL-84-101	1	piece
2CKA002018A1565	SCHUKO® Socket insert with labelling field Safety Shutter with Hinged Lid and Cylinder Lock with different locking studio white matt - Platform 63	20 EUKNBSL-884	1	piece

2CKA002018A1566	SCHUKO® Socket insert with labelling field Safety Shutter with Hinged Lid and Cylinder Lock with simultaneous locking studio white matt - Platform 63	20 EUKNBSL- 884-101	1	piece
2CKA002018A1567	SCHUKO® Socket insert with labelling field Safety Shutter with Hinged Lid and Cylinder Lock with different locking black matt - Platform 63	20 EUKNBSL- 885	1	piece
2CKA002018A1568	SCHUKO® Socket insert with labelling field Safety Shutter with Hinged Lid and Cylinder Lock with simultaneous locking black matt - Platform 63	20 EUKNBSL- 885-101	1	piece
2CKA002011A3802	SCHUKO® Socket insert with labelling field anthracite - Platform 63	20 EUN-81	1	piece
2CKA002011A3726	SCHUKO® Socket insert with labelling field ivory white - Platform 63	20 EUN-82	1	piece
2CKA002011A3810	SCHUKO® Socket insert with labelling field aluminium silver - Platform 63	20 EUN-83	1	piece
2CKA002011A6209	Socket Outlets studio white - Platform 63	20 EUN-84- 500	1	piece
2CKA002011A3881	SCHUKO® Socket insert with labelling field studio white matt - Platform 63	20 EUN-884	1	piece
2CKA002011A3884	SCHUKO® Socket insert with labelling field black matt - Platform 63	20 EUN-885	1	piece
2CKA001751A3167	Bell push-switch DND / MUR insert DND, MUR and Symbol "bell" Single push button 1 pole, 1NO anthracite - Platform 63	2029 UC-81	1	piece
2CKA001751A3168	Bell push-switch DND / MUR insert DND, MUR and Symbol "bell" Single push button 1 pole, 1NO ivory white - Platform 63	2029 UC-82	1	piece
2CKA001751A3169	Bell push-switch DND / MUR insert DND, MUR and Symbol "bell" Single push button 1 pole, 1NO aluminium silver - Platform 63	2029 UC-83	1	piece
2CKA001751A3170	Bell push-switch DND / MUR insert DND, MUR and Symbol "bell" Single push button 1 pole, with LED 1NO studio white - Platform 63	2029 UC-84	1	piece
2CKA001751A3172	Bell push-switch DND / MUR insert DND, MUR and Symbol "bell" Single push button 1 pole, 1NO studio white matt - Platform 63	2029 UC-884	1	piece
2CKA001751A3173	Bell push-switch DND / MUR insert DND, MUR and Symbol "bell" Single push button 1 pole, 1NO black matt - Platform 63	2029 UC-885	1	piece
2CKA001751A3234	Bell push-switch DND / MUR insert DND, MUR and Symbol "bell" Single push button 1 pole, anthracite - Platform 63	2029/12 UC-81	1	piece
2CKA001751A3236	Bell push-switch DND / MUR insert DND, MUR and Symbol "bell" Single push button 1 pole, ivory white - Platform 63	2029/12 UC- 82	1	piece
2CKA001751A3232	Bell push-switch DND / MUR insert DND, MUR and Symbol "bell" Single push button 1 pole, aluminium silver - Platform 63	2029/12 UC- 83	1	piece
2CKA001751A3231	Bell push-switch DND / MUR insert DND, MUR and Symbol "bell" Single push button 1 pole, studio white - Platform 63	2029/12 UC- 84	1	piece
2CKA001751A3233	Bell push-switch DND / MUR insert DND, MUR and Symbol "bell" Single push button 1 pole, studio white matt - Platform 63	2029/12 UC- 884	1	piece
2CKA001751A3235	Bell push-switch DND / MUR insert DND, MUR and Symbol "bell" Single push button 1 pole, black matt - Platform 63	2029/12 UC- 885	1	piece
2CKA001751A3223	Rocker with legend DND, MUR for Switch/push button Two-part rocker anthracite - Platform 63	2058-24-81	1	piece

2CKA001751A3225	Rocker with legend DND, MUR for Switch/push button Two-part rocker ivory white - Platform 63	2058-24-82	1	piece
2CKA001751A3221	Rocker with legend DND, MUR for Switch/push button Two-part rocker aluminium silver - Platform 63	2058-24-83	1	piece
2CKA001751A3220	Rocker with legend DND, MUR for Switch/push button Two-part rocker studio white - Platform 63	2058-24-84	1	piece
2CKA001751A3222	Rocker with legend DND, MUR for Switch/push button Two-part rocker studio white matt - Platform 63	2058-24-884	1	piece
2CKA001751A3224	Rocker with legend DND, MUR for Switch/push button Two-part rocker black matt - Platform 63	2058-24-885	1	piece
2CKA001751A3243	Bell push-switch DND / MUR insert DND, MUR and Symbol "bell" 3gang for Switch/push button Single push button with LED anthracite - Platform 63	2059 UC-81	1	piece
2CKA001751A3245	Bell push-switch DND / MUR insert DND, MUR and Symbol "bell" 3gang for Switch/push button Single push button with LED ivory white - Platform 63	2059 UC-82	1	piece
2CKA001751A3241	Bell push-switch DND / MUR insert DND, MUR and Symbol "bell" 3gang for Switch/push button Single push button with LED aluminium silver - Platform 63	2059 UC-83	1	piece
2CKA001751A3240	Bell push-switch DND / MUR insert DND, MUR and Symbol "bell" 3gang for Switch/push button Single push button with LED studio white - Platform 63	2059 UC-84	1	piece
2CKA001751A3242	Bell push-switch DND / MUR insert DND, MUR and Symbol "bell" 3gang for Switch/push button Single push button with LED studio white matt - Platform 63	2059 UC-884	1	piece
2CKA001751A3244	Bell push-switch DND / MUR insert DND, MUR and Symbol "bell" 3gang for Switch/push button Single push button with LED black matt - Platform 63	2059 UC-885	1	piece
2CKA001761A1493	Cable Entry anthracite - Platform 63	2087-81	1	piece
2CKA001761A1494	Cable Entry ivory white - future linear	2087-82	1	piece
2CKA001761A1504	Cable Entry aluminium silver - future linear	2087-83	1	piece
2CKA001761A1495	Cable Entry studio white - future linear	2087-84	1	piece
2CKA001761A1498	Cable Entry anthracite - Platform 63	2088-81	1	piece
2CKA001761A1499	Cable Entry ivory white - future linear	2088-82	1	piece
2CKA001761A1505	Cable Entry aluminium silver - future linear	2088-83	1	piece
2CKA001761A1500	Cable Entry studio white - future linear	2088-84	1	piece
2CKA002495A0084	Equipotential socket insert Equipotential compensation anthracite - Platform 63	2095 UC-81	1	piece
2CKA002495A0085	Equipotential socket insert Equipotential compensation ivory white - Platform 63	2095 UC-82	1	piece
2CKA002495A0089	Equipotential socket insert Equipotential compensation aluminium silver - Platform 63	2095 UC-83	1	piece
2CKA002495A0086	Equipotential socket insert Equipotential compensation studio white - Platform 63	2095 UC-84	1	piece
2CKA002495A0091	Equipotential socket insert Equipotential compensation studio white matt - Platform 63	2095 UC-884	1	piece
2CKA002495A0092	Equipotential socket insert Equipotential compensation black matt - Platform 63	2095 UC-885	1	piece
2CKA002013A5474	SCHUKO® socket insert Safety Shutter anthracite - Platform 63	23 EUCB-81	1	piece
2CKA002013A5475	SCHUKO® socket insert Safety Shutter ivory white - Platform 63	23 EUCB-82	1	piece

2CKA002013A5476	SCHUKO® socket insert Safety Shutter aluminium silver - Platform 63	23 EUCB-83	1	piece
2CKA002013A5477	SCHUKO® socket insert Safety Shutter studio white - Platform 63	23 EUCB-84	1	piece
2CKA002013A5479	SCHUKO® socket insert Safety Shutter studio white matt - Platform 63	23 EUCB-884	1	piece
2CKA002013A5480	SCHUKO® socket insert Safety Shutter black matt - Platform 63	23 EUCB-885	1	piece
2CKA002013A5448	SCHUKO® socket insert Safety Shutter anthracite - Platform 63	2300 EUCB-81	1	piece
2CKA002013A5449	SCHUKO® socket insert Safety Shutter ivory white - Platform 63	2300 EUCB-82	1	piece
2CKA002013A5450	SCHUKO® socket insert Safety Shutter aluminium silver - Platform 63	2300 EUCB-83	1	piece
2CKA002013A5451	SCHUKO® socket insert Safety Shutter studio white - Platform 63	2300 EUCB-84	1	piece
2CKA002013A5453	SCHUKO® socket insert Safety Shutter studio white matt - Platform 63	2300 EUCB- 884	1	piece
2CKA002013A5454	SCHUKO® socket insert Safety Shutter black matt - Platform 63	2300 EUCB- 885	1	piece
2CKA002113A5339	Socket Outlets Safety Shutter anthracite - Platform 63	2300 UCRKS- 81-503	1	piece
2CKA002113A0510	Socket Outlets Safety Shutter ivory white - Platform 63	2300 UCRKS- 82-503	1	piece
2CKA002113A0511	Socket Outlets Safety Shutter studio white - Platform 63	2300 UCRKS- 84-503	1	piece
2CKA002113A5337	Socket Outlets Safety Shutter studio white matt - Platform 63	2300 UCRKS- 884-503	1	piece
2CKA002113A5340	Socket Outlets Safety Shutter black matt - Platform 63	2300 UCRKS- 885-503	1	piece
2CKA002011A6257	Busch-Protector® SCHUKO® socket insert with Neon lamp / Red red - Platform 63	2310 EUGL/VA -12-82-101	1	piece
2CKA002011A3830	Busch-Protector® SCHUKO® socket insert with Neon lamp / Red anthracite - Platform 63	2310 EUGL/VA -81-11	1	piece
2CKA002011A3831	Busch-Protector® SCHUKO® socket insert with Neon lamp / Red ivory white - Platform 63	2310 EUGL/VA -82-11	1	piece
2CKA002011A3832	Busch-Protector® SCHUKO® socket insert with Neon lamp / Red aluminium silver - Platform 63	2310 EUGL/VA -83-11	1	piece
2CKA002011A3833	Busch-Protector® SCHUKO® socket insert with Neon lamp / Red studio white - Platform 63	2310 EUGL/VA -84-11	1	piece
2CKA002011A3882	Busch-Protector® SCHUKO® socket insert with Neon lamp / Red studio white matt - Platform 63	2310 EUGL/VA- 884-11	1	piece
2CKA002011A3885	Busch-Protector® SCHUKO® socket insert with Neon lamp / Red black matt - Platform 63	2310 EUGL/VA- 885-11	1	piece
2CKA002099A0197	Flush Mounted Inserts	2397 UCKS-82- 505	1	piece
2CKA002099A0198	Flush Mounted Inserts	2397 UCKS-84 -505	1	piece
2CKA002013A5357	Flush Mounted Inserts	2398 CKS-81	1	piece
2CKA002013A5359	Flush Mounted Inserts	2398 CKS-82	1	piece
2CKA002013A5360	Flush Mounted Inserts	2398 CKS-83	1	piece
2CKA002013A5361	Flush Mounted Inserts	2398 CKS-84	1	piece
2CKA002013A5363	Flush Mounted Inserts	2398 CKS-884	1	piece
2CKA002013A5364	Flush Mounted Inserts	2398 CKS-885	1	piece
2CKA002099A0216	Socket Outlets Safety Shutter anthracite - Platform 63	2399 UCKS-81	1	piece
2CKA002099A0211	Socket Outlets Safety Shutter ivory white - Platform 63	2399 UCKS-82	1	piece

2CKA002099A0191	Socket Outlets Safety Shutter ivory white - Platform 63	2399 UCKS-82-505	1	piece
2CKA002099A0241	Socket Outlets Safety Shutter aluminium silver - Platform 63	2399 UCKS-83	1	piece
2CKA002099A0214	Socket insert Safety Shutter studio white - Platform 63	2399 UCKS-84	1	piece
2CKA002099A0192	Socket Outlets Safety Shutter studio white - Platform 63	2399 UCKS-84-505	1	piece
2CKA002099A0255	Socket Outlets Safety Shutter studio white matt - Platform 63	2399 UCKS-884	1	piece
2CKA001719A0217	Intermediate Ring with Hinged Lid for cover plates Busch-Balance® SI 1 gang with Sealing Ring anthracite - Platform 63	2518-WD-81	1	piece
2CKA001719A0218	Intermediate Ring with Hinged Lid for cover plates Busch-Balance® SI 1 gang with Sealing Ring ivory white - Platform 63	2518-WD-82	1	piece
2CKA001719A0219	Intermediate Ring with Hinged Lid for cover plates Busch-Balance® SI 1 gang with Sealing Ring aluminium silver - Platform 63	2518-WD-83	1	piece
2CKA001719A0220	Intermediate Ring with Hinged Lid for cover plates Busch-Balance® SI 1 gang with Sealing Ring studio white - Platform 63	2518-WD-84	1	piece
2CKA001719A0222	Intermediate Ring with Hinged Lid for cover plates Busch-Balance® SI 1 gang with Sealing Ring studio white matt - Platform 63	2518-WD-884	1	piece
2CKA001719A0223	Intermediate Ring with Hinged Lid for cover plates Busch-Balance® SI 1 gang with Sealing Ring black matt - Platform 63	2518-WD-885	1	piece
2CKA001751A3176	Rocker with legend Symbol "bell" for Switch/push button, Single rocker anthracite - Platform 63	2520 KI-81	1	piece
2CKA001751A3177	Rocker with legend Symbol "bell" for Switch/push button, Single rocker ivory white - Platform 63	2520 KI-82	1	piece
2CKA001751A3178	Rocker with legend Symbol "bell" for Switch/push button, Single rocker aluminium silver - Platform 63	2520 KI-83	1	piece
2CKA001751A3180	Rocker with legend Symbol "bell" for Switch/push button Single rocker studio white - Platform 63	2520 KI-84-500	1	piece
2CKA001751A3182	Rocker with legend Symbol "bell" for Switch/push button, Single rocker studio white matt - Platform 63	2520 KI-884	1	piece
2CKA001751A3183	Rocker with legend Symbol "bell" for Switch/push button, Single rocker black matt - Platform 63	2520 KI-885	1	piece
2CKA001751A3186	Rocker with legend Symbol "light" for Switch/push button, Single rocker anthracite - Platform 63	2520 LI-81	1	piece
2CKA001751A3187	Rocker with legend Symbol "light" for Switch/push button, Single rocker ivory white - Platform 63	2520 LI-82	1	piece
2CKA001751A3188	Rocker with legend Symbol "light" for Switch/push button, Single rocker aluminium silver - Platform 63	2520 LI-83	1	piece
2CKA001751A3190	Mechanical Controls Symbol "light" for Switch/push button, Single rocker studio white - Platform 63	2520 LI-84-500	1	piece
2CKA001751A3192	Rocker with legend Symbol "light" for Switch/push button, Single rocker studio white matt - Platform 63	2520 LI-884	1	piece
2CKA001751A3193	Rocker with legend Symbol "light" for Switch/push button, Single rocker black matt - Platform 63	2520 LI-885	1	piece

2CKA001751A3196	Rocker with legend Symbol "key" for Switch/push button, Single rocker anthracite - Platform 63	2520 TR-81	1	piece
2CKA001751A3197	Rocker with legend Symbol "key" for Switch/push button, Single rocker ivory white - Platform 63	2520 TR-82	1	piece
2CKA001751A3198	Rocker with legend Symbol "key" for Switch/push button, Single rocker aluminium silver - Platform 63	2520 TR-83	1	piece
2CKA001751A3199	Rocker with legend Symbol "key" for Switch/push button, Single rocker studio white - Platform 63	2520 TR-84	1	piece
2CKA001751A3201	Rocker with legend Symbol "key" for Switch/push button, Single rocker studio white matt - Platform 63	2520 TR-884	1	piece
2CKA001751A3202	Rocker with legend Symbol "key" for Switch/push button, Single rocker black matt - Platform 63	2520 TR-885	1	piece
2CKA001724A4254	Cover plate Bore hole 1 gang anthracite - Platform 63	2533-81	1	piece
2CKA001724A4255	Cover plate Bore hole 1 gang ivory white - Platform 63	2533-82	1	piece
2CKA001724A4382	Cover plate Bore hole 1 gang yellow - Platform 63	2533-82-15	1	piece
2CKA001724A4261	Cover plate Bore hole 1 gang aluminium silver - Platform 63	2533-83	1	piece
2CKA001724A4256	Cover plate Bore hole 1 gang studio white - Platform 63	2533-84	1	piece
2CKA001724A4296	Cover plate Bore hole 1 gang studio white matt - Platform 63	2533-884	1	piece
2CKA001724A4301	Cover plate Bore hole 1 gang black matt - Platform 63	2533-885	1	piece
2CKA001710A3644	Cover plate with legend Symbol "0-1-2-3" for Level switch, Turn button anthracite - Platform 63	2542 DR/01-81	1	piece
2CKA001710A3645	Cover plate with legend Symbol "0-1-2-3" for Level switch, Turn button ivory white - Platform 63	2542 DR/01-82	1	piece
2CKA001710A3671	Cover plate with legend Symbol "0-1-2-3" for Level switch, Turn button aluminium silver - Platform 63	2542 DR/01-83	1	piece
2CKA001710A3646	Cover plate with legend Symbol "0-1-2-3" for Level switch, Turn button studio white - Platform 63	2542 DR/01-84	1	piece
2CKA001710A3890	Cover plate with legend Symbol "0-1-2-3" for Level switch, Turn button studio white matt - Platform 63	2542 DR/01-884	1	piece
2CKA001710A3913	Cover plate with legend Symbol "0-1-2-3" for Level switch, Turn button black matt - Platform 63	2542 DR/01-885	1	piece
2CKA001710A3649	Cover plate with legend Symbol "1-2-3" for Level switch, Turn button anthracite - Platform 63	2542 DR/02-81	1	piece
2CKA001710A3650	Cover plate with legend Symbol "1-2-3" for Level switch, Turn button ivory white - Platform 63	2542 DR/02-82	1	piece
2CKA001710A3672	Cover plate with legend Symbol "1-2-3" for Level switch, Turn button aluminium silver - Platform 63	2542 DR/02-83	1	piece
2CKA001710A3651	Cover plate with legend Symbol "1-2-3" for Level switch, Turn button studio white - Platform 63	2542 DR/02-84	1	piece

2CKA001710A3891	Cover plate with legend Symbol "1-2-3" for Level switch, Turn button studio white matt - Platform 63	2542 DR/02-884	1	piece
2CKA001710A3914	Cover plate with legend Symbol "1-2-3" for Level switch, Turn button black matt - Platform 63	2542 DR/02-885	1	piece
2CKA001724A4383	Cover plate Call unit studio white - Platform 63	2548-020 D-84	1	piece
2CKA001724A4384	Cover plate Call unit studio white - Platform 63	2548-020 E-84	1	piece
2CKA001724A4385	Cover plate Call unit studio white - Platform 63	2548-020 F-84	1	piece
2CKA001724A4386	Cover plate Call unit studio white - Platform 63	2548-021 G-84	1	piece
2CKA001724A4387	Cover plate 1 gang Red studio white - Platform 63	2548-022 A-84	1	piece
2CKA001724A4388	Cover plate Doctor 1 gang Blue studio white - Platform 63	2548-022 AR-84	1	piece
2CKA001724A4389	Cover plate Call module 1 gang Red studio white - Platform 63	2548-022 B-84	1	piece
2CKA001724A4390	Cover plate Pull-cord switch studio white - Platform 63	2548-046 A-84	1	piece
2CKA001724A4391	Cover plate Call module 1 gang Red studio white - Platform 63	2548-071 D-84	1	piece
2CKA001724A4392	Cover plate Call module 1 gang Red studio white - Platform 63	2548-071 E-84	1	piece
2CKA001724A4393	Cover plate Call / reset 2 gang Red / Green studio white - Platform 63	2548-642 B-84	1	piece
2CKA001724A4394	Cover plate Duty room unit 2 gang White / Green studio white - Platform 63	2548-642 BD-84	1	piece
2CKA001724A4395	Cover plate Reset 1 gang Green studio white - Platform 63	2548-642 C-84	1	piece
2CKA001724A4396	Cover plate Reset 1 gang Yellow studio white - Platform 63	2548-642 D-84	1	piece
2CKA001724A4397	Cover plate Reset 2 gang Yellow / Green studio white - Platform 63	2548-642 E-84	1	piece
2CKA001724A4399	Cover plate XLR 1 gang anthracite - Platform 63	2553-81	1	piece
2CKA001724A4400	Cover plate XLR 1 gang ivory white - Platform 63	2553-82	1	piece
2CKA001724A4401	Cover plate XLR 1 gang aluminium silver - Platform 63	2553-83	1	piece
2CKA001724A4402	Cover plate XLR 1 gang studio white - Platform 63	2553-84	1	piece
2CKA001724A4404	Cover plate XLR 1 gang studio white matt - Platform 63	2553-884	1	piece
2CKA001724A4405	Cover plate XLR 1 gang black matt - Platform 63	2553-885	1	piece
2CKA001753A0317	Cover plate Modular Jack 2 gang anthracite - Platform 63	2561-02-81	1	piece
2CKA001753A0392	Cover plate Modular Jack ivory white - Platform 63	2561-02-82	1	piece
2CKA001753A0393	Cover plate Modular Jack 2 gang aluminium silver - Platform 63	2561-02-83	1	piece
2CKA001753A0394	Cover plate Modular Jack 2 gang studio white - Platform 63	2561-02-84	1	piece
2CKA001753A0396	Cover plate Modular Jack 2 gang studio white matt - Platform 63	2561-02-884	1	piece
2CKA001753A0397	Cover plate Modular Jack 2 gang black matt - Platform 63	2561-02-885	1	piece
2CKA001753A0400	Cover plate Modular Jack 1 gang anthracite - Platform 63	2561-81	1	piece
2CKA001753A0401	Cover plate Modular Jack 1 gang ivory white - Platform 63	2561-82	1	piece

2CKA001753A0402	Cover plate Modular Jack 1 gang aluminium silver - Platform 63	2561-83	1	piece
2CKA001753A0403	Cover plate Modular Jack 1 gang studio white - Platform 63	2561-84	1	piece
2CKA001753A0405	Cover plate Modular Jack 1 gang studio white matt - Platform 63	2561-884	1	piece
2CKA001753A0406	Cover plate Modular Jack 1 gang black matt - Platform 63	2561-885	1	piece
2CKA001751A3261	Rocker for Electronic push button Single rocker anthracite - Platform 63	2570-10-81	1	piece
2CKA001751A3263	Rocker for Electronic push button Single rocker ivory white - Platform 63	2570-10-82	1	piece
2CKA001751A3259	Rocker for Electronic push button Single rocker aluminium silver - Platform 63	2570-10-83	1	piece
2CKA001751A3258	Rocker for Electronic push button Single rocker studio white - Platform 63	2570-10-84	1	piece
2CKA001751A3260	Rocker for Electronic push button Single rocker studio white matt - Platform 63	2570-10-884	1	piece
2CKA001751A3262	Rocker for Electronic push button Single rocker black matt - Platform 63	2570-10-885	1	piece
2CKA001751A3272	Rocker for Electronic push button Two-part rocker anthracite - Platform 63	2570-20-81	1	piece
2CKA001751A3274	Rocker for Electronic push button Two-part rocker ivory white - Platform 63	2570-20-82	1	piece
2CKA001751A3270	Rocker for Electronic push button Two-part rocker aluminium silver - Platform 63	2570-20-83	1	piece
2CKA001751A3269	Rocker for Electronic push button Two-part rocker studio white - Platform 63	2570-20-84	1	piece
2CKA001751A3271	Rocker for Electronic push button Two-part rocker studio white matt - Platform 63	2570-20-884	1	piece
2CKA001751A3273	Rocker for Electronic push button Two-part rocker black matt - Platform 63	2570-20-885	1	piece
2CKA001751A3283	Rocker for Electronic push button Three-part rocker anthracite - Platform 63	2570-30-81	1	piece
2CKA001751A3285	Rocker for Electronic push button Three-part rocker ivory white - Platform 63	2570-30-82	1	piece
2CKA001751A3281	Rocker for Electronic push button Three-part rocker aluminium silver - Platform 63	2570-30-83	1	piece
2CKA001751A3280	Rocker for Electronic push button Three-part rocker studio white - Platform 63	2570-30-84	1	piece
2CKA001751A3282	Rocker for Electronic push button Three-part rocker studio white matt - Platform 63	2570-30-884	1	piece
2CKA001751A3284	Rocker for Electronic push button Three-part rocker black matt - Platform 63	2570-30-885	1	piece
2CKA003116A0667	FI-Schukomat SCHUKO® socket insert Safety Shutter anthracite - Platform 63	3120 EUCB-81	1	piece
2CKA003116A0661	FI-Schukomat SCHUKO® socket insert Safety Shutter ivory white - Platform 63	3120 EUCB-82	1	piece
2CKA003116A0668	FI-Schukomat SCHUKO® socket insert Protective Contact (SCHUKO) 30 mA aluminium silver - Platform 63	3120 EUCB-83	1	piece
2CKA003116A0662	FI-Schukomat SCHUKO® socket insert Protective Contact (SCHUKO) 30 mA studio white - Platform 63	3120 EUCB-84	1	piece
2CKA003116A0670	FI-Schukomat SCHUKO® socket insert Protective Contact (SCHUKO) 30 mA studio white matt - Platform 63	3120 EUCB-884	1	piece
2CKA003116A0671	FI-Schukomat SCHUKO® socket insert Protective Contact (SCHUKO) 30 mA black matt - Platform 63	3120 EUCB-885	1	piece
2CKA003117A0009	Buschmat RCD - Insert RCD 30 mA anthracite - Platform 63	3151 UC-81	1	piece

2CKA003117A0005	Buschmat RCD - Insert RCD 30 mA ivory white - Platform 63	3151 UC-82	1	piece
2CKA003117A0010	Buschmat RCD - Insert RCD 30 mA aluminium silver - Platform 63	3151 UC-83	1	piece
2CKA003117A0006	Buschmat RCD - Insert RCD 30 mA studio white - Platform 63	3151 UC-84	1	piece
2CKA003117A0012	Buschmat RCD - Insert RCD 30 mA studio white matt - Platform 63	3151 UC-884	1	piece
2CKA003117A0013	Buschmat RCD - Insert RCD 30 mA black matt - Platform 63	3151 UC-885	1	piece
2CKA006115A0483	6108/61-81-500 Coverplate f. CE	6108/61-81-500	1	piece
2CKA006115A0484	6108/61-82-500 Coverplate f. CE	6108/61-82-500	1	piece
2CKA006115A0485	6108/61-83-500 Coverplate f. CE	6108/61-83-500	1	piece
2CKA006155A0121	6108/61-840-500 Coverplate f. CE	6108/61-840-500	1	piece
2CKA006115A0486	6108/61-84-500 Coverplate f. CE	6108/61-84-500	1	piece
2CKA006115A0487	6108/61-884-500 Coverplate f. CE	6108/61-884-500	1	piece
2CKA006115A0488	6108/61-885-500 Coverplate f. CE	6108/61-885-500	1	piece
2CKA006155A0060	6109/03-81-500 Coverplate f. RTC	6109/03-81-500	1	piece
2CKA006155A0061	6109/03-82-500 Coverplate f. RTC	6109/03-82-500	1	piece
2CKA006155A0062	6109/03-83-500 Coverplate f. RTC	6109/03-83-500	1	piece
2CKA006155A0114	6109/03-840-500 Coverplate f. RTC	6109/03-840-500	1	piece
2CKA006155A0063	6109/03-84-500 Coverplate f. RTC	6109/03-84-500	1	piece
2CKA006155A0064	6109/03-884-500 Coverplate f. RTC	6109/03-884-500	1	piece
2CKA006155A0065	6109/03-885-500 Coverplate f. RTC	6109/03-885-500	1	piece
2CKA006132A0376	Horizontal 0 ... 180 ° Presence Detection anthracite	6122/10-81-500	1	piece
2CKA006132A0377	Horizontal 0 ... 180 ° Presence Detection ivory white	6122/10-82-500	1	piece
2CKA006132A0378	Horizontal 0 ... 180 ° Presence Detection aluminium silver	6122/10-83-500	1	piece
2CKA006132A0407	6122/10-840-500 BW standard	6122/10-840-500	1	piece
2CKA006132A0379	Horizontal 0 ... 180 ° Presence Detection studio white	6122/10-84-500	1	piece
2CKA006132A0380	Horizontal 0 ... 180 ° Presence Detection studio white matt	6122/10-884-500	1	piece
2CKA006132A0381	Horizontal 0 ... 180 ° Presence Detection black matt	6122/10-885-500	1	piece
2CKA006115A0452	6125/02-840-500 cont.-element KNX 1g	6125/02-840-500	1	piece
2CKA006116A0227	6126/02-840-500 cont.-element KNX 2g	6126/02-840-500	1	piece
2CKA006117A0252	6127/02-840-500 cont.-element KNX 4g	6127/02-840-500	1	piece
2CKA006134A0342	6128/28-840-500 RTC Control element 2/4g	6128/28-840-500	1	piece

2CKA006138A0005	6138/11-83-500 RTR Fan Coil with Display, SM	6138/11-83-500	1	piece
2CKA006138A0003	6138/11-84-500 RTR Fan Coil with Display, SM	6138/11-84-500	1	piece
2CKA006200A0295	Kits 1gang studio white - future linear	62851 UJ-84-WL-500	1	piece
2CKA006430A0326	Busch-Jalousiecontrol® II Control element with legend Symbol "arrows" for Venetian blind Single rocker anthracite - Platform 63	6430-81-102	1	piece
2CKA006430A0327	Busch-Jalousiecontrol® II Control element with legend Symbol "arrows" for Venetian blind Single rocker ivory white - Platform 63	6430-82-102	1	piece
2CKA006430A0328	Busch-Jalousiecontrol® II Control element with legend Symbol "arrows" for Venetian blind Single rocker aluminium silver - Platform 63	6430-83-102	1	piece
2CKA006430A0400	Electronic Controls Symbol "arrows" for Venetian blind studio white - Platform 63	6430-84-102-500	1	piece
2CKA006430A0385	Busch-Jalousiecontrol® II Control element with legend Symbol "arrows" for Venetian blind Single rocker studio white matt - Platform 63	6430-884-102	1	piece
2CKA006430A0386	Busch-Jalousiecontrol® II Control element with legend Symbol "arrows" for Venetian blind Single rocker black matt - Platform 63	6430-885-102	1	piece
2CKA006430A0303	Cover plate with legend Symbols "play, up, down, ok" for Time switch Central cover plate anthracite - Platform 63	6435-81	1	piece
2CKA006430A0304	Cover plate with legend Symbols "play, up, down, ok" for Time switch Central cover plate ivory white - Platform 63	6435-82	1	piece
2CKA006430A0305	Cover plate with legend Symbols "play, up, down, ok" for Time switch Central cover plate aluminium silver - Platform 63	6435-83	1	piece
2CKA006430A0306	Cover plate with legend Symbols "play, up, down, ok" for Time switch Central cover plate studio white - Platform 63	6435-84	1	piece
2CKA006430A0388	Cover plate with legend Symbols "play, up, down, ok" for Time switch Central cover plate studio white matt - Platform 63	6435-884	1	piece
2CKA006430A0389	Cover plate with legend Symbols "play, up, down, ok" for Time switch Central cover plate black matt - Platform 63	6435-885	1	piece
2CKA006400A0056	Cover plate PowerDock 1 gang anthracite - Platform 63	6477-81	1	piece
2CKA006400A0057	Cover plate PowerDock 1 gang ivory white - Platform 63	6477-82	1	piece
2CKA006400A0058	Cover plate PowerDock 1 gang aluminium silver - Platform 63	6477-83	1	piece
2CKA006400A0059	Cover plate PowerDock 1 gang studio white - Platform 63	6477-84	1	piece
2CKA006400A0062	Cover plate PowerDock 1 gang studio white matt - Platform 63	6477-884	1	piece
2CKA006400A0063	Cover plate PowerDock 1 gang black matt - Platform 63	6477-885	1	piece
2CKA006400A0047	Kits studio white - future linear	6480/11-84-500	1	piece
2CKA006400A0045	Multimedia Devices studio white - future linear	6480-84-500	1	piece
2CKA006599A2950	Cover plate for Dimmer Turn button with Neon lamp anthracite - Platform 63	6540-81-102	1	piece
2CKA006599A2951	Cover plate for Dimmer Turn button with Neon lamp ivory white - Platform 63	6540-82-102	1	piece
2CKA006599A2952	Cover plate for Dimmer Turn button with Neon lamp aluminium silver - Platform 63	6540-83-102	1	piece

2CKA006599A3009	Electronic Controls for Dimmer Turn button studio white - Platform 63	6540-84-102-500	1	piece
2CKA006599A2961	Cover plate for Dimmer Turn button with Neon lamp studio white matt - Platform 63	6540-884-102	1	piece
2CKA006599A2966	Cover plate for Dimmer Turn button with Neon lamp black matt - Platform 63	6540-885-102	1	piece
2CKA006599A2882	Cover plate for Cooling Central cover plate anthracite - Platform 63	6541-81	1	piece
2CKA006599A2832	Cover plate for Cooling Central cover plate ivory white - Platform 63	6541-82	1	piece
2CKA006599A2885	Cover plate for Cooling Central cover plate aluminium silver - Platform 63	6541-83	1	piece
2CKA006599A2835	Cover plate for Cooling Central cover plate studio white - Platform 63	6541-84	1	piece
2CKA006599A2962	Cover plate for Cooling Central cover plate studio white matt - Platform 63	6541-884	1	piece
2CKA006599A2967	Cover plate for Cooling Central cover plate black matt - Platform 63	6541-885	1	piece
2CKA006599A2881	Control Element for Switch/dimmer Single push button anthracite - Platform 63	6543-81-101	1	piece
2CKA006599A2831	Control Element for Switch/dimmer Single push button ivory white - Platform 63	6543-82-101	1	piece
2CKA006599A2887	Control Element for Switch/dimmer Single push button aluminium silver - Platform 63	6543-83-101	1	piece
2CKA006599A3010	Electronic Controls for Switch/dimmer Single push button studio white - Platform 63	6543-84-101-500	1	piece
2CKA006599A2963	Control Element for Switch/dimmer Single push button studio white matt - Platform 63	6543-884-101	1	piece
2CKA006599A2968	Control Element for Switch/dimmer Single push button black matt - Platform 63	6543-885-101	1	piece
2CKA006599A2906	Control Element for Dimmer Two-part button with Neon lamp anthracite - Platform 63	6545-81	1	piece
2CKA006599A2907	Control Element for Dimmer Two-part button with Neon lamp ivory white - Platform 63	6545-82	1	piece
2CKA006599A2914	Control Element for Dimmer Two-part button with Neon lamp aluminium silver - Platform 63	6545-83	1	piece
2CKA006599A2908	Control Element for Dimmer Two-part button with Neon lamp studio white - Platform 63	6545-84	1	piece
2CKA006599A2964	Control Element for Dimmer Two-part button with Neon lamp studio white matt - Platform 63	6545-884	1	piece
2CKA006599A2969	Control Element for Dimmer Two-part button with Neon lamp black matt - Platform 63	6545-885	1	piece
2CKA006710A0015	Smart switch insert Smart switch 4 chan. Wireless white - Platform 63	6716 UBT	1	piece
2CKA006710A0011	Friends of Hue smart switch set 4 chan. Wireless studio white - future linear	6716 UJ-84-500	1	piece
2CKA006710A0018	Friends of Hue smart switch set 4 channel Wireless black matt - Platform 63	6716 UJ-885-500	1	piece
2CKA006730A0156	Smart switch set 4 chan. Wireless studio white - future linear	6716/01 UJ-84-500	1	piece
2CKA006730A0157	Smart switch set 4 channel Wireless black matt - Platform 63	6716/01 UJ-885-500	1	piece
2CKA006730A0142	Rocker for Smart switch Single rocker anthracite - Platform 63	6735 BT-81	1	piece
2CKA006730A0143	Rocker for Smart switch Single rocker ivory white - Platform 63	6735 BT-82	1	piece
2CKA006730A0144	Rocker for Smart switch Single rocker aluminium silver - Platform 63	6735 BT-83	1	piece
2CKA006730A0145	Rocker for Smart switch Single rocker studio white - Platform 63	6735 BT-84	1	piece

2CKA006730A0149	Rocker for Smart switch Single rocker studio white matt - Platform 63	6735 BT-884	1	piece
2CKA006730A0150	Rocker for Smart switch Single rocker black matt - Platform 63	6735 BT-885	1	piece
2CKA006730A0164	Rocker for Smart switch Single rocker studio white - Platform 63	6735/10-84	1	piece
2CKA006730A0133	Rocker for Smart switch Two-part rocker anthracite - Platform 63	6736 FoH-81	1	piece
2CKA006730A0134	Rocker for Smart switch Two-part rocker ivory white - Platform 63	6736 FoH-82	1	piece
2CKA006730A0135	Rocker for Smart switch Two-part rocker aluminium silver - Platform 63	6736 FoH-83	1	piece
2CKA006730A0136	Rocker for Smart switch Two-part rocker studio white - Platform 63	6736 FoH-84	1	piece
2CKA006730A0140	Rocker for Smart switch Two-part rocker studio white matt - Platform 63	6736 FoH-884	1	piece
2CKA006730A0141	Rocker for Smart switch Two-part rocker black matt - Platform 63	6736 FoH-885	1	piece
2CKA006730A0165	Rocker for Smart switch Two-part rocker studio white - Platform 63	6736/10-84	1	piece
2CKA008200A0078	Cover plate Loudspeaker anthracite - Platform 63	8253-81	1	piece
2CKA008200A0079	Cover plate Loudspeaker ivory white - Platform 63	8253-82	1	piece
2CKA008200A0080	Cover plate Loudspeaker aluminium silver - Platform 63	8253-83	1	piece
2CKA008200A0081	Cover plate Loudspeaker studio white - Platform 63	8253-84	1	piece
2CKA008200A0123	Cover plate Loudspeaker studio white matt - Platform 63	8253-884	1	piece
2CKA008200A0126	Cover plate Loudspeaker black matt - Platform 63	8253-885	1	piece
2CKA008200A0227	Cover plate Multimedia 3 gang anthracite - Platform 63	8256-81	1	piece
2CKA008200A0229	Cover plate Multimedia 3 gang ivory white - Platform 63	8256-82	1	piece
2CKA008200A0225	Cover plate Multimedia 3 gang aluminium silver - Platform 63	8256-83	1	piece
2CKA008200A0224	Cover plate Multimedia 3 gang studio white - Platform 63	8256-84	1	piece
2CKA008200A0226	Cover plate Multimedia 3 gang studio white matt - Platform 63	8256-884	1	piece
2CKA008200A0228	Cover plate Multimedia 3 gang black matt - Platform 63	8256-885	1	piece
2CKA006220A0566	CP-FCC-803 C-plate Fan Coil	CP-FCC-803	1	piece
2CKA006220A0242	CP-FCC-81 C-plate Fan Coil	CP-FCC-81	1	piece
2CKA006220A0532	CP-FCC-82 C-plate Fan Coil	CP-FCC-82	1	piece
2CKA006220A0243	CP-FCC-83 C-plate Fan Coil	CP-FCC-83	1	piece
2CKA006220A0244	CP-FCC-84 C-plate Fan Coil	CP-FCC-84	1	piece
2CKA006220A0617	CP-FCC-884 C-plate Fan Coil	CP-FCC-884	1	piece
2CKA006220A0634	CP-FCC-885 C-plate Fan Coil	CP-FCC-885	1	piece
2CKA006220A0563	CP-RTC-803 C-plate RT sensor unit	CP-RTC-803	1	piece
2CKA006220A0179	CP-RTC-81 C-plate RT sensor unit	CP-RTC-81	1	piece
2CKA006220A0529	CP-RTC-82 C-plate RT sensor unit	CP-RTC-82	1	piece
2CKA006220A0180	CP-RTC-83 C-plate RT sensor unit	CP-RTC-83	1	piece
2CKA006220A0181	CP-RTC-84 C-plate RT sensor unit	CP-RTC-84	1	piece
2CKA006220A0384	CP-RTC-840 c-plate temp.	CP-RTC-840	1	piece
2CKA006220A0614	CP-RTC-884 C-plate RT sensor unit	CP-RTC-884	1	piece
2CKA006220A0631	CP-RTC-885 C-plate RT sensor unit	CP-RTC-885	1	piece

2CKA006199A0279	Cover plate with legend with Symbol "arrows" LFAW/A.1.63.1-anthracite - Platform 63	81	1	piece
2CKA006199A0280	Cover plate control element with Symbol "arrows" ivory white - Platform 63	82	1	piece
2CKA006199A0281	Cover plate with legend with Symbol "arrows" aluminium silver - Platform 63	83	1	piece
2CKA006199A0282	Cover plate with legend with Symbol "arrows" studio white - Platform 63	84	1	piece
2CKA006199A0283	Cover plate with legend with Symbol "arrows" studio white matt - Platform 63	884	1	piece
2CKA006199A0284	Cover plate with legend with Symbol "arrows" black matt - Platform 63	885	1	piece
2CKA006199A0319	Cover plate with legend with Symbol "arrows" anthracite - Platform 63	81	1	piece
2CKA006199A0320	Cover plate with legend with Symbol "arrows" ivory white - Platform 63	82	1	piece
2CKA006199A0321	Cover plate with legend with Symbol "arrows" aluminium silver - Platform 63	83	1	piece
2CKA006199A0322	Cover plate with legend with Symbol "arrows" studio white - Platform 63	84	1	piece
2CKA006199A0323	Cover plate with legend with Symbol "arrows" studio white matt - Platform 63	884	1	piece
2CKA006199A0324	Cover plate with legend with Symbol "arrows" black matt - Platform 63	885	1	piece
2CKA006199A0134	Cover plate with legend with Symbol "light" LFBT/A.1.63.1-anthracite - Platform 63	81	1	piece
2CKA006199A0135	Cover plate with legend with Symbol "light" ivory white - Platform 63	82	1	piece
2CKA006199A0136	Cover plate with legend with Symbol "light" aluminium silver - Platform 63	83	1	piece
2CKA006199A0137	Cover plate with legend with Symbol "light" studio white - Platform 63	84	1	piece
2CKA006199A0138	Cover plate with legend with Symbol "light" studio white matt - Platform 63	884	1	piece
2CKA006199A0139	Cover plate with legend with Symbol "light" black matt - Platform 63	885	1	piece
2CKA006199A0287	Cover plate with legend with Symbol "light" anthracite - Platform 63	81	1	piece
2CKA006199A0288	Cover plate with legend with Symbol "light" ivory white - Platform 63	82	1	piece
2CKA006199A0289	Cover plate with legend with Symbol "light" aluminium silver - Platform 63	83	1	piece
2CKA006199A0290	Cover plate with legend with Symbol "light" studio white - Platform 63	84	1	piece
2CKA006199A0291	Cover plate with legend with Symbol "light" studio white matt - Platform 63	884	1	piece
2CKA006199A0292	Cover plate with legend with Symbol "light" black matt - Platform 63	885	1	piece
2CKA006199A0263	Cover plate with legend with Symbol LFDW/A.1.63.1-"dimming" anthracite - Platform 63	-81	1	piece
2CKA006199A0264	Cover plate control element with Symbol "dimming" ivory white - Platform 63	-82	1	piece
2CKA006199A0265	Cover plate with legend with Symbol LFDW/A.1.63.1-"dimming" aluminium silver - Platform 63	-83	1	piece
2CKA006199A0266	Cover plate with legend with Symbol "dimming" studio white - Platform 63	-84	1	piece
2CKA006199A0267	Cover plate with legend with Symbol LFDW/A.1.63.1-"dimming" studio white matt - Platform 63	-884	1	piece
2CKA006199A0268	Cover plate with legend with Symbol LFDW/A.1.63.1-"dimming" black matt - Platform 63	-885	1	piece

2CKA006199A0311	Cover plate with legend with Symbol "arrows/venetian blind" and "dimmer" anthracite - Platform 63	LFDW/A.2.63.1-81	1	piece
2CKA006199A0312	Cover plate control element with Symbol "dimming" ivory white - Platform 63	LFDW/A.2.63.1-82	1	piece
2CKA006199A0313	Cover plate with legend with Symbol "arrows/venetian blind" and "dimmer" aluminium silver - Platform 63	LFDW/A.2.63.1-83	1	piece
2CKA006199A0314	Cover plate with legend with Symbol "arrows/venetian blind" and "dimmer" studio white - Platform 63	LFDW/A.2.63.1-84	1	piece
2CKA006199A0315	Cover plate with legend with Symbol "arrows/venetian blind" and "dimmer" studio white matt - Platform 63	LFDW/A.2.63.1-884	1	piece
2CKA006199A0316	Cover plate with legend with Symbol "arrows/venetian blind" and "dimmer" black matt - Platform 63	LFDW/A.2.63.1-885	1	piece
2CKA006199A0143	Cover plate with legend with Symbol "venetian blind" anthracite - Platform 63	LFJT/A.1.63.1-81	1	piece
2CKA006199A0144	Cover plate control element with Symbol "venetian blind" ivory white - Platform 63	LFJT/A.1.63.1-82	1	piece
2CKA006199A0145	Cover plate with legend with Symbol "venetian blind" aluminium silver - Platform 63	LFJT/A.1.63.1-83	1	piece
2CKA006199A0146	Cover plate with legend with Symbol "venetian blind" studio white - Platform 63	LFJT/A.1.63.1-84	1	piece
2CKA006199A0147	Cover plate with legend with Symbol "venetian blind" studio white matt - Platform 63	LFJT/A.1.63.1-884	1	piece
2CKA006199A0148	Cover plate with legend with Symbol "venetian blind" black matt - Platform 63	LFJT/A.1.63.1-885	1	piece
2CKA006199A0295	Cover plate with legend with Symbol "venetian blind" anthracite - Platform 63	LFJT/A.2.63.1-81	1	piece
2CKA006199A0296	Cover plate control element with Symbol "venetian blind" ivory white - Platform 63	LFJT/A.2.63.1-82	1	piece
2CKA006199A0297	Cover plate with legend with Symbol "venetian blind" aluminium silver - Platform 63	LFJT/A.2.63.1-83	1	piece
2CKA006199A0298	Cover plate with legend with Symbol "venetian blind" studio white - Platform 63	LFJT/A.2.63.1-84	1	piece
2CKA006199A0299	Cover plate with legend with Symbol "venetian blind" studio white matt - Platform 63	LFJT/A.2.63.1-884	1	piece
2CKA006199A0300	Cover plate with legend with Symbol "venetian blind" black matt - Platform 63	LFJT/A.2.63.1-885	1	piece
2CKA006199A0271	Cover plate with legend with Symbol "venetian blind" anthracite - Platform 63	LFJW/A.1.63.1-81	1	piece
2CKA006199A0272	Cover plate with legend with Symbol "venetian blind" ivory white - Platform 63	LFJW/A.1.63.1-82	1	piece
2CKA006199A0273	Cover plate with legend with Symbol "venetian blind" aluminium silver - Platform 63	LFJW/A.1.63.1-83	1	piece
2CKA006199A0274	Cover plate with legend with Symbol "venetian blind" studio white - Platform 63	LFJW/A.1.63.1-84	1	piece
2CKA006199A0275	Cover plate with legend with Symbol "venetian blind" studio white matt - Platform 63	LFJW/A.1.63.1-884	1	piece
2CKA006199A0276	Cover plate with legend with Symbol "venetian blind" black matt - Platform 63	LFJW/A.1.63.1-885	1	piece
2CKA006199A0327	Cover plate with legend with Symbols "music control" anthracite - Platform 63	LFMW/A.4.63.1-81	1	piece
2CKA006199A0328	Cover plate with legend with Symbols "music control" ivory white - Platform 63	LFMW/A.4.63.1-82	1	piece
2CKA006199A0329	Cover plate with legend with Symbols "music control" aluminium silver - Platform 63	LFMW/A.4.63.1-83	1	piece
2CKA006199A0330	Cover plate with legend with Symbols "music control" studio white - Platform 63	LFMW/A.4.63.1-84	1	piece

2CKA006199A0331	Cover plate with legend with Symbols "music LFMW/A.4.63. control" studio white matt - Platform 63	1-884	1	piece
2CKA006199A0332	Cover plate with legend with Symbols "music LFMW/A.4.63. control" black matt - Platform 63	1-885	1	piece
2CKA006199A0152	Cover plate with legend with Symbol "scene" LFST/A.1.63.1- anthracite - Platform 63	81	1	piece
2CKA006199A0153	Cover plate with legend with Symbol "scene" LFST/A.1.63.1- ivory white - Platform 63	82	1	piece
2CKA006199A0154	Cover plate with legend with Symbol "scene" LFST/A.1.63.1- aluminium silver - Platform 63	83	1	piece
2CKA006199A0155	Cover plate with legend with Symbol "scene" LFST/A.1.63.1- studio white - Platform 63	84	1	piece
2CKA006199A0156	Cover plate with legend with Symbol "scene" LFST/A.1.63.1- studio white matt - Platform 63	884	1	piece
2CKA006199A0157	Cover plate with legend with Symbol "scene" LFST/A.1.63.1- black matt - Platform 63	885	1	piece
2CKA006199A0303	Cover plate with legend with Symbol "scene" LFST/A.2.63.1- anthracite - Platform 63	81	1	piece
2CKA006199A0304	Cover plate with legend with Symbol "scene" LFST/A.2.63.1- ivory white - Platform 63	82	1	piece
2CKA006199A0305	Cover plate with legend with Symbol "scene" LFST/A.2.63.1- aluminium silver - Platform 63	83	1	piece
2CKA006199A0306	Cover plate with legend with Symbol "scene" LFST/A.2.63.1- studio white - Platform 63	84	1	piece
2CKA006199A0307	Cover plate with legend with Symbol "scene" LFST/A.2.63.1- studio white matt - Platform 63	884	1	piece
2CKA006199A0308	Cover plate with legend with Symbol "scene" LFST/A.2.63.1- black matt - Platform 63	885	1	piece
2CKA006199A0098	Cover plate anthracite - Platform 63	LFW/A.1.63.1- 81	1	piece
2CKA006199A0099	Cover plate ivory white - Platform 63	LFW/A.1.63.1- 82	1	piece
2CKA006199A0100	Cover plate aluminium silver - Platform 63	LFW/A.1.63.1- 83	1	piece
2CKA006199A0101	Cover plate studio white - Platform 63	LFW/A.1.63.1- 84	1	piece
2CKA006199A0102	Cover plate studio white matt - Platform 63	LFW/A.1.63.1- 884	1	piece
2CKA006199A0103	Cover plate black matt - Platform 63	LFW/A.1.63.1- 885	1	piece
2CKA006199A0107	Cover plate anthracite - Platform 63	LFW/A.2.63.1- 81	1	piece
2CKA006199A0108	Cover plate control element ivory white - Platform 63	LFW/A.2.63.1- 82	1	piece
2CKA006199A0109	Cover plate aluminium silver - Platform 63	LFW/A.2.63.1- 83	1	piece
2CKA006199A0110	Cover plate studio white - Platform 63	LFW/A.2.63.1- 84	1	piece
2CKA006199A0111	Cover plate studio white matt - Platform 63	LFW/A.2.63.1- 884	1	piece
2CKA006199A0112	Cover plate black matt - Platform 63	LFW/A.2.63.1- 885	1	piece
2CKA006199A0116	Cover plate anthracite - Platform 63	LFW/A.3.63.1- 81	1	piece
2CKA006199A0117	Cover plate ivory white - Platform 63	LFW/A.3.63.1- 82	1	piece
2CKA006199A0118	Cover plate aluminium silver - Platform 63	LFW/A.3.63.1- 83	1	piece
2CKA006199A0119	Cover plate studio white - Platform 63	LFW/A.3.63.1- 84	1	piece

2CKA006199A0120	Cover plate studio white matt - Platform 63	LFW/A.3.63.1-884	1	piece
2CKA006199A0121	Cover plate black matt - Platform 63	LFW/A.3.63.1-885	1	piece
2CKA006199A0125	Cover plate anthracite - Platform 63	LFW/A.4.63.1-81	1	piece
2CKA006199A0126	Cover plate control element ivory white - Platform 63	LFW/A.4.63.1-82	1	piece
2CKA006199A0127	Cover plate aluminium silver - Platform 63	LFW/A.4.63.1-83	1	piece
2CKA006199A0128	Cover plate studio white - Platform 63	LFW/A.4.63.1-84	1	piece
2CKA006199A0129	Cover plate studio white matt - Platform 63	LFW/A.4.63.1-884	1	piece
2CKA006199A0130	Cover plate black matt - Platform 63	LFW/A.4.63.1-885	1	piece
2CKA006220A0564	MD-F-1.0.1-803 Movement detector	MD-F-1.0.1-803	1	piece
2CKA006220A0212	MD-F-1.0.1-81 Movement detector	MD-F-1.0.1-81	1	piece
2CKA006220A0530	MD-F-1.0.1-82 Movement detector	MD-F-1.0.1-82	1	piece
2CKA006220A0213	MD-F-1.0.1-83 Movement detector	MD-F-1.0.1-83	1	piece
2CKA006220A0214	MD-F-1.0.1-84 Movement detector	MD-F-1.0.1-84	1	piece
2CKA006220A0385	MD-F-1.0.1-840 WD 180 sens	MD-F-1.0.1-840	1	piece
2CKA006220A0615	MD-F-1.0.1-884 Movement detector	MD-F-1.0.1-884	1	piece
2CKA006220A0632	MD-F-1.0.1-885 Movement detector	MD-F-1.0.1-885	1	piece
2CKA006220A0565	MSA-F-1.1.1-803 Mov. detector/actuator 1g	MSA-F-1.1.1-803	1	piece
2CKA006220A0215	MSA-F-1.1.1-81 Mov. detector/actuator 1g	MSA-F-1.1.1-81	1	piece
2CKA006220A0216	MSA-F-1.1.1-83 Mov. detector/actuator 1g	MSA-F-1.1.1-83	1	piece
2CKA006220A0217	MSA-F-1.1.1-84 Mov. detector/actuator 1g	MSA-F-1.1.1-84	1	piece
2CKA006220A0386	MSA-F-1.1.1-840 WD 180 sens actuator	MSA-F-1.1.1-840	1	piece
2CKA006220A0616	MSA-F-1.1.1-884 Mov. detector/actuator 1g	MSA-F-1.1.1-884	1	piece
2CKA006220A0633	MSA-F-1.1.1-885 Mov. detector/actuator 1g	MSA-F-1.1.1-885	1	piece
2CKA006220A0550	Electronic Controls grey metallic - Platform 63	SR-1-803	1	piece
2CKA006220A0137	Rocker anthracite - Platform 63	SR-1-81	1	piece
2CKA006220A0516	Rocker ivory white - Platform 63	SR-1-82	1	piece
2CKA006220A0138	Rocker aluminium silver - Platform 63	SR-1-83	1	piece
2CKA006220A0139	Rocker studio white - Platform 63	SR-1-84	1	piece
2CKA006220A0371	Rocker antique brass - Platform 63	SR-1-840	1	piece
2CKA006220A0601	Rocker studio white matt - Platform 63	SR-1-884	1	piece
2CKA006220A0618	Rocker black matt - Platform 63	SR-1-885	1	piece
2CKA006220A0555	Electronic Controls grey metallic - Platform 63	SR-2-803	1	piece
2CKA006220A0152	Rocker anthracite - Platform 63	SR-2-81	1	piece
2CKA006220A0521	Rocker ivory white - Platform 63	SR-2-82	1	piece
2CKA006220A0153	Rocker aluminium silver - Platform 63	SR-2-83	1	piece
2CKA006220A0154	Rocker studio white - Platform 63	SR-2-84	1	piece
2CKA006220A0376	Rocker antique brass - Platform 63	SR-2-840	1	piece
2CKA006220A0606	Rocker studio white matt - Platform 63	SR-2-884	1	piece
2CKA006220A0623	Rocker black matt - Platform 63	SR-2-885	1	piece
2CKA006220A0552	Electronic Controls grey metallic - Platform 63	SRB-1-803	1	piece
2CKA006220A0143	Rocker anthracite - Platform 63	SRB-1-81	1	piece
2CKA006220A0518	Rocker ivory white - Platform 63	SRB-1-82	1	piece

2CKA006220A0144	Rocker aluminium silver - Platform 63	SRB-1-83	1	piece
2CKA006220A0145	Rocker studio white - Platform 63	SRB-1-84	1	piece
2CKA006220A0373	Rocker antique brass - Platform 63	SRB-1-840	1	piece
2CKA006220A0603	Rocker studio white matt - Platform 63	SRB-1-884	1	piece
2CKA006220A0620	Rocker black matt - Platform 63	SRB-1-885	1	piece
2CKA006220A0557	Electronic Controls grey metallic - Platform 63	SRB-2-803	1	piece
2CKA006220A0158	Rocker Symbol "arrows" anthracite - Platform 63	SRB-2-81	1	piece
2CKA006220A0523	Rocker Symbol "arrows" ivory white - Platform 63	SRB-2-82	1	piece
2CKA006220A0159	Rocker Symbol "arrows" aluminium silver - Platform 63	SRB-2-83	1	piece
2CKA006220A0160	Rocker Symbol "arrows" studio white - Platform 63	SRB-2-84	1	piece
2CKA006220A0378	Rocker Symbol "arrows" antique brass - Platform 63	SRB-2-840	1	piece
2CKA006220A0608	Rocker Symbol "arrows" studio white matt - Platform 63	SRB-2-884	1	piece
2CKA006220A0625	Rocker Symbol "arrows" black matt - Platform 63	SRB-2-885	1	piece
2CKA006220A0554	Electronic Controls grey metallic - Platform 63	SRD-1-803	1	piece
2CKA006220A0149	Rocker Symbol "dimming" anthracite - Platform 63	SRD-1-81	1	piece
2CKA006220A0520	Rocker Symbol "dimming" ivory white - Platform 63	SRD-1-82	1	piece
2CKA006220A0150	Rocker Symbol "dimming" aluminium silver - Platform 63	SRD-1-83	1	piece
2CKA006220A0151	Rocker Symbol "dimming" studio white - Platform 63	SRD-1-84	1	piece
2CKA006220A0375	Rocker Symbol "dimming" antique brass - Platform 63	SRD-1-840	1	piece
2CKA006220A0605	Rocker Symbol "dimming" studio white matt - Platform 63	SRD-1-884	1	piece
2CKA006220A0622	Rocker Symbol "dimming" black matt - Platform 63	SRD-1-885	1	piece
2CKA006220A0559	Electronic Controls grey metallic - Platform 63	SRD-2-L-803	1	piece
2CKA006220A0164	Rocker Symbol "dimming" anthracite - Platform 63	SRD-2-L-81	1	piece
2CKA006220A0525	Rocker Symbol "dimming" ivory white - Platform 63	SRD-2-L-82	1	piece
2CKA006220A0165	Rocker Symbol "dimming" aluminium silver - Platform 63	SRD-2-L-83	1	piece
2CKA006220A0166	Rocker Symbol "dimming" studio white - Platform 63	SRD-2-L-84	1	piece
2CKA006220A0380	Rocker Symbol "dimming" antique brass - Platform 63	SRD-2-L-840	1	piece
2CKA006220A0610	Rocker Symbol "dimming" studio white matt - Platform 63	SRD-2-L-884	1	piece
2CKA006220A0627	Rocker Symbol "dimming" black matt - Platform 63	SRD-2-L-885	1	piece
2CKA006220A0560	Electronic Controls grey metallic - Platform 63	SRD-2-R-803	1	piece
2CKA006220A0258	Rocker Symbol "dimming" anthracite - Platform 63	SRD-2-R-81	1	piece
2CKA006220A0526	Rocker Symbol "dimming" ivory white - Platform 63	SRD-2-R-82	1	piece
2CKA006220A0259	Rocker Symbol "dimming" aluminium silver - Platform 63	SRD-2-R-83	1	piece
2CKA006220A0260	Rocker Symbol "dimming" studio white - Platform 63	SRD-2-R-84	1	piece

2CKA006220A0383	Rocker Symbol "dimming" antique brass - Platform 63	SRD-2-R-840	1	piece
2CKA006220A0611	Rocker Symbol "dimming" studio white matt - Platform 63	SRD-2-R-884	1	piece
2CKA006220A0628	Rocker Symbol "dimming" black matt - Platform 63	SRD-2-R-885	1	piece
2CKA006220A0551	Electronic Controls grey metallic - Platform 63	SRL-1-803	1	piece
2CKA006220A0140	Rocker Symbol "light" anthracite - Platform 63	SRL-1-81	1	piece
2CKA006220A0517	Rocker Symbol "light" ivory white - Platform 63	SRL-1-82	1	piece
2CKA006220A0141	Rocker Symbol "light" aluminium silver - Platform 63	SRL-1-83	1	piece
2CKA006220A0142	Rocker Symbol "light" studio white - Platform 63	SRL-1-84	1	piece
2CKA006220A0372	Rocker Symbol "light" antique brass - Platform 63	SRL-1-840	1	piece
2CKA006220A0602	Rocker Symbol "light" studio white matt - Platform 63	SRL-1-884	1	piece
2CKA006220A0619	Rocker Symbol "light" black matt - Platform 63	SRL-1-885	1	piece
2CKA006220A0556	Electronic Controls grey metallic - Platform 63	SRL-2-L-803	1	piece
2CKA006220A0155	Rocker Symbol "light" anthracite - Platform 63	SRL-2-L-81	1	piece
2CKA006220A0522	Rocker Symbol "light" ivory white - Platform 63	SRL-2-L-82	1	piece
2CKA006220A0156	Rocker Symbol "light" aluminium silver - Platform 63	SRL-2-L-83	1	piece
2CKA006220A0157	Rocker Symbol "light" studio white - Platform 63	SRL-2-L-84	1	piece
2CKA006220A0377	Rocker Symbol "light" antique brass - Platform 63	SRL-2-L-840	1	piece
2CKA006220A0607	Rocker Symbol "light" studio white matt - Platform 63	SRL-2-L-884	1	piece
2CKA006220A0624	Rocker Symbol "light" black matt - Platform 63	SRL-2-L-885	1	piece
2CKA006220A0561	Electronic Controls grey metallic - Platform 63	SRL-2-R-803	1	piece
2CKA006220A0167	Rocker Symbol "light" anthracite - Platform 63	SRL-2-R-81	1	piece
2CKA006220A0527	Rocker Symbol "light" ivory white - Platform 63	SRL-2-R-82	1	piece
2CKA006220A0168	Rocker Symbol "light" aluminium silver - Platform 63	SRL-2-R-83	1	piece
2CKA006220A0169	Rocker Symbol "light" studio white - Platform 63	SRL-2-R-84	1	piece
2CKA006220A0381	Rocker Symbol "light" antique brass - Platform 63	SRL-2-R-840	1	piece
2CKA006220A0612	Rocker Symbol "light" studio white matt - Platform 63	SRL-2-R-884	1	piece
2CKA006220A0629	Rocker Symbol "light" black matt - Platform 63	SRL-2-R-885	1	piece
2CKA006220A0553	Electronic Controls grey metallic - Platform 63	SRS-1-803	1	piece
2CKA006220A0146	Rocker Symbol "scene" anthracite - Platform 63	SRS-1-81	1	piece
2CKA006220A0519	Rocker Symbol "scene" ivory white - Platform 63	SRS-1-82	1	piece
2CKA006220A0147	Rocker Symbol "scene" aluminium silver - Platform 63	SRS-1-83	1	piece
2CKA006220A0148	Rocker Symbol "scene" studio white - Platform 63	SRS-1-84	1	piece
2CKA006220A0374	Rocker Symbol "scene" antique brass - Platform 63	SRS-1-840	1	piece
2CKA006220A0604	Rocker Symbol "scene" studio white matt - Platform 63	SRS-1-884	1	piece
2CKA006220A0621	Rocker Symbol "scene" black matt - Platform 63	SRS-1-885	1	piece
2CKA006220A0558	Electronic Controls grey metallic - Platform 63	SRS-2-L-803	1	piece
2CKA006220A0161	Rocker Symbol "scene" anthracite - Platform 63	SRS-2-L-81	1	piece

2CKA006220A0524	Rocker Symbol "scene" ivory white - Platform 63	SRS-2-L-82	1	piece
2CKA006220A0162	Rocker Symbol "scene" aluminium silver - Platform 63	SRS-2-L-83	1	piece
2CKA006220A0163	Rocker Symbol "scene" studio white - Platform 63	SRS-2-L-84	1	piece
2CKA006220A0379	Rocker Symbol "scene" antique brass - Platform 63	SRS-2-L-840	1	piece
2CKA006220A0609	Rocker Symbol "scene" studio white matt - Platform 63	SRS-2-L-884	1	piece
2CKA006220A0626	Rocker Symbol "scene" black matt - Platform 63	SRS-2-L-885	1	piece
2CKA006220A0562	Electronic Controls grey metallic - Platform 63	SRS-2-R-803	1	piece
2CKA006220A0173	Rocker Symbol "scene" anthracite - Platform 63	SRS-2-R-81	1	piece
2CKA006220A0528	Rocker Symbol "scene" ivory white - Platform 63	SRS-2-R-82	1	piece
2CKA006220A0174	Rocker Symbol "scene" aluminium silver - Platform 63	SRS-2-R-83	1	piece
2CKA006220A0175	Rocker Symbol "scene" studio white - Platform 63	SRS-2-R-84	1	piece
2CKA006220A0382	Rocker Symbol "scene" antique brass - Platform 63	SRS-2-R-840	1	piece
2CKA006220A0613	Rocker Symbol "scene" studio white matt - Platform 63	SRS-2-R-884	1	piece
2CKA006220A0630	Rocker Symbol "scene" black matt - Platform 63	SRS-2-R-885	1	piece
2CKA001032A0523	Room Temperature Controller set studio white - future linear	1098 UJ-84	1	piece
2CKA001731A1976	Cover Busch-Infolicht® grey metallic - Platform 63	1716-803	1	piece
2CKA001710A4119	Cover plate with legend Level switch Turn button grey metallic - Platform 63	1740 DR/03-803	1	piece
2CKA001710A4121	Mechanical Controls Symbol "2-1-3" for Level switch, Turn button grey metallic - Platform 63	1740 DRL-803-503	1	piece
2CKA001710A3840	Cover plate with legend Symbol "arrows" for Venetian blind, Turn button grey metallic - Platform 63	1740-803	1	piece
2CKA001710A3843	Cover plate Blind cap 1 gang 0 gang with Mounting plate grey metallic - Platform 63	1742-803	1	piece
2CKA001724A4364	Cover plate SAT 4 gang grey metallic - Platform 63	1743/10-04-803	1	piece
2CKA001724A4373	Cover plate TV / Radio / 2x SAT 4 gang grey metallic - Platform 63	1743-04-803	1	piece
2CKA001724A4291	Cover plate SAT 3 gang grey metallic - Platform 63	1743-803	1	piece
2CKA001710A3855	Cover plate telephone connector boxes (VDo) grey metallic - Platform 63	1745-803	1	piece
2CKA001710A3680	Cover plate with Slider 1 gang aluminium silver - Busch-triton®	1746 ZRKT-83	1	piece
2CKA001710A3857	Cover plate Telecommunication inserts 50 x 50 mm grey metallic - Platform 63	1746/10-803	1	piece
2CKA001710A3858	Cover plate with Hinged Lid Telecommunication inserts 50 x 50 mm grey metallic - Platform 63	1746-803	1	piece
2CKA001710A4092	Intermediate Ring for cover plates Busch-Balance® SI grey metallic - Platform 63	1747 BSI-803	1	piece
2CKA001710A3844	Cover plate Cable outlet with Mounting plate grey metallic - Platform 63	1749-803	1	piece
2CKA001723A0257	Cover plate Loudspeaker 2 gang grey metallic - Platform 63	1751-803	1	piece

2CKA001723A0239	Cover plate Loudspeaker 2 gang ivory white - Platform 63	1751-82	1	piece
2CKA001723A0240	Cover plate Loudspeaker 2 gang studio white - Platform 63	1751-84	1	piece
2CKA001723A0260	Cover plate Loudspeaker 2 gang studio white matt - Platform 63	1751-884	1	piece
2CKA001710A3841	Cover plate with legend Symbol "arrows" or "0 - 1" for Venetian blind, Key grey metallic - Platform 63	1755 SL/PZ-803-101	1	piece
2CKA001724A4292	Cover plate with labelling field For data connection housing grey metallic - Platform 63	1758-803	1	piece
2CKA001731A3997	Rocker with labelling field and legend Symbol "bell" for Switch/push button, Single rocker grey metallic - Platform 63	1764 NLI/KI-803	1	piece
2CKA001731A1975	Rocker with labelling field for Switch/push button, Single rocker grey metallic - Platform 63	1764 NLI-803	1	piece
2CKA001710A3854	Cover plate TAE; UAE / TAE; USB / VGA / HDMI / loudspeaker 1 gang grey metallic - Platform 63	1766-803	1	piece
2CKA001753A0254	Cover plate 1 ... 15 Min for Time switch, Turn button grey metallic - Platform 63	1770-803-103	1	piece
2CKA001753A0264	Cover plate 10 ... 120 Min for Time switch, Turn button grey metallic - Platform 63	1771-803-103	1	piece
2CKA001751A3020	Rocker with legend Symbol "arrows" for Venetian blind, Two-part rocker grey metallic - Platform 63	1785 JA-803	1	piece
2CKA001751A3130	Mechanical Controls with Small Transparent Calotte for Switch/push button, Two-part rocker grey metallic - Platform 63	1785 K-803-500	1	piece
2CKA001751A3215	Rocker with legend DND, MUR 1gang for Switch/push button Two-part rocker grey metallic - Platform 63	1785/11 K-803	1	piece
2CKA001751A3204	Rocker with legend DND, MUR for Switch/push button, Single rocker grey metallic - Platform 63	1785/11-803	1	piece
2CKA001751A3018	Rocker for Switch/push button, Two-part rocker grey metallic - Platform 63	1785-803	1	piece
2CKA001751A3206	Rocker DND for Switch/push button, Single rocker grey metallic - Platform 63	1786/11-803	1	piece
2CKA001751A3093	Mechanical Controls for Switch/push button, Single rocker grey metallic - Platform 63	1786-803-500	1	piece
2CKA001751A3017	Rocker Characters 0 and 1 with Small Red Calotte for Switch/push button, Single rocker grey metallic - Platform 63	1788-803	1	piece
2CKA001751A3019	Rocker with legend Heizung with Small Red Calotte for Switch/push button, Single rocker grey metallic - Platform 63	1789 H-803	1	piece
2CKA001751A3015	Rocker with Small Transparent Calotte for Switch/push button, Single rocker grey metallic - Platform 63	1789 KI-803	1	piece
2CKA001751A3014	Rocker with legend Symbol "light" with Small Transparent Calotte for Switch/push button, Single rocker grey metallic - Platform 63	1789 LI-803	1	piece
2CKA001751A3146	Rocker with Small Transparent Calotte for Switch/push button, Single rocker grey metallic - Platform 63	1789 N-803	1	piece
2CKA001751A3156	Rocker with Small Transparent Calotte for Switch/push button, Single rocker grey metallic - Platform 63	1789 ST-803	1	piece
2CKA001751A3016	Rocker with legend Symbol "key" with Small Transparent Calotte for Switch/push button, Single rocker grey metallic - Platform 63	1789 TR-803	1	piece

2CKA001751A3013	Rocker with Small Red Calotte for Switch/push button, Single rocker grey metallic - Platform 63	1789-803	1	piece
2CKA001710A4133	Cover plate with legend Symbol "card" for Card switch RFID Hotel card grey metallic - Platform 63	1792 RFID-803	1	piece
2CKA001710A4124	Cover plate with legend Card, Symbol "arrows" for Switch/push button, Hotel card grey metallic - Platform 63	1792-803	1	piece
2CKA001710A3849	Cover plate with legend Characters 1 ... 6 for Thermostat Turn button grey metallic - Platform 63	1794 TA-803	1	piece
2CKA001710A3695	Cover plate with legend Characters 1 ... 6 for Thermostat Turn button anthracite - Platform 63	1794 TA-81	1	piece
2CKA001710A3696	Cover plate with legend Characters 1 ... 6 for Thermostat Turn button ivory white - Platform 63	1794 TA-82	1	piece
2CKA001710A3697	Cover plate with legend Characters 1 ... 6 for Thermostat Turn button aluminium silver - Platform 63	1794 TA-83	1	piece
2CKA001710A3698	Cover plate with legend Characters 1 ... 6 for Thermostat Turn button studio white - Platform 63	1794 TA-84	1	piece
2CKA001710A3883	Cover plate with legend Characters 1 ... 6 for Thermostat Turn button studio white matt - Platform 63	1794 TA-884	1	piece
2CKA001710A3906	Cover plate with legend Characters 1 ... 6 for Thermostat Turn button black matt - Platform 63	1794 TA-885	1	piece
2CKA001710A3847	Cover plate with legend Characters 1 ... 6 for Thermostat Turn button grey metallic - Platform 63	1794-803	1	piece
2CKA001710A4012	Cover plate with legend Characters 1 ... 6 for Thermostat Turn button grey metallic - Platform 63	1795 HK-803	1	piece
2CKA001710A4044	Cover plate with legend Characters 1 ... 6 for Thermostat Turn button 1 sliding switch grey metallic - Platform 63	1795 HKEA-803	1	piece
2CKA001710A4045	Cover plate with legend Characters 1 ... 6 for Thermostat Turn button 1 sliding switch anthracite - Platform 63	1795 HKEA-81	1	piece
2CKA001710A4047	Cover plate with legend Characters 1 ... 6 for Thermostat Turn button 1 sliding switch ivory white - Platform 63	1795 HKEA-82	1	piece
2CKA001710A4048	Cover plate with legend Characters 1 ... 6 for Thermostat Turn button 1 sliding switch aluminium silver - Platform 63	1795 HKEA-83	1	piece
2CKA001710A4049	Cover plate with legend Characters 1 ... 6 for Thermostat Turn button 1 sliding switch studio white - Platform 63	1795 HKEA-84	1	piece
2CKA001710A4051	Cover plate with legend Characters 1 ... 6 for Thermostat Turn button 1 sliding switch studio white matt - Platform 63	1795 HKEA-884	1	piece
2CKA001710A4052	Cover plate with legend Characters 1 ... 6 for Thermostat Turn button 1 sliding switch black matt - Platform 63	1795 HKEA-885	1	piece
2CKA001710A3850	Cover plate with legend Characters 1 ... 6 for Thermostat Turn button 1 sliding switch grey metallic - Platform 63	1795 TA-803	1	piece
2CKA001710A3722	Cover plate with legend Characters 1 ... 6 for Thermostat Turn button 1 sliding switch anthracite - Platform 63	1795 TA-81	1	piece

2CKA001710A3723	Cover plate with legend Characters 1 ... 6 for Thermostat Turn button 1 sliding switch ivory white - Platform 63	1795 TA-82	1	piece
2CKA001710A3724	Cover plate with legend Characters 1 ... 6 for Thermostat Turn button 1 sliding switch aluminium silver - Platform 63	1795 TA-83	1	piece
2CKA001710A3725	Cover plate with legend Characters 1 ... 6 for Thermostat Turn button 1 sliding switch studio white - Platform 63	1795 TA-84	1	piece
2CKA001710A3885	Cover plate with legend Characters 1 ... 6 for Thermostat Turn button 1 sliding switch studio white matt - Platform 63	1795 TA-884	1	piece
2CKA001710A3908	Cover plate with legend Characters 1 ... 6 for Thermostat Turn button 1 sliding switch black matt - Platform 63	1795 TA-885	1	piece
2CKA001710A3848	Cover plate with legend Characters 1 ... 6 for Thermostat Turn button 1 sliding switch grey metallic - Platform 63	1795-803	1	piece
2CKA001710A3630	Cover plate with legend Characters 1 ... 6 for Thermostat Turn button 1 sliding switch anthracite - Platform 63	1795-81	1	piece
2CKA001710A3568	Cover plate with legend Characters 1 ... 6 for Thermostat Turn button 1 sliding switch ivory white - Platform 63	1795-82	1	piece
2CKA001710A3669	Cover plate with legend Characters 1 ... 6 for Thermostat Turn button 1 sliding switch aluminium silver - Platform 63	1795-83	1	piece
2CKA001710A3569	Cover plate with legend Characters 1 ... 6 for Thermostat Turn button 1 sliding switch studio white - Platform 63	1795-84	1	piece
2CKA001710A3886	Cover plate with legend Characters 1 ... 6 for Thermostat Turn button 1 sliding switch studio white matt - Platform 63	1795-884	1	piece
2CKA001710A3909	Cover plate with legend Characters 1 ... 6 for Thermostat Turn button 1 sliding switch black matt - Platform 63	1795-885	1	piece
2CKA001753A0307	Cover plate Pull cord grey metallic - Platform 63	1796-803	1	piece
2CKA001710A3856	Cover plate with labelling field Modular Jack 2 gang grey metallic - Platform 63	1800-803	1	piece
2CKA001710A3853	Cover plate with labelling field UAE/IAE (ISDN) 2 gang grey metallic - Platform 63	1803-02-803	1	piece
2CKA001710A3852	Cover plate with labelling field UAE/IAE (ISDN) 1 gang grey metallic - Platform 63	1803-803	1	piece
2CKA002013A5403	Busch-Object socket outlet SCHUKO® socket insert Safety Shutter grey metallic - Platform 63	20 EUAB-803	1	piece
2CKA002011A6216	Socket Outlets grey metallic - Platform 63	20 EUC-803- 500	1	piece
2CKA002013A5414	Busch-Service-Socket SCHUKO® socket insert Safety Shutter grey metallic - Platform 63	20 EUCBDR- 803	1	piece
2CKA002013A5456	SCHUKO® socket insert Safety Shutter withControl light; LED /Green grey metallic -20 Platform 63	20 EUCBL-803	1	piece
2CKA002013A5458	Busch-steplight SCHUKO® socket insert Safety Shutter withNight light; LED /White grey metallic - Platform 63	20 EUCBLI- 803	1	piece
2CKA002013A5462	SCHUKO® Socket insert with legend EDV20 Safety Shutter grey metallic - Platform 63	20 EUCKS/DV- 803	1	piece
2CKA002013A5297	SCHUKO® socket insert Safety Shutter grey metallic - Platform 63	20 EUCKS-803	1	piece
2CKA002013A5426	SCHUKO® Socket insert with labelling field Safety Shutter grey metallic - Platform 63	20 EUCNB-803	1	piece

2CKA002013A5436	SCHUKO® socket insert Safety Shutter grey metallic - Platform 63	20 EUCRB-803	1	piece
2CKA002018A1493	SCHUKO® socket insert with Hinged Lid grey metallic - Platform 63	20 EUK-803	1	piece
2CKA002018A1516	SCHUKO® socket insert Safety Shutter with Hinged Lid grey metallic - Platform 63	20 EUKB-803	1	piece
2CKA002018A1525	SCHUKO® socket insert Safety Shutter with Hinged Lid grey metallic - Platform 63	20 EUKBR-803	1	piece
2CKA002018A1536	SCHUKO® socket insert Safety Shutter with Hinged Lid grey metallic - Platform 63	20 EUKNB-803	1	piece
2CKA002018A1547	SCHUKO® socket insert Safety Shutter with Hinged Lid grey metallic - Platform 63	20 EUKNBL-803	1	piece
2CKA002018A1555	SCHUKO® socket insert Safety Shutter with Hinged Lid and Cylinder Lock with different locking grey metallic - Platform 63	20 EUKNBSL-803	1	piece
2CKA002018A1556	SCHUKO® socket insert Safety Shutter with Hinged Lid and Cylinder Lock with simultaneous locking grey metallic - Platform 63	20 EUKNBSL-803-101	1	piece
2CKA002011A3876	SCHUKO® Socket insert with labelling field grey metallic - Platform 63	20 EUN-803	1	piece
2CKA001751A3166	Bell push-switch DND / MUR insert DND, MUR and Symbol "bell" Single push button 1 pole, 1NO grey metallic - Platform 63	2029 UC-803	1	piece
2CKA001751A3237	Bell push-switch DND / MUR insert DND, MUR and Symbol "bell" Single push button 1 pole, grey metallic - Platform 63	2029/12 UC-803	1	piece
2CKA001751A3226	Rocker with legend DND, MUR for Switch/push button Two-part rocker grey metallic - Platform 63	2058-24-803	1	piece
2CKA001751A3246	Bell push-switch DND / MUR insert DND, MUR and Symbol "bell" 3gang for Switch/push button Single push button with LED grey metallic - Platform 63	2059 UC-803	1	piece
2CKA001510A0005	Cover Busch-iceLight Reflector Ambient / orientation lightning / White transparent - Platform 63	2068/11-84	1	piece
2CKA001510A0008	Cover Busch-iceLight Reflector Ambient / orientation lightning, Infolight transparent - Platform 63	2068/14-84	1	piece
2CKA001510A0017	Cover Busch-iceLight Ambient lightning transparent - Platform 63	2068/22-84	1	piece
2CKA001510A0015	Busch-iceLight set with Night light; LED studio white - future linear	2069/11-84	1	piece
2CKA002495A0097	Socket insert Equipotential compensation grey metallic - Platform 63	2095 UC-803	1	piece
2CKA002190A0224	Socket Outlets grey metallic - Platform 63	2190 EUC-803	1	piece
2CKA002190A0216	Socket Outlets anthracite - Platform 63	2190 EUC-81	1	piece
2CKA002190A0213	Socket Outlets ivory white - Platform 63	2190 EUC-82	1	piece
2CKA002190A0214	Socket Outlets aluminium silver - Platform 63	2190 EUC-83	1	piece
2CKA002190A0215	Socket Outlets studio white - Platform 63	2190 EUC-84	1	piece
2CKA002190A0218	Socket Outlets studio white matt - Platform 63	2190 EUC-884	1	piece
2CKA002013A5473	SCHUKO® socket insert Safety Shutter grey metallic - Platform 63	23 EUCB-803	1	piece
2CKA002013A5447	SCHUKO® socket insert Safety Shutter grey metallic - Platform 63	2300 EUCB-803	1	piece
2CKA002113A5341	Socket Outlets grey metallic - Platform 63	2300 UCRKS-803-503	1	piece
2CKA002011A3877	Busch-Protector® SCHUKO® socket insert with Neon lamp / Red grey metallic - Platform 63	2310 EUGL/VA-803-11	1	piece

2CKA002013A5356	2398 CKS-803 Cover plate shuttered	2398 CKS-803	1	piece
2CKA002099A0253	Socket Outlets Safety Shutter grey metallic - Platform 63	2399 UCKS-803	1	piece
2CKA001719A0216	Intermediate Ring with Hinged Lid for cover plates Busch-Balance® SI 1 gang with Sealing Ring grey metallic - Platform 63	2518-WD-803	1	piece
2CKA001751A3175	Rocker with legend Symbol "bell" for Switch/push button, Single rocker grey metallic - Platform 63	2520 KI-803	1	piece
2CKA001751A3185	Rocker for Switch/push button, Single rocker grey metallic - Platform 63	2520 LI-803	1	piece
2CKA001751A3195	Rocker Symbol "key" for Switch/push button, Single rocker grey metallic - Platform 63	2520 TR-803	1	piece
2CKA001724A4407	Cover plate Bore hole grey metallic - Platform 63	2533-803	1	piece
2CKA001710A4125	Cover plate with legend Symbol "0-1-2-3" for Level switch, Turn button grey metallic - Platform 63	2542 DR/01-803	1	piece
2CKA001710A4126	Cover plate with legend Symbol "1-2-3" for Level switch, Turn button grey metallic - Platform 63	2542 DR/02-803	1	piece
2CKA001724A4398	Cover plate XLR grey metallic - Platform 63	2553-803	1	piece
2CKA001753A0316	Cover plate Modular Jack 2 gang grey metallic - Platform 63	2561-02-803	1	piece
2CKA001753A0399	Cover plate Modular Jack 1 gang grey metallic - Platform 63	2561-803	1	piece
2CKA001751A3264	Rocker for Switch/push button Single rocker grey metallic - Platform 63	2570-10-803	1	piece
2CKA001751A3275	Rocker for Switch/push button Two-part rocker grey metallic	2570-20-803	1	piece
2CKA001751A3286	Rocker for Switch/push button Three-part rocker grey metallic - Platform 63	2570-30-803	1	piece
2CKA003116A0666	FI-Schukomat SCHUKO® socket insert Protective Contact (SCHUKO) 30 mA grey metallic - Platform 63	3120 EUCEB-803	1	piece
2CKA003117A0008	Buschmat RCD - Insert RCD 30 mA grey metallic - Platform 63	3151 UC-803	1	piece
2CKA006115A0489	6108/61-803-500 Coverplate f. CE	6108/61-803-500	1	piece
2CKA006155A0066	6109/03-803-500 Coverplate f. RTC	6109/03-803-500	1	piece
2CKA006132A0290	Horizontal 0 ... 180 ° Presence Detection grey metallic	6122/02-803-500	1	piece
2CKA006132A0283	Horizontal 0 ... 180 ° Presence Detection anthracite	6122/02-81-500	1	piece
2CKA006132A0284	Horizontal 0 ... 180 ° Presence Detection ivory white	6122/02-82-500	1	piece
2CKA006132A0285	Horizontal 0 ... 180 ° Presence Detection aluminium silver	6122/02-83-500	1	piece
2CKA006132A0263	Horizontal 0 ... 180 ° Presence Detection studio white	6122/02-84-500	1	piece
2CKA006132A0292	Horizontal 0 ... 180 ° Presence Detection studio white matt	6122/02-884-500	1	piece
2CKA006132A0293	Horizontal 0 ... 180 ° Presence Detection black matt	6122/02-885-500	1	piece
2CKA006132A0382	Horizontal 0 ... 180 ° Presence Detection grey metallic	6122/10-803-500	1	piece
2CKA006115A0212	6125/01-803-500 Control element 1g w. BAU	6125/01-803-500	1	piece
2CKA006115A0205	6125/01-81-500 Control element 1g w. BAU	6125/01-81-500	1	piece

2CKA006115A0206	6125/01-82-500 Control element 1g w. BAU	6125/01-82-500	1	piece
2CKA006115A0207	6125/01-83-500 Control element 1g w. BAU	6125/01-83-500	1	piece
2CKA006115A0183	6125/01-84-500 Control element 1g w. BAU	6125/01-84-500	1	piece
2CKA006115A0214	6125/01-884-500 Control element 1g w. BAU	6125/01-884-500	1	piece
2CKA006115A0215	6125/01-885-500 Control element 1g w. BAU	6125/01-885-500	1	piece
2CKA006115A0224	6125/02-803-500 Control element 1/2gang	6125/02-803-500	1	piece
2CKA006115A0216	6125/02-81-500 Control element 1/2gang	6125/02-81-500	1	piece
2CKA006115A0217	6125/02-82-500 Control element 1/2gang	6125/02-82-500	1	piece
2CKA006115A0218	6125/02-83-500 Control element 1/2gang	6125/02-83-500	1	piece
2CKA006115A0219	6125/02-84-500 Control element 1/2gang	6125/02-84-500	1	piece
2CKA006115A0226	6125/02-884-500 Control element 1/2gang	6125/02-884-500	1	piece
2CKA006115A0227	6125/02-885-500 Control element 1/2gang	6125/02-885-500	1	piece
2CKA006116A0202	6126/01-803-500 Control element 2g w. BAU	6126/01-803-500	1	piece
2CKA006116A0195	6126/01-81-500 Control element 2g w. BAU	6126/01-81-500	1	piece
2CKA006116A0196	6126/01-82-500 Control element 2g w. BAU	6126/01-82-500	1	piece
2CKA006116A0197	6126/01-83-500 Control element 2g w. BAU	6126/01-83-500	1	piece
2CKA006116A0174	6126/01-84-500 Control element 2g w. BAU	6126/01-84-500	1	piece
2CKA006116A0204	6126/01-884-500 Control element 2g w. BAU	6126/01-884-500	1	piece
2CKA006116A0205	6126/01-885-500 Control element 2g w. BAU	6126/01-885-500	1	piece
2CKA006116A0214	6126/02-803-500 Control element 2/4gang	6126/02-803-500	1	piece
2CKA006116A0206	6126/02-81-500 Control element 2/4gang	6126/02-81-500	1	piece
2CKA006116A0207	6126/02-82-500 Control element 2/4gang	6126/02-82-500	1	piece
2CKA006116A0208	6126/02-83-500 Control element 2/4gang	6126/02-83-500	1	piece
2CKA006116A0209	6126/02-84-500 Control element 2/4gang	6126/02-84-500	1	piece
2CKA006116A0216	6126/02-884-500 Control element 2/4gang	6126/02-884-500	1	piece
2CKA006116A0217	6126/02-885-500 Control element 2/4gang	6126/02-885-500	1	piece
2CKA006117A0228	6127/01-803-500 Control element 4g w. BAU	6127/01-803-500	1	piece
2CKA006117A0221	6127/01-81-500 Control element 4g w. BAU	6127/01-81-500	1	piece
2CKA006117A0222	6127/01-82-500 Control element 4g w. BAU	6127/01-82-500	1	piece
2CKA006117A0223	6127/01-83-500 Control element 4g w. BAU	6127/01-83-500	1	piece

2CKA006117A0200	6127/01-84-500 Control element 4g w. BAU	6127/01-84-500	1	piece
2CKA006117A0230	6127/01-884-500 Control element 4g w. BAU	6127/01-884-500	1	piece
2CKA006117A0231	6127/01-885-500 Control element 4g w. BAU	6127/01-885-500	1	piece
2CKA006117A0240	6127/02-803-500 Control element 4/8gang	6127/02-803-500	1	piece
2CKA006117A0232	6127/02-81-500 Control element 4/8gang	6127/02-81-500	1	piece
2CKA006117A0233	6127/02-82-500 Control element 4/8gang	6127/02-82-500	1	piece
2CKA006117A0234	6127/02-83-500 Control element 4/8gang	6127/02-83-500	1	piece
2CKA006117A0235	6127/02-84-500 Control element 4/8gang	6127/02-84-500	1	piece
2CKA006117A0242	6127/02-884-500 Control element 4/8gang	6127/02-884-500	1	piece
2CKA006117A0243	6127/02-885-500 Control element 4/8gang	6127/02-885-500	1	piece
2CKA006134A0336	6128/28-803-500 RTC Control element 2/4g	6128/28-803-500	1	piece
2CKA006134A0331	6128/28-81-500 RTC Control element 2/4g	6128/28-81-500	1	piece
2CKA006134A0332	6128/28-82-500 RTC Control element 2/4g	6128/28-82-500	1	piece
2CKA006134A0333	6128/28-83-500 RTC Control element 2/4g	6128/28-83-500	1	piece
2CKA006134A0334	6128/28-84-500 RTC Control element 2/4g	6128/28-84-500	1	piece
2CKA006134A0338	6128/28-884-500 RTC Control element 2/4g	6128/28-884-500	1	piece
2CKA006134A0339	6128/28-885-500 RTC Control element 2/4g	6128/28-885-500	1	piece
2CKA006135A0163	6129/01-803-500 Control element 3/6g w. IR	6129/01-803-500	1	piece
2CKA006135A0156	6129/01-81-500 Control element 3/6g w. IR	6129/01-81-500	1	piece
2CKA006135A0157	6129/01-82-500 Control element 3/6g w. IR	6129/01-82-500	1	piece
2CKA006135A0158	6129/01-83-500 Control element 3/6g w. IR	6129/01-83-500	1	piece
2CKA006135A0146	6129/01-84-500 Control element 3/6g w. IR	6129/01-84-500	1	piece
2CKA006135A0165	6129/01-884-500 Control element 3/6g w. IR	6129/01-884-500	1	piece
2CKA006135A0166	6129/01-885-500 Control element 3/6g w. IR	6129/01-885-500	1	piece
2CKA006430A0350	Control Element Symbol "arrows" for Venetian blind grey metallic - Platform 63	6430-803-102	1	piece
2CKA006430A0351	Cover plate with legend Symbols "play, up, down, ok" for Time switch Central cover plate grey metallic - Platform 63	6435-803	1	piece
2CKA006470A0006	Cover plate for Proximity switch One-part button grey metallic - Platform 63	6476-803	1	piece
2CKA006470A0003	Cover plate for Proximity switch One-part button ivory white - Platform 63	6476-82	1	piece
2CKA006470A0008	Cover plate for Proximity switch One-part button aluminium silver - Platform 63	6476-83	1	piece
2CKA006470A0011	Cover plate for Proximity switch One-part button black matt - Platform 63	6476-885	1	piece

2CKA006400A0060	Cover plate PowerDock 1 gang grey metallic - Platform 63	6477-803	1	piece
2CKA006599A2980	Cover plate for Dimmer Turn button with Neon lamp grey metallic - Platform 63	6540-803-102	1	piece
2CKA006599A2943	Control Element for Dimmer Two-part button with Neon lamp grey metallic - Platform 63	6545-803	1	piece
2CKA006710A0008	Plug-in unit switch studio white	6717-84-500	1	piece
2CKA006730A0032	Wall sensor 1 channel Wireless ivory white - Platform 63	6731-82-500	1	piece
2CKA006730A0035	Wall sensor 1 channel Wireless aluminium silver - Platform 63	6731-83-500	1	piece
2CKA006730A0038	Wall sensor 1 channel Wireless studio white - Platform 63	6731-84-500	1	piece
2CKA006730A0033	Wall sensor 2 channel Wireless ivory white - Platform 63	6732-82-500	1	piece
2CKA006730A0036	Wall sensor 2 channel Wireless aluminium silver - Platform 63	6732-83-500	1	piece
2CKA006730A0039	Wall sensor 2 channel Wireless studio white - Platform 63	6732-84-500	1	piece
2CKA006730A0034	Wall sensor 4 channel Wireless ivory white - Platform 63	6733-82-500	1	piece
2CKA006730A0037	Wall sensor 4 channel Wireless aluminium silver - Platform 63	6733-83-500	1	piece
2CKA006730A0040	Wall sensor 4 channel Wireless studio white - Platform 63	6733-84-500	1	piece
2CKA006730A0146	Rocker for Smart switch Single rocker grey metallic - Platform 63	6735 BT-803	1	piece
2CKA006730A0080	Wall sensor 1gang for ZigBee Light Link 1 channel Wireless ivory white - Platform 63	6735/01-82	1	piece
2CKA006730A0081	Wall sensor 1gang for ZigBee Light Link 1 channel Wireless aluminium silver - Platform 63	6735/01-83	1	piece
2CKA006730A0082	Wall sensor 1gang for ZigBee Light Link 1 channel Wireless studio white - Platform 63	6735/01-84	1	piece
2CKA006730A0119	Wall sensor 1gang for ZigBee Light Link 1 channel Wireless black matt - Platform 63	6735/01-885	1	piece
2CKA006730A0099	Control Element 1gang for Switch/dimmer Wireless grey metallic - Platform 63	6735-803	1	piece
2CKA006730A0069	Control Element 1gang for Switch/dimmer Wireless aluminium silver - Platform 63	6735-83	1	piece
2CKA006730A0070	Control Element 1gang for Switch/dimmer Wireless studio white - Platform 63	6735-84	1	piece
2CKA006730A0100	Control Element 1gang for Switch/dimmer Wireless studio white matt - Platform 63	6735-884	1	piece
2CKA006730A0101	Control Element 1gang for Switch/dimmer Wireless black matt - Platform 63	6735-885	1	piece
2CKA006730A0137	Rocker for Smart switch Two-part rocker grey metallic - Platform 63	6736 FoH-803	1	piece
2CKA006730A0121	Wall sensor 2gang 2 channel Wireless grey metallic - Platform 63	6736/01-803	1	piece
2CKA006730A0083	Wall sensor 2gang 2 channel Wireless anthracite - Platform 63	6736/01-81	1	piece
2CKA006730A0084	Wall sensor 2gang 2 channel Wireless ivory white - Platform 63	6736/01-82	1	piece
2CKA006730A0085	Wall sensor 2gang 2 channel Wireless aluminium silver - Platform 63	6736/01-83	1	piece
2CKA006730A0086	Wall sensor 2gang 2 channel Wireless studio white - Platform 63	6736/01-84	1	piece
2CKA006730A0125	Wall sensor 2gang 2 channel Wireless black matt - Platform 63	6736/01-885	1	piece
2CKA006730A0071	Control Element 2gang for Switch/dimmer Wireless anthracite - Platform 63	6736-81	1	piece

2CKA006730A0072	Control Element 2gang for Switch/dimmer Wireless ivory white - Platform 63	6736-82	1	piece
2CKA006730A0073	Control Element 2gang for Switch/dimmer Wireless aluminium silver - Platform 63	6736-83	1	piece
2CKA006730A0074	Control Element 2gang for Switch/dimmer Wireless studio white - Platform 63	6736-84	1	piece
2CKA006730A0106	Control Element 2gang for Switch/dimmer Wireless studio white matt - Platform 63	6736-884	1	piece
2CKA006730A0107	Control Element 2gang for Switch/dimmer Wireless black matt - Platform 63	6736-885	1	piece
2CKA006730A0127	Wall sensor 4gang for ZigBee Light Link 4 channel Wireless grey metallic - Platform 63	6737/01-803	1	piece
2CKA006730A0087	Wall sensor 4gang for ZigBee Light Link 4 channel Wireless anthracite - Platform 63	6737/01-81	1	piece
2CKA006730A0088	Wall sensor 4gang for ZigBee Light Link 4 channel Wireless ivory white - Platform 63	6737/01-82	1	piece
2CKA006730A0090	Wall sensor 4gang for ZigBee Light Link 4 channel Wireless studio white - Platform 63	6737/01-84	1	piece
2CKA006730A0075	Control Element 4gang for Switch/dimmer Wireless anthracite - Platform 63	6737-81	1	piece
2CKA006730A0078	Control Element 4gang for Switch/dimmer Wireless studio white - Platform 63	6737-84	1	piece
2CKA006730A0112	Control Element 4gang for Switch/dimmer Wireless studio white matt - Platform 63	6737-884	1	piece
2CKA006800A2325	Electronic Controls - Platform 63	6800-83-104	1	piece
2CKA006800A2327	Electronic Controls - Platform 63	6800-83-104M	1	piece
2CKA006800A2101	Electronic Controls - Platform 63	6800-84-104	1	piece
2CKA006800A2506	Electronic Controls black matt - Platform 63	6800-885-104	1	piece
2CKA006800A2836	Electronic Controls grey metallic - Platform 63	6815-803-101- 500	1	piece
2CKA006800A2830	Electronic Controls ivory white - Platform 63	6815-82-101- 500	1	piece
2CKA006800A2832	Electronic Controls aluminium silver - Platform 63	6815-83-101- 500	1	piece
2CKA006800A2841	Electronic Controls antique brass - Platform 63	6815-840-101- 500	1	piece
2CKA006800A2834	Electronic Controls studio white - Platform 63	6815-84-101- 500	1	piece
2CKA008200A0156	Multimedia Devices Radio receiver Wireless LAN studio white - future linear	8240-84-500	1	piece
2CKA008200A0115	Cover plate Loudspeaker grey metallic - Platform 63	8253-803	1	piece
2CKA008200A0230	Cover plate Multimedia 3 gang grey metallic - Platform 63	8256-803	1	piece
2CKA006200A0083	MSA-F-1.1.1-81-WL WL-Mov. detector/act. 1g	MSA-F-1.1.1-81- -WL	1	piece
2CKA006200A0084	MSA-F-1.1.1-82-WL WL-Mov. detector/act. 1g	MSA-F-1.1.1-82- -WL	1	piece
2CKA006200A0085	MSA-F-1.1.1-83-WL WL-Mov. detector/act. 1g	MSA-F-1.1.1-83- -WL	1	piece
2CKA006200A0086	MSA-F-1.1.1-84-WL WL-Mov. detector/act. 1g	MSA-F-1.1.1-84- -WL	1	piece
2CKA006200A0097	MSA-F-1.1.1-884-WL WL-Mov. detector/act. 1g	MSA-F-1.1.1- 884-WL	1	piece
2CKA006200A0098	MSA-F-1.1.1-885-WL WL-Mov. detector/act. 1g	MSA-F-1.1.1- 885-WL	1	piece
2CKA001710A3679	Cover plate BNC/TNC 2 gang aluminium silver - Platform 63	1750-83	1	piece
2CKA001723A0253	Cover plate Loudspeaker 2 gang anthracite - Platform 63	1751-81	1	piece

2CKA001723A0254	Cover plate Loudspeaker 2 gang aluminium silver - Platform 63	1751-83	1	piece
2CKA001723A0259	Cover plate Loudspeaker 2 gang black matt - Platform 63	1751-885	1	piece
2CKA001710A3629	Cover plate with legend Characters 1 ... 6 for Thermostat Turn button anthracite - Platform 63	1794-81	1	piece
2CKA001710A3668	Cover plate with legend Characters 1 ... 6 for Thermostat Turn button aluminium silver - Platform 63	1794-83	1	piece
2CKA001710A3884	Cover plate Various symbols for Thermostat Turn button studio white matt - Platform 63	1794-884	1	piece
2CKA001710A3907	Cover plate Various symbols for Thermostat Turn button black matt - Platform 63	1794-885	1	piece
2CKA001710A4015	Cover plate with legend Characters 1 ... 6 for Thermostat Turn button ivory white - Platform 63	1795 HK-82	1	piece
2CKA001710A4017	Cover plate Various symbols for Thermostat Turn button studio white - Platform 63	1795 HK-84	1	piece
2CKA006132A0246	6122/01-81 Watchdog 180 Standard FM	6122/01-81	1	piece
2CKA006132A0256	6122/01-815 Watchdog 180 Standard FM	6122/01-815	1	piece
2CKA006132A0272	6122/01-81-500 Watchdog 180 Standard FM	6122/01-81-500	1	piece
2CKA006132A0280	6122/01-815-500 Watchdog 180 Standard FM	6122/01-815-500	1	piece
2CKA006132A0248	6122/01-83 Watchdog 180 Standard FM	6122/01-83	1	piece
2CKA006132A0274	6122/01-83-500 Watchdog 180 Standard FM	6122/01-83-500	1	piece
2CKA006132A0249	6122/01-84 Watchdog 180 Standard FM	6122/01-84	1	piece
2CKA006132A0355	6122/01-840-500 WD sens KNX 180 standard	6122/01-840-500	1	piece
2CKA006132A0257	6122/01-884 Watchdog 180 Standard FM	6122/01-884	1	piece
2CKA006132A0281	6122/01-884-500 Watchdog 180 Standard FM	6122/01-884-500	1	piece
2CKA006132A0258	6122/01-885 Watchdog 180 Standard FM	6122/01-885	1	piece
2CKA006132A0269	6122/02-815 Watchdog 180 comfort FM	6122/02-815	1	piece
2CKA006132A0291	6122/02-815-500 Watchdog 180 comfort FM	6122/02-815-500	1	piece
2CKA006132A0371	6122/10-896 BW standard	6122/10-896	1	piece
2CKA006133A0144	6123-84 Interface RS 232, FM	6123-84	1	piece
2CKA006133A0164	6123-84-500 Interface RS 232, FM	6123-84-500	1	piece
2CKA006134A0253	6124/01-803 Room Thermostat	6124/01-803	1	piece
2CKA006134A0280	6124/01-803-500 Room Thermostat	6124/01-803-500	1	piece
2CKA006134A0244	6124/01-81 Room Thermostat	6124/01-81	1	piece
2CKA006134A0254	6124/01-815 Room Thermostat	6124/01-815	1	piece
2CKA006134A0295	6124/01-81-500 Room Thermostat	6124/01-81-500	1	piece
2CKA006134A0281	6124/01-815-500 Room Thermostat	6124/01-815-500	1	piece
2CKA006134A0245	6124/01-82 Room Thermostat	6124/01-82	1	piece
2CKA006134A0274	6124/01-82-500 Room Thermostat	6124/01-82-500	1	piece
2CKA006134A0246	6124/01-83 Room Thermostat	6124/01-83	1	piece
2CKA006134A0275	6124/01-83-500 Room Thermostat	6124/01-83-500	1	piece
2CKA006134A0247	6124/01-84 Room Thermostat	6124/01-84	1	piece
2CKA006134A0255	6124/01-884 Room Thermostat	6124/01-884	1	piece

2CKA006134A0282	6124/01-884-500 Room Thermostat	6124/01-884-500	1	piece
2CKA006134A0256	6124/01-885 Room Thermostat	6124/01-885	1	piece
2CKA006134A0283	6124/01-885-500 Room Thermostat	6124/01-885-500	1	piece
2CKA006134A0303	6124/01-896 Room Thermostat	6124/01-896	1	piece
2CKA006134A0304	6124/01-896-500 Room Thermostat	6124/01-896-500	1	piece
2CKA006134A0221	6124-83-101 Room Thermostat with Display	6124-83-101	1	piece
2CKA006134A0222	6124-84-101 Room Thermostat with Display	6124-84-101	1	piece
2CKA006134A0223	6124-84-500-101 Room Thermostat with Display	6124-84-500-101	1	piece
2CKA006134A0229	6124-866-101 Room Thermostat with Display	6124-866-101	1	piece
2CKA006134A0226	6124-87-101 Room Thermostat with Display	6124-87-101	1	piece
2CKA006115A0164	6125-81-101 Switch Sensor 1-fold, FM	6125-81-101	1	piece
2CKA006115A0165	6125-82-101 Switch Sensor 1-fold, FM	6125-82-101	1	piece
2CKA006115A0166	6125-83-101 Switch Sensor 1-fold, FM	6125-83-101	1	piece
2CKA006115A0167	6125-84-101 Switch Sensor 1-fold, FM	6125-84-101	1	piece
2CKA006115A0168	6125-85-101 Switch Sensor 1-fold, FM	6125-85-101	1	piece
2CKA006115A0178	6125-884-101 Switch Sensor 1-fold, FM	6125-884-101	1	piece
2CKA006115A0172	6125-89-101 Switch Sensor 1-fold, FM	6125-89-101	1	piece
2CKA006116A0154	6126-81-101 Switch Sensor 2-fold, FM	6126-81-101	1	piece
2CKA006116A0168	6126-885-101 Switch Sensor 2-fold, FM	6126-885-101	1	piece
2CKA006116A0162	6126-89-101 Switch Sensor 2-fold, FM	6126-89-101	1	piece
2CKA006117A0176	6127 MF-81-101 MF-Switch Sensor 4fold, FM	6127 MF-81-101	1	piece
2CKA006117A0177	6127 MF-82-101 MF-Switch Sensor 4fold, FM	6127 MF-82-101	1	piece
2CKA006117A0178	6127 MF-83-101 MF-Switch Sensor 4fold, FM	6127 MF-83-101	1	piece
2CKA006117A0192	6127 MF-885-101 MF-Switch Sensor 4fold, FM	6127 MF-885-101	1	piece
2CKA006117A0184	6127 MF-89-101 MF-Switch Sensor 4fold, FM	6127 MF-89-101	1	piece
2CKA006117A0248	6127/01-896 Control element 4g w. BAU	6127/01-896	1	piece
2CKA006117A0250	6127/02-896 Control element 4/8gang	6127/02-896	1	piece
2CKA006117A0188	6127-803-101 Switch Sensor 4-fold, FM	6127-803-101	1	piece
2CKA006117A0165	6127-81-101 Switch Sensor 4-fold, FM	6127-81-101	1	piece
2CKA006117A0166	6127-82-101 Switch Sensor 4-fold, FM	6127-82-101	1	piece
2CKA006117A0167	6127-83-101 Switch Sensor 4-fold, FM	6127-83-101	1	piece
2CKA006117A0173	6127-89-101 Switch Sensor 4-fold, FM	6127-89-101	1	piece
2CKA006134A0291	6128/01-803-500 RTC Control element 2/4g	6128/01-803-500	1	piece
2CKA006134A0257	6128/01-81 RTC Control element 2/4g	6128/01-81	1	piece
2CKA006134A0267	6128/01-815 RTC Control element 2/4g	6128/01-815	1	piece
2CKA006134A0284	6128/01-81-500 RTC Control element 2/4g	6128/01-81-500	1	piece
2CKA006134A0292	6128/01-815-500 RTC Control element 2/4g	6128/01-815-500	1	piece
2CKA006134A0258	6128/01-82 RTC Control element 2/4g	6128/01-82	1	piece
2CKA006134A0259	6128/01-83 RTC Control element 2/4g	6128/01-83	1	piece
2CKA006134A0286	6128/01-83-500 RTC Control element 2/4g	6128/01-83-500	1	piece
2CKA006134A0260	6128/01-84 RTC Control element 2/4g	6128/01-84	1	piece
2CKA006134A0268	6128/01-884 RTC Control element 2/4g	6128/01-884	1	piece
2CKA006134A0293	6128/01-884-500 RTC Control element 2/4g	6128/01-884-500	1	piece

2CKA006134A0269	6128/01-885 RTC Control element 2/4g	6128/01-885	1	piece
2CKA006134A0294	6128/01-885-500 RTC Control element 2/4g	6128/01-885-500	1	piece
2CKA006134A0305	6128/01-896 RTC Control element 2/4g	6128/01-896	1	piece
2CKA006134A0306	6128/01-896-500 RTC Control element 2/4g	6128/01-896-500	1	piece
2CKA006136A0170	6128/10-82-101 Timer w. Display/Switch Sensor	6128/10-82-101	1	piece
2CKA006134A0208	6128-81-101 RoomThermostat/Switch Sensor	6128-81-101	1	piece
2CKA006134A0209	6128-82-101 RoomThermostat/Switch Sensor	6128-82-101	1	piece
2CKA006134A0210	6128-83-101 RoomThermostat/Switch Sensor	6128-83-101	1	piece
2CKA006134A0212	6128-84-500-101 RoomThermostat/Switch Sensor	6128-84-500-101	1	piece
2CKA006134A0218	6128-866-101 RoomThermostat/Switch Sensor	6128-866-101	1	piece
2CKA006135A0152	6129/01-815 Control element 3/6g w. IR	6129/01-815	1	piece
2CKA006135A0164	6129/01-815-500 Control element 3/6g w. IR	6129/01-815-500	1	piece
2CKA006135A0169	6129/01-896 Control element 3/6g w. IR	6129/01-896	1	piece
2CKA006135A0130	6129-83-101 IR-Switch Sensor 3fold, FM	6129-83-101	1	piece
2CKA006135A0131	6129-84-101 IR-Switch Sensor 3fold, FM	6129-84-101	1	piece
2CKA006136A0205	6136/07-811-500 SmartTouch 7 -811	6136/07-811-500	1	piece
2CKA006136A0204	6136/07-825 SmartTouch 7 -825	6136/07-825	1	piece
2CKA006136A0206	6136/07-825-500 SmartTouch 7 -825	6136/07-825-500	1	piece
2CKA006136A0207	6136/27-811 Adapter frame -811	6136/27-811	1	piece
2CKA006136A0209	6136/27-811-500 Adapter frame -811	6136/27-811-500	1	piece
2CKA006136A0208	6136/27-825 Adapter frame -825	6136/27-825	1	piece
2CKA006136A0210	6136/27-825-500 Adapter frame -825	6136/27-825-500	1	piece
2CKA006220A0479	6215/1.1-896 Mov. detector/actuator 1g	6215/1.1-896	1	piece
2CKA006220A0478	6225/1.0-896 Movement detector	6225/1.0-896	1	piece
2CKA006220A0464	6230-10-896 rocker 1gang	6230-10-896	1	piece
2CKA006220A0469	6230-20-896 rocker 2gang	6230-20-896	1	piece
2CKA006220A0474	6234-22-896 rocker 2g, right, dimming	6234-22-896	1	piece
2CKA006470A0010	Cover plate for Proximity switch One-part button studio white matt - Platform 63	6476-884	1	piece
2CKA006730A0117	Wall sensor 1gang for ZigBee Light Link 1 channel Wireless grey metallic - Platform 63	6735/01-803	1	piece
2CKA006730A0079	Wall sensor 1gang for ZigBee Light Link 1 channel Wireless anthracite - Platform 63	6735/01-81	1	piece
2CKA006730A0118	Wall sensor 1gang for ZigBee Light Link 1 channel Wireless studio white matt - Platform 63	6735/01-884	1	piece
2CKA006730A0067	Control Element 1gang for Switch/dimmer Wireless anthracite - Platform 63	6735-81	1	piece
2CKA006730A0068	Control Element 1gang for Switch/dimmer Wireless ivory white - Platform 63	6735-82	1	piece
2CKA006730A0124	Wall sensor 2gang 2 channel Wireless studio white matt - Platform 63	6736/01-884	1	piece
2CKA006730A0105	Control Element 2gang for Switch/dimmer Wireless grey metallic - Platform 63	6736-803	1	piece
2CKA006730A0089	Wall sensor 4gang for ZigBee Light Link 4 channel Wireless aluminium silver - Platform 63	6737/01-83	1	piece
2CKA006730A0130	Wall sensor 4gang for ZigBee Light Link 4 channel Wireless studio white matt - Platform 63	6737/01-884	1	piece

2CKA006730A0131	Wall sensor 4gang for ZigBee Light Link 4 channel Wireless black matt - Platform 63	6737/01-885	1	piece
2CKA006730A0111	Control Element 4gang for Switch/dimmer Wireless grey metallic - Platform 63	6737-803	1	piece
2CKA006730A0076	Control Element 4gang for Switch/dimmer Wireless ivory white - Platform 63	6737-82	1	piece
2CKA006730A0077	Control Element 4gang for Switch/dimmer Wireless aluminium silver - Platform 63	6737-83	1	piece
2CKA006730A0113	Control Element 4gang for Switch/dimmer Wireless black matt - Platform 63	6737-885	1	piece
2CKA008300A0214	Cover plate, anthracite	83260-81	1	piece
2CKA008300A0226	Welcome, anthracite	83260-81-515	1	piece
2CKA008300A0215	Cover plate, aluminium silver	83260-83	1	piece
2CKA008300A0213	Cover plate, studio white	83260-84	1	piece
2CKA008300A0225	Welcome, studio white	83260-84-515	1	piece

Categories

Low Voltage Products and Systems → Building and Home Automation Solutions → free@home → User Operation

Low Voltage Products and Systems → Building and Home Automation Solutions → KNX → User Operation

Low Voltage Products and Systems → Wiring Accessories - Light Switch Ranges → Frames

